



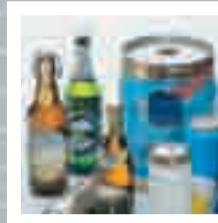

Precision Spray Nozzles for the Food and Beverage Industry

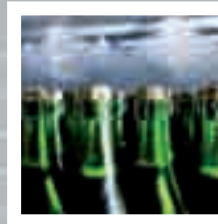

**Food and Beverage
Industry**

LECHLER – YOUR COMPETENT NOZZLE TECHNOLOGY PARTNER

The food and beverage industry is facing enormous challenges.

To offer consumers a more extensive product range improved processes are required.

At the same time, increasingly strict hygiene regulations and increasing rationalisation pressure are demanding highly efficient and safe processes.




Lechler develops and manufactures precision nozzles for various applications. For this we can fall back on all the experience of our 130-year history. The extensive knowledge of nozzles among our 670-strong workforce and a deep understanding of typical industry processes mean that we have been at the forefront of innovation in nozzle technology for many years.

Today, Lechler manufactures nozzles in Germany, England, Hungary, India, China and the USA. But despite this international alignment, at our heart we remain a Swabian family company with the typical passion for precision, innovation and the drive to always become that little bit better. Other subsidiary companies plus more than 40 representative offices round off our global sales network.



WIDE RANGE OF SERVICES FOR YOUR SUCCESS

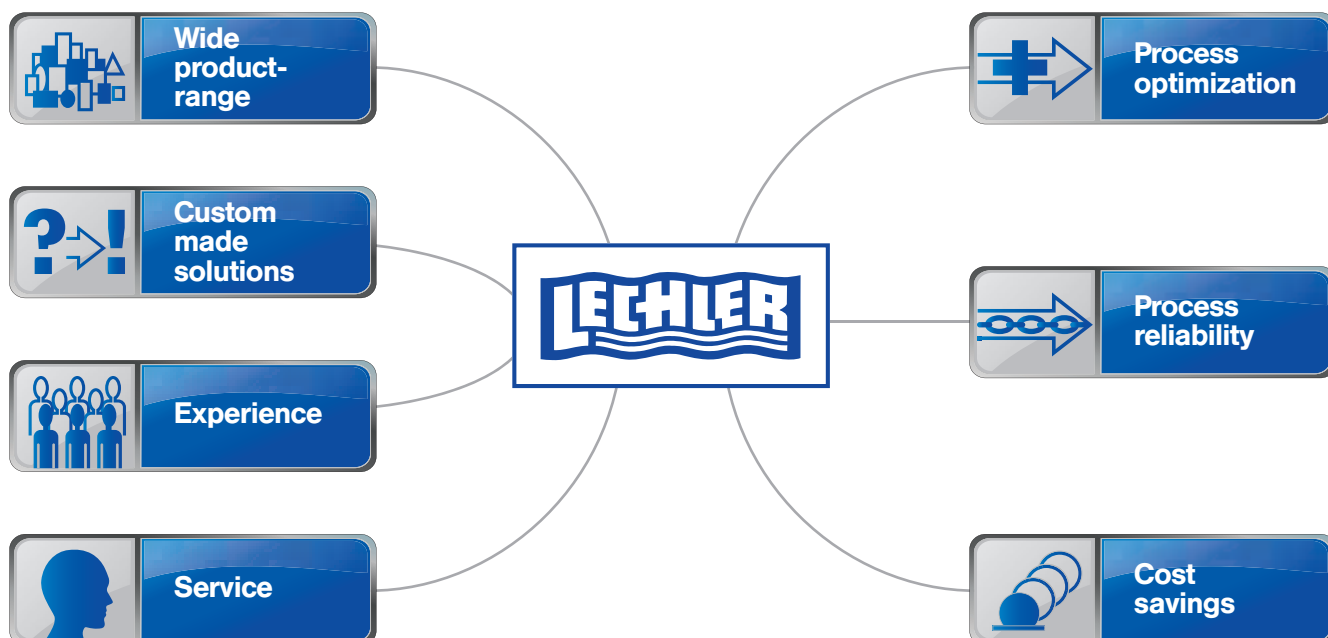

Nozzles for the food and beverage industry

In this brochure we have compiled for you an overview of our tried-and-tested nozzles for the food and beverage industry.

If you cannot find a suitable solution for your particular job, please contact us. Our applications engineers would be happy to develop the optimum solution for your needs.

We will support you with our solutions right along the process chain:



Desinfection and hygiene



Product provision



Product treatment



Filling and packing

Thanks to our detailed knowledge of the individual process steps, we are also able to offer you advice on an individual basis and work out custom solutions for you.

You will find more information, ideas and tools for using nozzle technology and spraying technology at www.lechler.de

Content	Page
Applications	4
Desinfection and hygiene	5
Product provision	6-7
Product treatment	8-9
Filling and packing	10-11
Planning criteria	12-17
Products	
Tank cleaning nozzles	18-29
Pneumatic atomizing nozzles	30-37
Hollow cone nozzles	38-40
Full cone nozzles	41-44
Flat fan nozzles	45-59
Solid stream nozzles	60
Air nozzles	61-63
Accessories	64-67
VarioSpray II	68
Other nozzles	69-70
Online Service	71

LECHLER NOZZLES ARE USED IN MANY FIELDS IN THE FOOD AND BEVERAGE INDUSTRY



Product provision



Product treatment



Filling and packing



Container cleaning / CIP

Belt lubrication

Belt cleaning

- Container washers
- Cleaning of fruit and vegetables
- Pretreatment of equipment
- Humidification
- Bottle and barrel cleaning
- Filter cleaning

- Product cleaning
- Release agent spray deposition
- Dosing
- Coating
- Degassing of liquids
- Concentrating
- Belt cooling
- Spray drying

- Filler cleaning
- Pasteurisation
- Sterilization
- Sorting cans and bottles
- Sorting with air
- Anti-scuffing
- PET bottle cooling



Disinfection and hygiene



- Disinfection
- Hand disinfection
- Boot disinfection
- Room disinfection
- Work sluices




LECHLER NOZZLES FOR DISINFECTION AND HYGIENE APPLICATIONS

Hand disinfection

Hygiene sluices are a fundamental element of production that is as free from germs as possible.


Hollow cone nozzles atomize disinfectants very finely and thereby ensure wide surface coverage and high disinfectant efficiency.

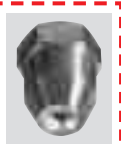

Work equipment disinfection

Short throughput times are needed when cleaning and disinfecting trolleys and containers for production.

Flat fan nozzles with a high spray force are the first choice for that job.

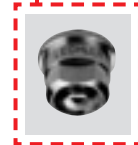

Sole and boot cleaning

These systems are mostly linked in combination with hand disinfectant systems. For cleaning the brushes and spraying with new disinfectant, we recommend our **series 632 and 686 flat fan or tongue-type nozzles**.






LECHLER NOZZLES FOR PRODUCT PROVISION APPLICATIONS

Cleaning of fruit and vegetables

Series 468 full cone nozzles with a 60° spray angle clean cut fruit and vegetables. Simple assembly via an eyelet clamp with bayonet quick release enables the quick exchange of nozzles.

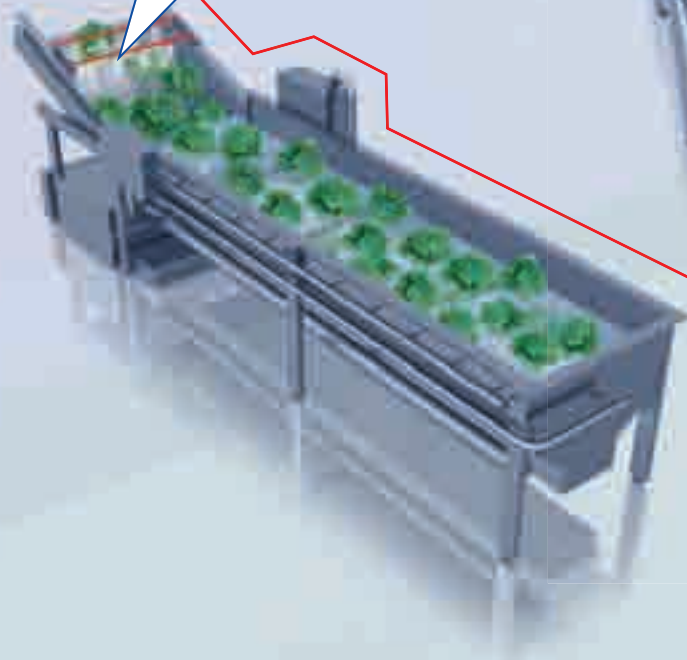

Bottle and barrel cleaning

Various types of nozzles are used in these systems. **Flat fan** and **tongue-type nozzles** for powerful cleaning of heavy dirt. **Full cone nozzles** for rinsing and **tank cleaning nozzles** for cleaning the insides of barrels.



Machine cleaning and tank cleaning

High impact tank cleaning machines and tank cleaning nozzles with controlled rotation speed were specially developed for tackling very heavy dirt. The example shows the **high impact tank cleaning machine 5TM** in a bottle washing machine.



Other nozzle applications in the product provision field

Humidification

Filter cleaning

Foam suppression

Animal carcass cleaning

Drum and plate washing systems e.g. for cleaning fish

Cleaning, lubricating cutting knives, belts and other equipment.

Sorting procedures with air

Blowing off surfaces with air

Pack washers

In most cases, cleaning is performed with a mixture of immersion baths and spraying stations. The preferred option for the latter is **flat fan nozzles**. **Tongue-type nozzles** produce a particularly powerful flat fan at low pressure.







LECHLER NOZZLES FOR PRODUCT TREATMENT APPLICATIONS


Cleaning containers

Optimum container cleaning requires targeted harmonization with the respective application. Lechler offers a wide range of rotating nozzles and will support you in finding the right arrangement.

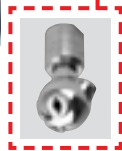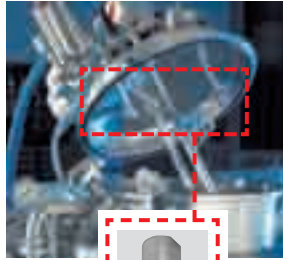


Sausage cooling

In the meat-processing industry, sausage products are cooled by means of sausage showers. **Full cone nozzles or cluster head nozzles** are frequently used for that.

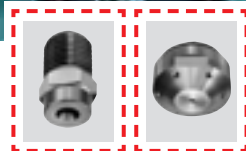


Can cleaning

Before the foodstuffs are transferred, the cans must be disinfected on both the outside and inside. **Flat fan nozzles and full cone nozzles** can be used for this.

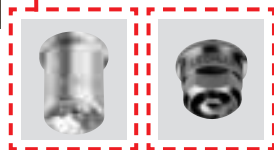



Coating with Vario Spray II

Coating or disinfecting operations are widespread in food processing. The **VarioSpray II nozzle valve system** with pulse width modulation impresses with its enormous flexibility and offers the possibility of spraying very small volumes of fluid with precision.

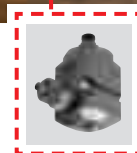

Belt cooling

With belt cooling, the product (e.g. rissoles) is transported on a belt. The underside of the belt is sprayed with water or a coolant. Due to the fine droplets, **hollow cone nozzles** are often used for this process.

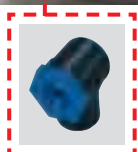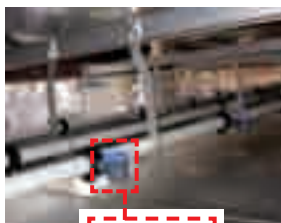

Other applications

Product cleaning

Dosing

Concentrating

Degassing of liquids

Release agent spray deposition

Spray drying

Blanching of vegetables


Sugar production

Tobacco processing



LECHLER NOZZLES FOR FILLING AND PACKING


Sterilisation

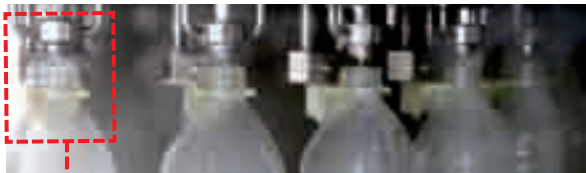

Disinfection is a central step in the production of food and beverage. The example shows **series 136 pneumatic atomizing nozzles** for the internal disinfection of PET bottles.



Filler cleaning

Filling machines are cleaned regularly via a permanently installed nozzle system. For this job, Lechler supplies various **rotating cleaning nozzles** and **hygienically designed nozzles** with FDA and EHEDG approval.

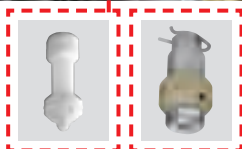


Belt lubrication

This term refers to spraying a soapy solution, known as the belt lubricant, onto the conveyor belt in order to reduce the friction coefficient. Special **series 652 xxx. 8H.03 flat fan nozzles** are used for this.

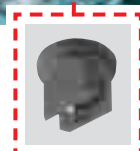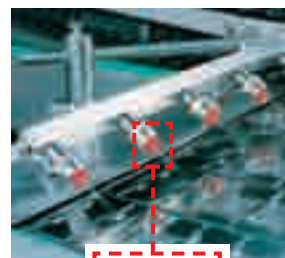

Pasteurisation

One of the final production stages is the targeted heating of the product in a pasteuriser. The heat is transferred by means of **full cone or hollow cone nozzles** that apply a dense water film onto the packaging.

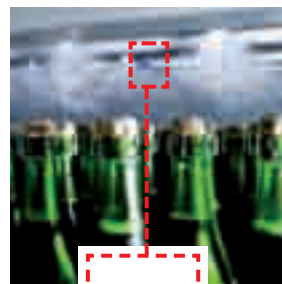

Other applications

Rinsing of bottles

Anti-scuffing

Cooling and moistening bread

Release agent application

Drying labels and bottles

Sorting cans and bottles

Sorting with air

PET bottle cooling

Air nozzles

There are numerous applications in which **Lechler air nozzles**, such as the **Whisperblast® series**, are preferred due to the low level of noise produced compared to the standard **air nozzles**.

In the example on the right, **Whisperblast® nozzles** are being used for drying the seal so that the subsequent marking is not smudged.



WHAT YOU SHOULD BEAR IN MIND WHEN PLANNING

① The fundamentals of cleaning technology

Sinner's circle

Cost reduction via efficient cleaning processes

② Mechanical cleaning with Lechler rotating cleaning nozzles

Cleaning effects

Foam cleaning with nozzles

③ Chemical cleaning

Foam cleaning with Nozzles

④ Impact

Impact surface and spray shape

Pressure

Flow rate

⑤ Spray angle and spraying behaviour

⑥ Hygienic design and surface quality

⑦ Fluid distribution

⑧ Droplet sizes

⑨ Temperature behaviour

⑩ Viscosity

⑪ Narrowest cross section

⑫ Connections

⑬ Materials and wear

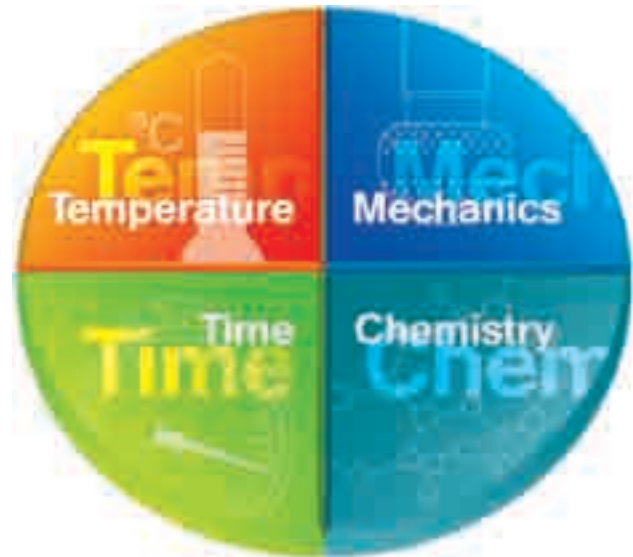


Figure 1: Sinner's circle with equal proportions of the temperature, time, chemistry and mechanical factors.

① The fundamentals of cleaning technology

Sinner's circle

The Sinner's circle illustrates the interplay between the four main factors for successful cleaning:

- Chemistry (choice of cleaning agent)
- Mechanical (removal of dirt via pressure or friction)
- Temperature (at which cleaning is performed)
- Time (duration of the total cleaning processes)

The proportion of the individual factors as a part of the entire cleaning can be varied, provided that the total is 100 per cent. This results in significant savings potentials.

As a result, the intensification of mechanical cleaning enables the consumption of cleaning agents or the duration of cleaning to be reduced. Consequently, the mechanical factor that takes up a greater part of the Sinner's circle, while the other factors can end up being reduced.

Cost reduction via efficient cleaning processes

This is precisely where our nozzles and rotating cleaning nozzles come into play, having been specially developed for delivering a high mechanical cleaning action. Their greater efficiency helps to permanently reduce on going costs for energy and cleaning agents, and also the duration of cleaning. Consequently a one-off investment in improved nozzle technology pays for itself after only a short time.

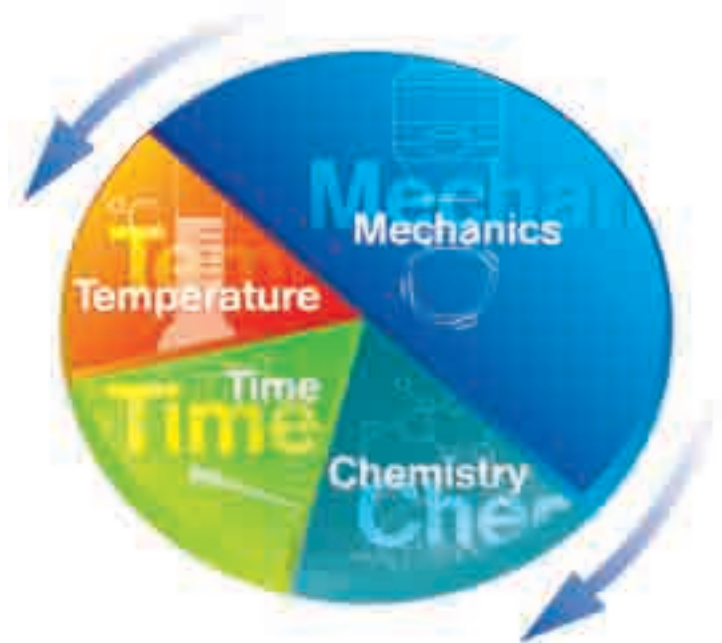


Figure 2: Lechler nozzles and rotating cleaning nozzles have high mechanical cleaning efficiency. This reduces the proportion of the other factors, as well as the resulting costs.

② Mechanical cleaning with Lechler rotating cleaning nozzles

Cleaning effects

Rotating cleaning nozzles deliver the greatest possible impact in order to clean the container wall. To achieve this, large droplets must strike at high speed. This enables even dirt to be removed that cannot dissolve in the cleaning fluid. Important influencing variables are the distance between the nozzle and wall, and the

operating pressure. Neither must be too great or the fluid will break down into smaller droplets (see Figs. 3 and 4) and the impact will be reduced.

Besides the impact, the fluid running down the container wall also has a significant cleaning effect. If the formed film is thick enough, the resulting shear stresses can remove light to moderate dirt. In that case, unsprayed patches are less of an issue than is the case during impact cleaning (see Fig. 5).

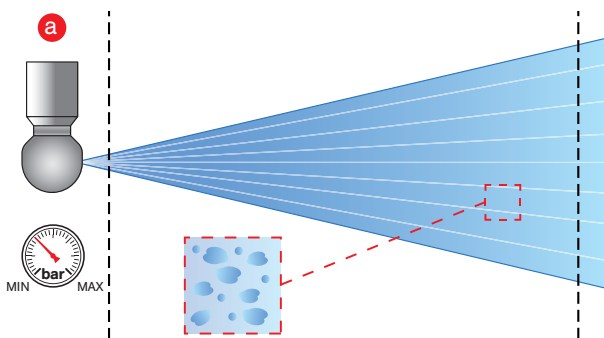


Figure 3: Rotating cleaning nozzles with recommended operating pressure

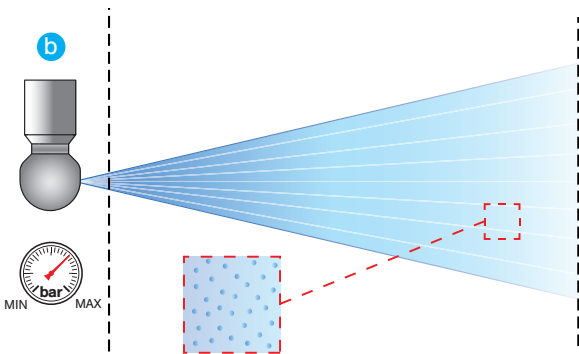


Figure 4: Rotating cleaning nozzles with operating pressure too high

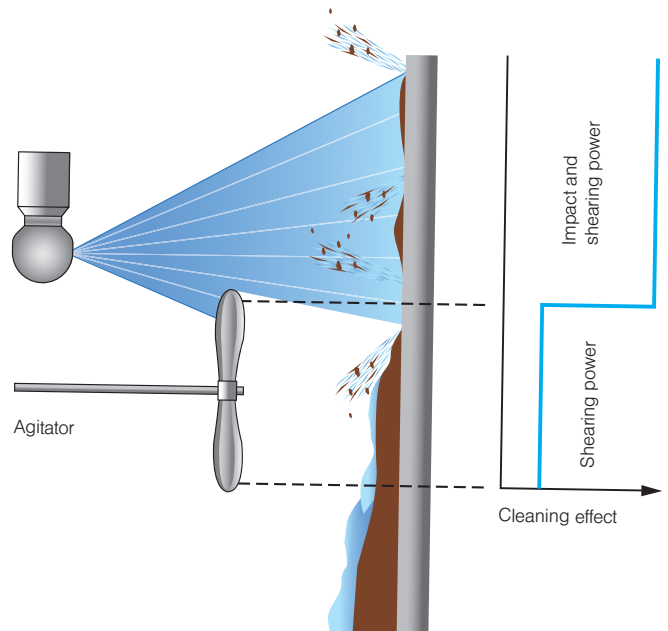
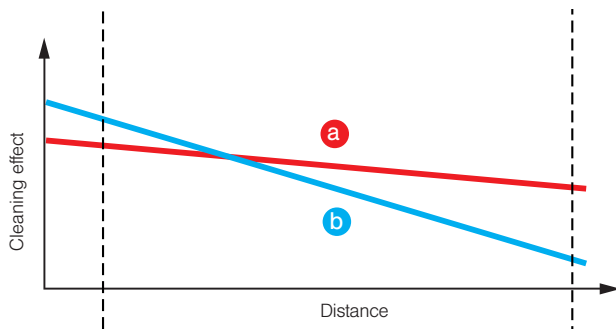


Figure 5: Cleaning mechanisms, impact and shearing power

Rotating cleaning nozzles or spray ball?

Due to their simple construction, spray balls are economical and are very insusceptible to faults.

Whereas rotating cleaning nozzles spray the entire container wall in a fan-like pattern,

the jets from spray balls strike only in concentrated spots. The remaining surface is simply cleaned by the shear stresses of the fluid running off (see Fig. 6). The fluid consumption is therefore significantly greater in comparison with rotating cleaning nozzles.

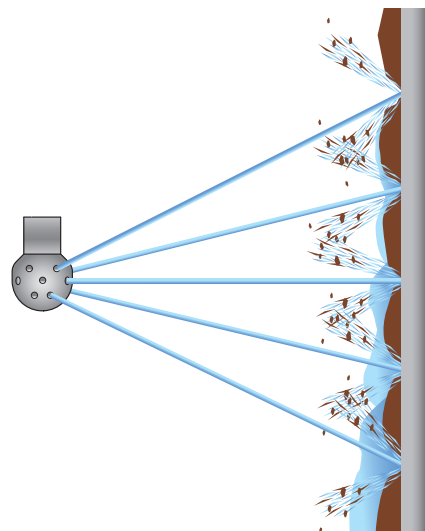


Figure 6: Cleaning with a spray ball

WHAT YOU SHOULD BEAR IN MIND WHEN PLANNING

③ Chemical cleaning

In the majority of all cleaning processes, the chemical cleaning effect involves fluids. Either the dirt is dissolved in the cleaning fluid or the adhesion between the dirt and the container wall is reduced. Higher temperatures can support the chemical cleaning effect.

Foam cleaning with nozzles

Foam cleaning is primarily based on the chemical cleaning effect. Since the foam sticks more firmly to the surface, it can be effective for longer than cleaning fluids that drip off quickly. The mechanical cleaning effect plays a correspondingly subordinate role. Here, the task of the nozzle is to distribute the foam homogeneously. Your choice therefore greatly depends on the type of foam.

④ Impact

The impact force of a liquid jet on a surface plays an important role in cleaning technology. The ratio of the impact force (F) to the impact surface (A) is referred to as the Impact (I).

$$I = \frac{\text{Impact force}}{\text{Impact surface}} = \frac{F}{A} \left[\frac{\text{N}}{\text{m}^2} \right]$$

It can be controlled via the following parameters:

Impact surface and spray shape

The impact surface is the area where the droplet strikes. The smaller the impact surface, the greater the impact values. Nozzles with high impact are, for example, solid stream nozzles and flat fan nozzles with a narrow spray angle.

Pressure

The impact increases linear with the connected pressure. If you double the pressure while maintaining the same flow rate, you also double the impact.

Flow rate

Increasing the flow rate by using a larger nozzle increases the impact, assuming that the other parameters (spray angle, pressure and medium) remain the same.

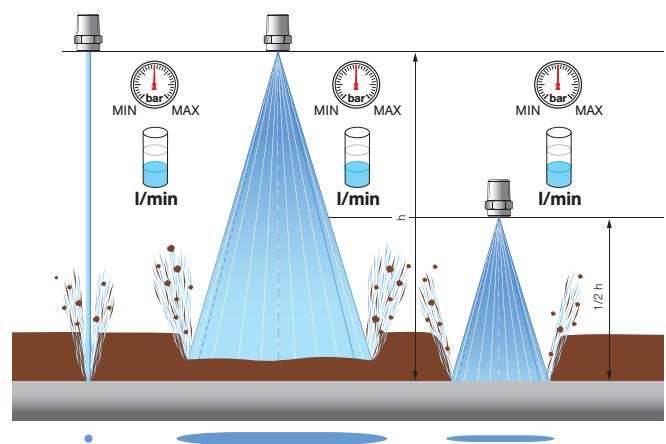


Figure 8: Comparison of the cleaning result of three nozzles with identical pressure and flow rate.

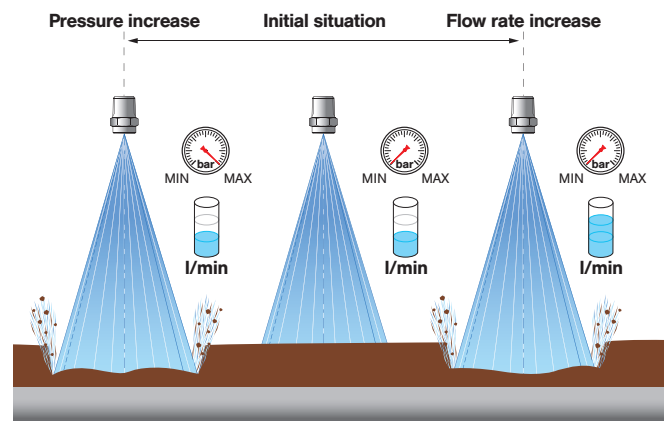


Figure 9: Comparison of the cleaning result of three nozzles with pressure or flow rate increase.



Figure 7: Foam cleaning with a Lechler PVDF MicroWhirly

⑤ Spray angle, spraying distance, spraying behaviour

Depending on the version and job, we supply single-fluid nozzles with differently stepped spray angles from 0° (solid stream nozzles) to 360° (tank-cleaning nozzles). The quoted spray angles apply close to the nozzle and in a still atmosphere. Gravity and air flows influence the spray pattern.

Depending on the version, single-fluid nozzles can spray the fluid as a hollow cone,

solid stream or flat fan. The solid stream nozzle does not spray, but rather produces a closed jet that hits at a concentrated point. The jet only begins to break up after some distance. Twin-fluid nozzles have a narrow spray angle of approximately 20° due to the high speed at which the compressible medium exits. However, as the distance from the nozzle increases, the spray pattern becomes increasingly less sharply delimited. Twin-fluid nozzles normally produce full cone or flat fan spray patterns.


⑥ Hygienic design and surface quality

Equipment and components must be designed accordingly so that they are easy to clean. Hygienic design prevents recesses and gaps that can harbour dirt, unfavourable flow areas (dead spaces) and sinks that hinder the run-off of fluids. At the same time, attention is paid to maintaining the least surface roughness possible, max. Ra 0.8 µm. Lechler supplies various nozzles and rotating cleaning nozzles that

have been designed with these requirements in mind and that have been certified by the EHEDG (European Hygienic Engineering & Design Group). The EHEDG took into account both design and cleanability. The "In-place Cleanability Test" is used to test whether a product can be cleaned with similar ease to a simple, straight section of pipe.




Height of the nozzle position

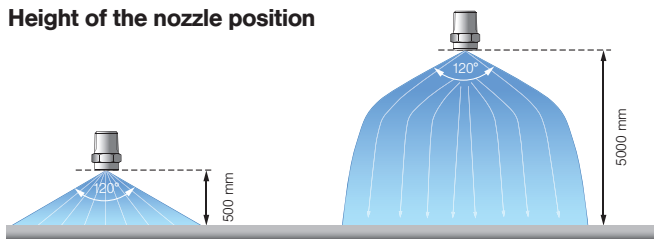

The diagram above illustrates how height influences the spray pattern

Changing the nozzle pressure

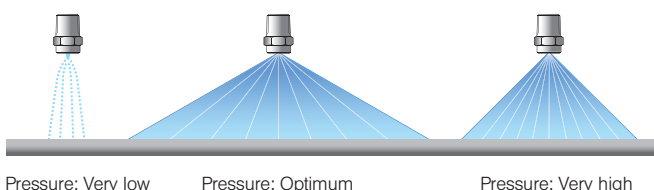

Spraying direction

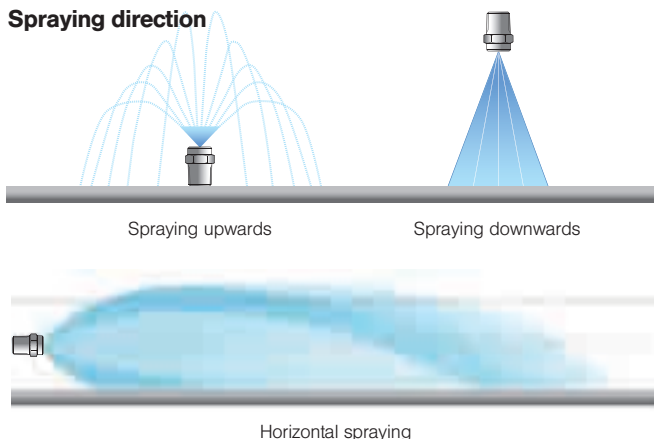


Figure 10: Spray patterns under different working conditions and installations

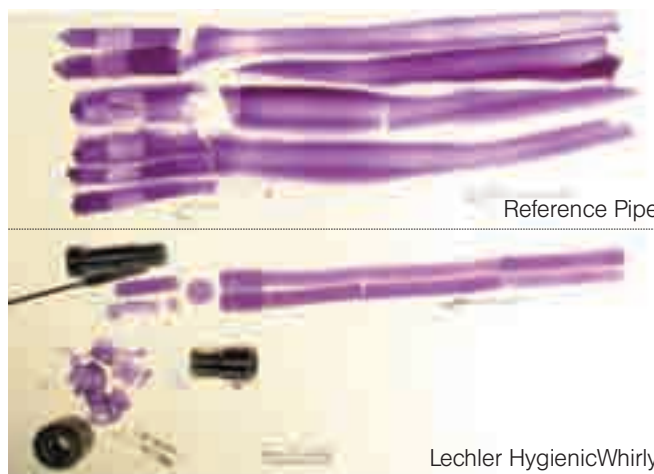


Figure 11: EHEDG In-place Cleanability Test of a Lechler HygienicWhirly. The result shows no differences between the reference pipe and the HygienicWhirly. In both cases the breeding ground is purple, indicating no germ formation



For many Lechler rotating cleaning nozzles we only use materials that comply with the regulations of the **FDA** (Food and Drug Administration).



The series 573/583 rotating cleaning nozzles and the series 527/591 spray balls also meet the strict hygiene requirements in accordance with **3-A**.

WHAT YOU SHOULD BEAR IN MIND WHEN PLANNING

⑦ Liquid distribution

An even liquid distribution is crucial to processes such as coating. This requires several nozzles to be arranged next to each other. This is because whereas a single nozzle would produce a parabolic liquid distribution, several nozzles arranged next to each other allows an almost even distribution via overlapping.

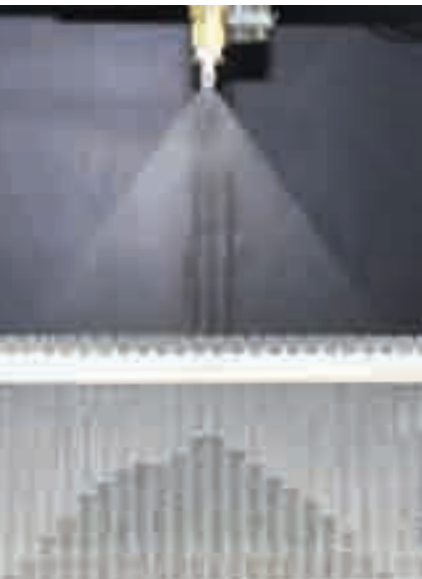


Figure 12: Liquid distribution measurement

Measuring the distribution

The liquid distribution in a plane can be determined with the aid of a combination of Plexiglas cylinders. The filling level of the individual cylinders is determined fully automatically. This measuring process can also record the liquid distribution of a nozzle over a moving measuring plane. This enables conveyor belt spraying to be simulated, for example.

⑧ Droplet sizes

Twin-fluid nozzles can produce very fine to extremely fine droplets. The size depends mainly on the flow rate ratio of the compressible medium used (m^3/h) to the atomized fluid (l/min): The greater the ratio, the finer the atomization. In the case of single-fluid nozzles however, the decisive factors are pressure, nozzle type and flow rate across the droplet spectrum. Increasing pressure results in finer atomization, but mostly only up to a certain level.



Figure 13: Droplet size measurement

Hollow cone nozzles produce very fine to fine droplets at the same pressure and flow rate. Full cone nozzles produce slightly coarser droplet spectrums, and finally flat fan nozzles have the coarsest droplet spectrum.

The following generally applies: Within a series and at a given pressure, nozzles with a lower flow rate produce finer droplet spectrums than nozzles with a higher flow rate.

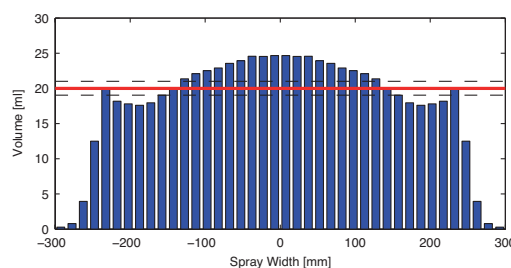


Figure 14: Liquid distribution of a Lechler high-pressure flat fan nozzle

⑨ Temperature behaviour of nozzle materials

Applications with temperatures up to 140°C are very common. These include for example most cleaning applications and sterilisation processes. Applications with higher temperatures are rare, and applications at very low temperatures are even rarer. The general temperature information from material data sheets must always be scrutinised for every single case of nozzle use. Pressure, mechanical stress type, chemistry and time are decisive factors for the suitability of a nozzle material at increased temperatures. Chemical processes can be more aggressive at high temperatures.

A material may be able to withstand them if this temperature occurs for a very short period only. In all materials, high temperatures result in reduced strength values. The mechanical stress type must therefore also be taken into account in high-pressure applications in particular. In addition, vibrations in the system can cause premature failure.

Chemistry (accelerated by high temperatures)

Pressure and mechanical stress (e.g. vibrations)

Temperature behaviour of nozzle materials

Time (permanently high temperatures)

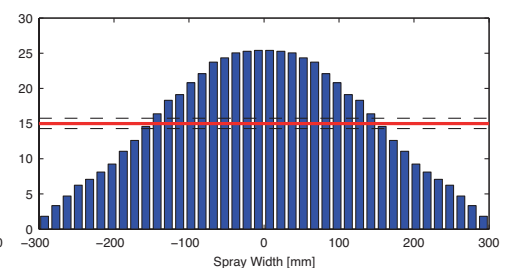


Figure 15: Liquid distribution of a Lechler standard flat fan nozzle

⑩ Viscosity

Increasing viscosity of the fluid can reduce the flow rate, changes the spray pattern (narrower spraying angle) and allows the droplet spectrum to become coarser.

Depending on the fluid properties, it is possible to counteract this to a certain extent by means of higher pressure. For very viscous substances, it is recommended to use twin-fluid nozzles in most cases. It can also be helpful to take account of the fluid's rheology.



Figure 16: Atomization of gelatine with a Lechler ViscoMist twin-fluid nozzle

⑪ Narrowest cross section

The risk of a nozzle blocking depends greatly on its narrowest cross section ($\varnothing E$). Experience has shown that for smooth operation, the maximum particle size in the fluid should not exceed one third of the narrowest cross section.

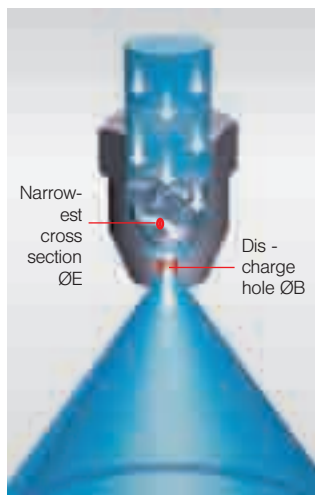


Figure 17: Narrowest free cross section

Hollow cone and full cone nozzles with axial flow have an internal swirl. Hollow cone and full cone nozzles with in-flow at the side (tangential or eccentric design) do not need a swirl and are therefore much less prone to blockages. In the field of flat fan nozzles, our tongue-type nozzles represent a special design that is less susceptible to blockages.

⑫ Connections

Nozzles are mainly constructed with the thread standards ISO 228, DIN 2999 (EN 10226-1) and NPT. A distinction is made here between sealing and non-sealing threads. In the case of non-sealing threads, Teflon® strip or a thread paste is used to provide the seal. Not all nozzles can be connected with a thread. For these we supply flange solutions conforming to the standards DIN 2527, EN 1092-1 and ASME B 16.5. Aseptic clamp connections (Tri-Clamp connections) conforming to the standard DIN 11864-3 are also possible. Whether a connection other than the standard connection is feasible for a nozzle must be decided on an individual case basis.

⑬ Materials and wear

Nozzle wear depends greatly on the conditions of use and on the nozzle material. Normally, the nozzle's fluid discharge opening wears as a result of material abrasion. The following conditions of use can speed up wear:

- Solids in the fluid and also hard particles
- Operating the nozzle above the recommended pressure range
- Using chemically aggressive substances

The nozzle body can also wear from the outside if the nozzle is used in a harmful environment (corrosive gases, radiation, temperature, rebound water with particles).

Nozzle wear

As wear increases, the spray pattern quality becomes increasingly worse. In most cases, this can be seen very easily with the naked eye. At the same time, a change occurs in the spraying parameters, for example an increased flow rate. The cause of this is damage to the nozzle opening cross section due to material removal. Wear leads to a worse production result and higher costs. Fig. 18 shows an example of a heavily worn spray ball. For these



Figure 18: Chemical corrosion of a spray ball

reasons, regular maintenance intervals and nozzle replacement are particularly important for achieving a high degree of process capability.

Material selection

Particularly noticeable manifestations of wear occur when fluids with a high solid content are atomized. Such particle-laden fluids cause significant wear if the particles have a greater hardness than the nozzle material (Fig. 19). This can be remedied by selecting a different material. The table below of the various materials and their average Vickers hardness is a means of approximate guidance.

As always: Contact us and we will find the optimum solution for your application.




Figure 19: Wear of a full cone nozzle

Nozzle material	Vickers hardness (HV)
Aluminium	~ 80
Brass	80 – 150
Titanium (Grade 1 bis 4)	125 – 210
Hastelloy®	200 – 250
Stainless steel	220 – 270
Stainless steel (hardened)	390 – 690
Carbide	1000 – 2300
Ceramic	1500 – 2700
Sapphire / ruby	~ 2300



Rotating cleaning nozzle »PrecisionWhirly«

Series 500.234

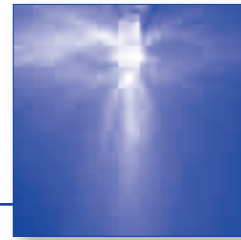

FDA -conform

- Unique extremely small nozzle design for narrow spacing
- Qualified for high temperature
- Self rotating
- Rotating solid jets
- Completely made of stainless steel

Applications:

Cleaning of

- Plant and equipment
- Kegs, barrels, bottles
- Machines

Max. tank diameter:

1.0 m

Operating pressure:

1.0 - 2.0 bar

Max. temperature:

200 °C

Installation:

Operation in every direction is possible

Material:


Stainless steel AISI 316L

Bearing:

Kolsterised slide bearing

Filtration:

Line strainer with a mesh size of 0.3 mm/50 mesh

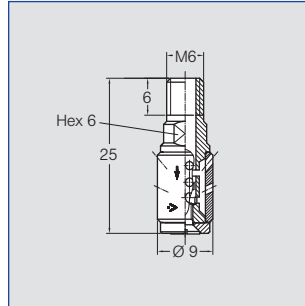

Spray angle 	Ordering number	E Ø [mm]	Con-nection	Ṽ [l/min]				Height [mm]	Diameter [mm]
				p [bar] (p _{max} = 5 bar)					
				1	2	3	at 40 psi [US gal./min]		
300° 	500.234.G9.00	1.8	M6	5.7	8.0	9.8	2.5	25	9

E = Narrowest free cross-section

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.



Rotating cleaning nozzle »MicroWhirly«

Series 566

FDA-conform



- Very compact design
- Self rotating
- Effective flat jet nozzles

Applications:

Cleaning of

- Plant and equipment
 - Kegs
 - Machines
- e.g. Cleaning of filling machines

Max. tank diameter:

1.0 - 1.5 m

Operating pressure:

1.0 - 2.0 bar

Max. temperature:

130 °C

Installation:

Operation in every direction is possible

Material:




Stainless steel AISI 316L and PEEK

Bearing:

Slide bearing made of PEEK

Filtration:

Line strainer with a mesh size of 0.3 mm/50 mesh

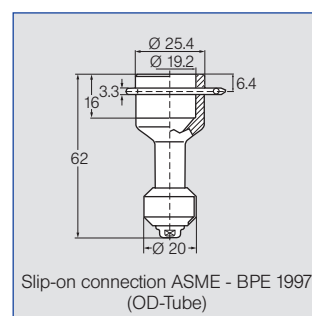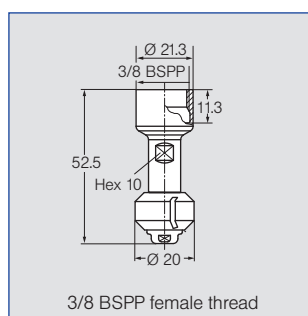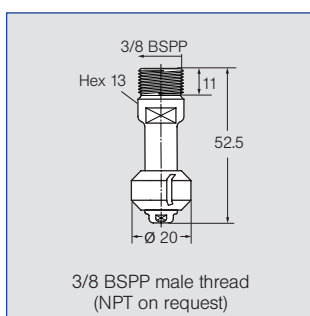

Spray angle 	Ordering number				E Ø [mm]	V̇ [l/min]			
	Type	Connection				p [bar] (p _{max} = 5 bar)			
		3/8 BSPP* male	3/8 BSPP* female	3/4" Slip-on		1	2	3	at 40 psi [US gal./min]
180° 	566.873.1Y 566.933.1Y	AE AE	AF AF	TF TF	2.4 2.4	12 15	15 21	18 26	5 7
180° 	566.874.1Y 566.934.1Y	AE AE	AF AF	TF TF	2.4 2.4	12 15	15 21	18 26	5 7
360° 	566.879.1Y 566.939.1Y	AE AE	AF AF	TF TF	2.4 2.4	12 15	15 21	18 26	5 7

E = Narrowest free cross-section · * NPT on request · Weld-on version on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.

Slip-on versions: - R-clip made of stainless steel AISI 316 L is included (Ordering number: 095.022.1Y.50.94.E)
- Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.

**Also available
with ATEX-approval**

Example of ordering:	Type 566.873.1Y	+ Connection + AE	= Ordering no. = 566.873.1Y.AE
-----------------------------	---------------------------	-----------------------------	--



Rotating cleaning nozzle »MicroWhirly«

Series 500.191



FDA-conform


- Very inexpensive
- Self rotating
- Effective flat jet nozzles

Applications:

Cleaning of

- Plant and equipment
- Tanks
- Machines

e.g. Cleaning of filling machines, keg cleaning

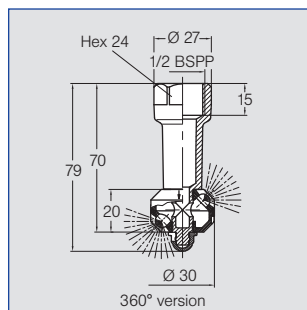

Max. tank diameter:

1.0 - 1.5 m

Operating pressure:

1.0 - 2.0 bar

Max. temperature:

90 °C

Installation:

Operation in every direction is possible

Material:

PVDF

Bearing:

Slide bearing made of PVDF


Filtration:

Line strainer with a mesh size of 0.3 mm/50 mesh

Spray angle 	Ordering number Type	E Ø [mm]	Con- nection BSPP female	V̇ [l/min]			
				p [bar] (p _{max} = 5 bar)			
180° 	500.191.5E.02	2.2	1/2"	9	13	16	4
180° 	500.191.5E.01	2.2	1/2"	9	13	16	4
360° 	500.191.5E.00	2.2	1/2"	14	20	24	6



Compact version

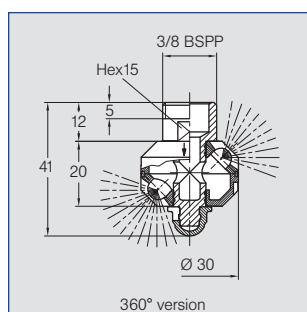

Spray angle 	Ordering number Type	E Ø [mm]	Con- nection BSPP male	V̇ [l/min]			
				p [bar] (p _{max} = 5 bar)			
180° 	500.191.5E.21	2.2	3/8"	9	13	16	4
360° 	500.191.5E.22	2.2	3/8"	14	20	24	6

E = Narrowest free cross-section


Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.



Rotating cleaning nozzle »HygienicWhirly«

Series 594 / 595

FDA-conform

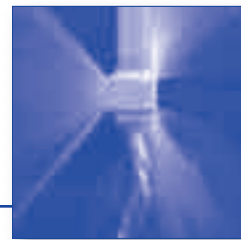

Series 594 / 595

- Cleaning with foam at low pressure is possible
- Self rotating
- Effective flat jet nozzles

Applications:

Cleaning of
■ Plant and equipment
■ Tanks
■ Machines
e.g. Cleaning of cold aseptic filling machines

Max. tank diameter:

1.5 m
Type 595.139 up to 2.5 m

Operating pressure:

0.5 - 3.0 bar

Max. temperature:

100 °C, short-term up to 140 °C

Installation:

Operation in every direction is possible

Material:

PEEK and stainless steel
AISI 316 L, EHEDG version:
O-ring made of EPDM




Bearing:

Slide bearing made of PEEK



Filtration:

Line strainer with a mesh size of 0.3 mm/50 mesh

EHEDG version

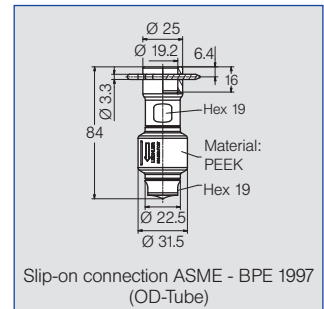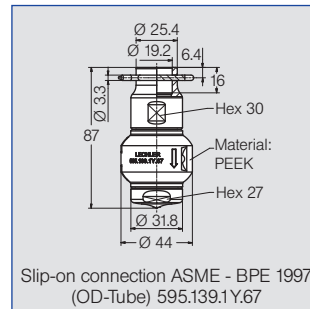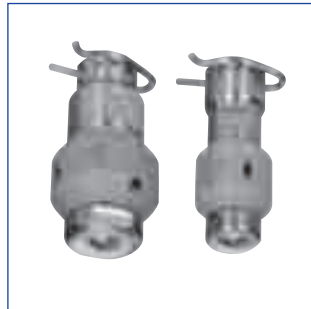

Standard version

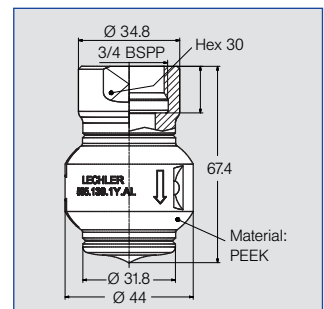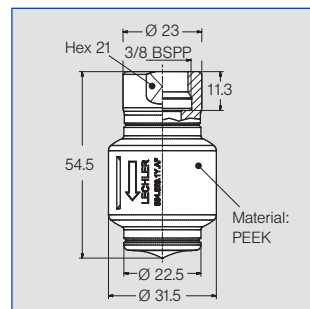


Spray angle 	Ordering number				E Ø [mm]	V̇ [l/min]				
	Type	Connection				p [bar] (p _{max} = 5 bar)				
		3/8 BSPP* female	3/4 BSPP* female	EHEDG version		0.5	1	2	3	at 40 psi [US gal./ min]
360° 	594.829.1Y.XX	AF	-	67	1.7	6	8	11	14	3
	594.879.1Y.XX	AF	-	67	2.5	8	11	15	18	5
	595.009.1Y.XX	AF	-	67	4.0	16	22	32	39	10
	595.049.1Y.XX	AF	-	67	4.2	20	28	40	49	12
	595.139.1Y.XX	-	AL	67	5.0	34	47	67	82	21

Slip-on versions: R-clip made of stainless steel AISI 316 L is included (Ordering number: 095.022.1Y.50.94.E).

Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.

Rotating lance

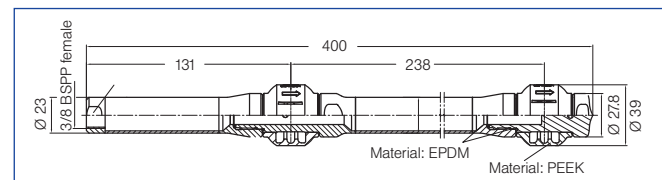

Spray angle 	Ordering number Type	E Ø [mm]	Con- nection	V̇ [l/min]				
				p [bar] (p _{max} = 5 bar)				
				0.5	1	2	3	at 40 psi [US gal./min]
360° 	500.384.1Y.02	1.5	3/8**	16	22	30	36	10


E = Narrowest free cross-section

*NPT on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller drop-lets. This might have adverse effects on the cleaning result.



Rotating cleaning nozzle »MicroSpinner« / »MiniSpinner« Series 5MC / 5MI

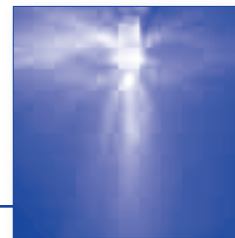

FDA-conform

- Inexpensive
- Self rotating
- Efficient slot design

Applications:

Cleaning of

- Plant and equipment
- Tanks
- Machines

Max. tank diameter:

5MC: 1.3 m

5MI: 3.0 m

Operating pressure:

1.0 - 2.5 bar

Max. temperature:

140 °C

Installation:

Operation in every direction is possible

Material:

Stainless steel AISI 316L
and stainless steel 440C



Bearing:

Double ball bearing made
of stainless steel

Filtration:

Line strainer with a mesh size
of 0.1 mm/170 mesh



Rotating cleaning nozzle »MicroSpinner« Series 5MC

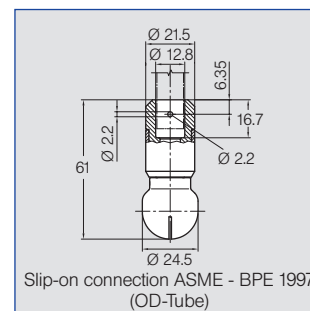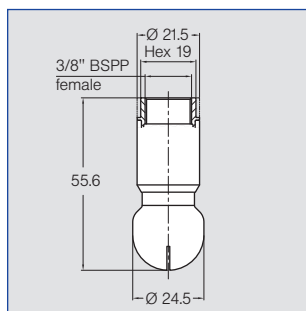

Spray angle	Ordering number			E Ø [mm]	V̇ [l/min]			
	Type	Connection			p [bar] (p _{max} = 5 bar)			
		3/8" BSPP*	1/2" Slip-on		1	2	3	at 40 psi [US gal./min]
60° 	5MC.042.1Y	AF	TF05	3.0	28	40	49	12
180° 	5MC.004.1Y	AF	TF05	0.8	22	32	39	10
360° 	5MC.049.1Y	AF	TF05	0.9	28	39	48	12

* NPT on request

Rotating cleaning nozzle »MiniSpinner« Series 5MI

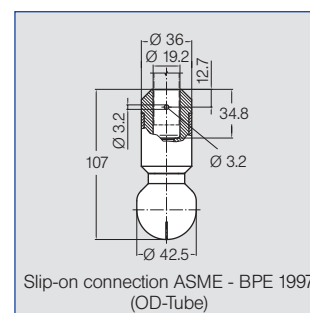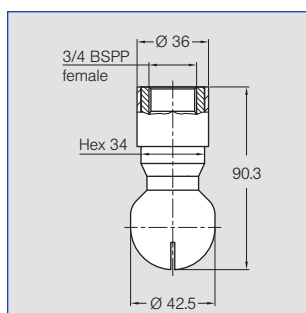

Spray angle 	Ordering number				E Ø [mm]	V̇ [l/min]			
	Type	Connection				p [bar] (p _{max} = 5 bar)			
		1/2 BSPP*	3/4 BSPP*	3/4" Slip-on		1	2	3	at 40 psi [US gal./min]
60° 	5MI.162.1Y	AH	-	TF07	2.6	45	63	77	20
180° 	5MI.114.1Y	-	AL	TF07	1.0	47	67	82	21
360° 	5MI.054.1Y	-	AL	TF07	0.5	21	30	37	9
	5MI.074.1Y	-	AL	TF07	0.6	35	49	60	15
	5MI.014.1Y	-	AL	TF07	0.9	49	69	85	21
	5MI.209.1Y	-	AL	TF07	1.5	71	100	122	31

* NPT on request · More slip-on sizes on request · Weld-on versions on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.

Slip-on versions: R-clip made of stainless steel AISI 316 L is included (Ordering number: 095.022.1Y:50.60 (5MI)


095.013.1E:05.59 (5MC)). Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.



Rotating cleaning nozzle »Whirly«

Series 569

FDA-conform

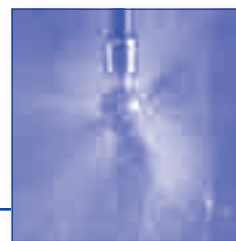

- Self rotating
- Powerfull flat jets

Applications:

- Cleaning of
- Plant and equipment
- Tanks
- Machines

Max. tank diameter:

Rinsing: 5.0 m

Cleaning: 3.0 m

Operating pressure:

1.0 - 2.5 bar

Max. temperature:

140 °C

Installation:

Operation in every direction is possible; when installed horizontally rotation starts at 2 bar

Material:




Stainless steel AISI 316L,
PEEK and Rulon 641

Bearing:

Double ball bearing made of stainless steel

Filtration:

Line strainer with a mesh size of 0.1 mm/170 mesh

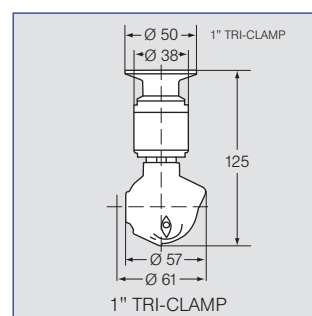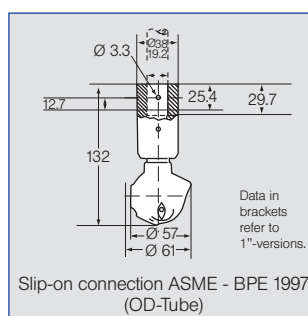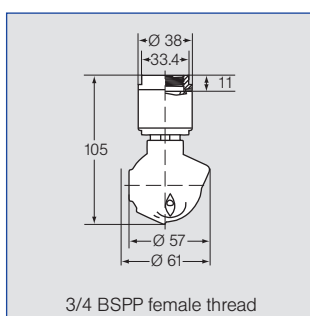

Spray angle 	Ordering number					E Ø [mm]	ṽ [l/min]			
	Type	Connection					p [bar] (p _{max} = 6 bar)			
		3/4 BSPP* female	3/4" Slip-on	1" Slip-on	1" Tri- Clamp					at 40 psi [US gal./ min]
	569.055.1Y	AL	TF07	TF10	10	3.6	36	48	62	15
	569.135.1Y	AL	TF07	TF10	10	4.8	52	71	87	22
	569.195.1Y	AL	TF07	TF10	10	5.6	69	97	119	30
	569.056.1Y	AL	TF07	TF10	10	3.6	36	48	62	15
	569.106.1Y	AL	TF07	TF10	10	4.8	41	58	71	18
	569.196.1Y	AL	TF07	TF10	10	5.6	69	97	119	30
	569.059.1Y	AL	TF07	TF10	10	3.2	36	48	62	15
	569.139.1Y	AL	TF07	TF10	10	3.6	52	71	87	22
	569.199.1Y	AL	TF07	TF10	10	4.8	69	97	119	30
	569.279.1Y	AL	TF07	TF10	10	7.1	103	145	178	45

E = Narrowest free cross-section · * NPT on request · Weld-on versions on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.

Slip-on versions: - R-clip made of stainless steel AISI 316 L is included (Ordering number: 095.022.1Y.50.60.E)
- Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.

**Also available
with ATEX-approval**

Example of ordering:	Type	+ Connection	= Ordering no.
	569.103.1Y.	+ AL	= 569.103.1Y.AL



Pop-up rotating cleaning nozzles

Series 500.382 / 500.453



FDA-conform

- For installation in the tank wall
- Cleaning with foam is possible
- Operation at low pressure is possible
- Self rotating
- Effective flat jet nozzles

Applications:

Cleaning of

- Plant and equipment
 - Tanks
 - Machines
- e.g. beverage, food, chemical and pharmaceutical industry

Max. tank diameter:

1.5 m
Typ 500.453 up to 2.5 m

Operating pressure:

1.5 - 2.0 bar, opening
pressure approx. 0.8 bar

Max. temperature:

140 °C

Installation:

Operation in every direction
is possible

Material:



Stainless steel AISI 316 L,
spring made of stainless steel
AISI 301, PEEK, O-ring made
of FPM (500.453.1Y.XX),
EPDM (500.382.1E.XX)

Bearing:

Slide bearing made of PEEK




Filtration:

Line strainer with a mesh size
of 0.3 mm/50 mesh

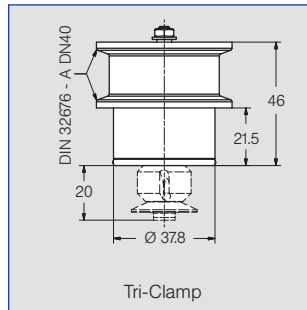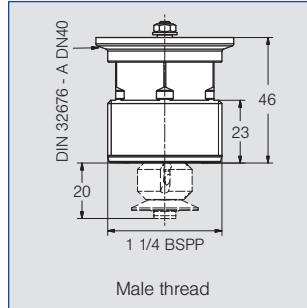


Series 500.382

E Ø [mm]	Flow rate $\dot{V}$ [l/min]			at 40 psi [US gal./min]
	1	2	3	
1.1	7.6	10.8	13.2	3.4

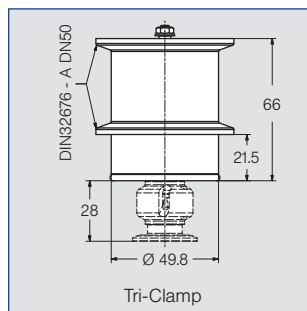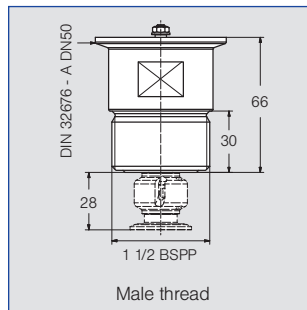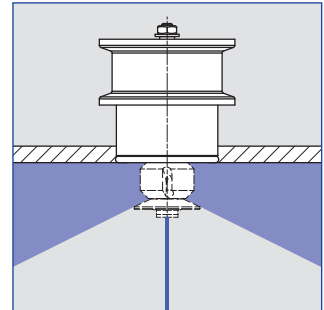



Series 500.453

E Ø [mm]	Flow rate $\dot{V}$ [l/min]			at 40 psi [US gal./min]
	1	2	3	
1.2	28.3	40	49	12.4

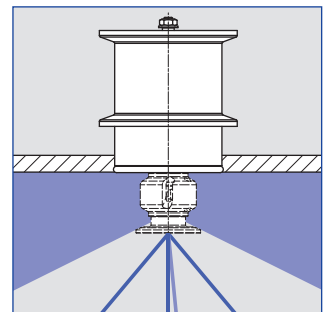

Nozzle installation via thread
in idle position

Nozzle installation via Tri-Clamp
in operating position

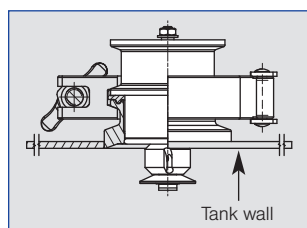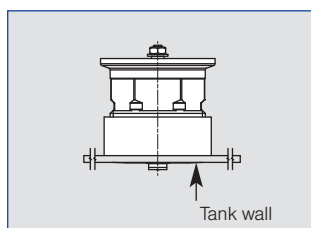

Operation with compressed air only for
short-term usage. Operation above the
recommended operating pressure
means higher wear and smaller dro-
plets. This might have adverse effects
on the cleaning result.



Rotating cleaning nozzle »Teflon® Whirly«

Series 573 / 583

FDA-conform

A[®]
3

Slip-on version certified according to »3-A®«.

- Self rotating
- Rotating solid jets
- Recommended for tanks made of glass and enamel

Applications:

Cleaning of

- Plant and equipment
- Tanks
- Machines

Max. tank diameter:

Rinsing: 5.0 m

Cleaning: 3.0 m

Operating pressure:

1.0 - 2.0 bar

Max. temperature:

95 °C

(Versions for use with higher temperature on request)

Installation:

Operation in every direction is possible

Material:






PTFE (Teflon®)

Bearing:

Slide bearing made of PTFE

Filtration:

Line strainer with a mesh size of 0.3 mm/50 mesh

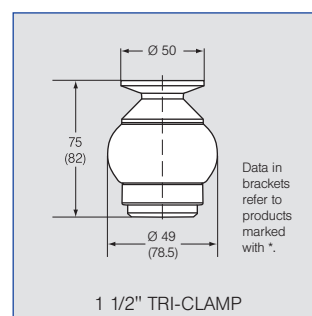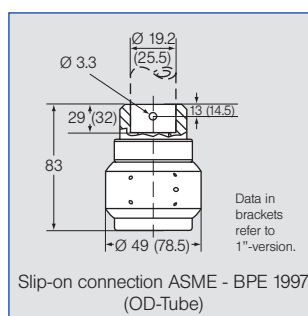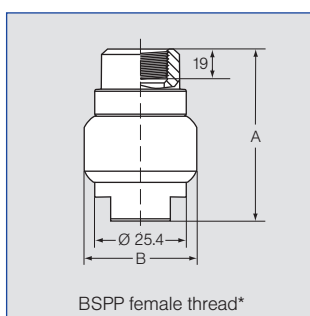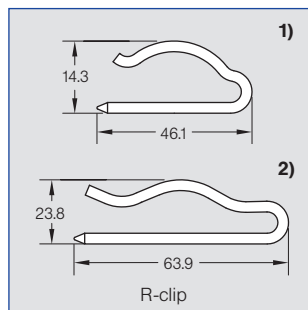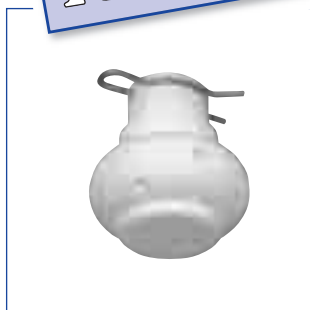

Spray angle 	R-clip	Ordering number						E Ø [mm]	V̇ [l/min]					Height		Dia- meter
		Type	Connection						p [bar] (p _{max} = 6 bar)					A [mm]	B [mm]	
			3/4 BSP [®] female	1 BSP [®] female	3/4" Slip-on	1" Slip-on	1 1/2" Tri- Clamp					at 40 psi [US gal/ min]				
 180°	1)	583.114.55	AL	-	TF07	TF10	15	2.1	47	67	82	21	74	49		
	1)	583.264.55	AL	-	TF07	TF10	15	3.3	103	145	178	45	74	49		
	2)	583.344.55	-	AN	-	TF10	15*	7.1	159	225	276	70	100	78.5		
 180°	1)	573.114.55	AL	-	TF07	TF10	15	2.1	47	67	82	21	74	49		
	1)	573.264.55	AL	-	TF07	TF10	15	3.3	103	145	178	45	74	49		
	2)	573.344.55	-	AN	-	TF10	15*	7.1	159	225	276	70	100	78.5		
 270°	1)	583.116.55	AL	-	TF07	TF10	15	2.4	47	67	82	21	74	49		
	1)	583.266.55	AL	-	TF07	TF10	15	3.4	103	145	178	45	74	49		
	2)	583.346.55	-	AN	-	TF10	15*	5.9	159	225	276	70	100	78.5		
 270°	1)	573.116.55	AL	-	TF07	TF10	15	2.4	47	67	82	21	74	49		
	1)	573.266.55	AL	-	TF07	TF10	15	3.4	103	145	178	45	74	49		
	2)	573.346.55	-	AN	-	TF10	15*	5.9	159	225	276	70	100	78.5		
 360°	1)	583.209.55	AL	-	TF07	TF10	15	3.5	71	100	122	31	74	49		
	1)	583.269.55	AL	-	TF07	TF10	15	4.8	103	145	178	45	74	49		
	2)	583.279.55	-	AN	-	TF10	15*	3.7	106	150	184	47	100	78.5		
	2)	583.349.55	-	AN	-	TF10	15*	5.6	159	225	276	70	100	78.5		

E = Narrowest free cross-section - * NPT on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result. Teflon® is a registered trademark of E. I. DuPont De Nemours and Company.


Slip-on versions: - R-clip made of stainless steel AISI 316 L is included (Ordering number: R-clip 1: 095.022.1Y.50.88.E, R-clip 2: 095.022.1Y.50.60.E)
- Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.

Example of ordering:	Type	+ Connection	= Ordering no.
	583.114.55.	+ AL	= 583.114.55.AL



Rotating cleaning nozzle „Gyro“

Series 577 / 579

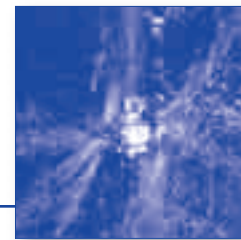

- Self rotating stainless steel tank cleaning head
- Powered and lubricated by the cleaning fluid
- Flat fan nozzle holes for particularly powerful all-round cleaning
- Large free cross sections, less prone to clogging

Applications:

Cleaning of

- Plant and equipment
- Tanks
- Machines

Max. tank diameter:

6.0 m

Operating pressure:

1.0 - 3.5 bar, max. 5.0 bar

Max. temperature:

90°C

Weight:

NPT 1" 750g
NPT 2" 1800g
NPT 3" 3600g

Material:

Stainless steel 316 SS


Bearing:

Slide bearing made of Teflon® (PTFE)

Accessories:

Spare parts set consisting of:

- Top seal
- Bottom seal
- Bolt
- Nut
- Sleeve
- Instructions for use

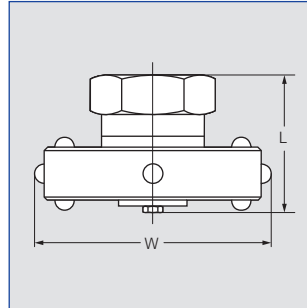

Spray angle	Ordering number				ṽ [l/min]					Dimensions		Effective spray diameter
	Type	Connection										
		NPT 1"	NPT 2"	NPT 3"								
					1	2	3	5	at 40 psi [US gal/ min]	Length [mm]	Width [mm]	Ø [m]
	577. 283. 17	BN	-	-	115	163	200	258	50	68.4	118	4
	577. 363. 17	BN	-	-	182	258	316	408	80	68.4	118	4
	577. 404. 17	-	BW	-	228	322	394	509	100	103	151	5
	577. 434. 17	-	BW	-	273	386	473	610	120	103	151	5
	577. 524. 17	-	BW	-	452	639	783	1010	170	103	151	5
	577. 564. 17	-	-	MB	564	798	977	1262	250	116	188	6
	577. 594. 17	-	-	MB	677	958	1173	1515	300	116	188	6
577. 614. 17	-	-	MB	791	1118	1369	1768	350	116	188	6	
	579. 284. 17	BN	-	-	115	163	200	258	50	68.4	118	4
	579. 364. 17	BN	-	-	182	258	316	408	80	68.4	118	4
	579. 404. 17	-	BW	-	228	322	394	509	100	103	151	5
	579. 434. 17	-	BW	-	273	386	473	610	120	103	151	5
	579. 494. 17	-	BW	-	380	538	659	851	170	103	151	5
	579. 564. 17	-	-	MB	564	798	977	1262	250	116	188	6
	579. 594. 17	-	-	MB	677	958	1173	1515	300	116	188	6
579. 614. 17	-	-	MB	791	1118	1369	1768	350	116	188	6	
	577. 285. 17	BN	-	-	115	163	200	258	50	68.4	118	4
	577. 365. 17	BN	-	-	182	258	316	408	80	68.4	118	4
	577. 405. 17	-	BW	-	228	322	394	509	100	103	151	5
	577. 435. 17	-	BW	-	273	386	473	610	120	103	151	5
	577. 495. 17	-	BW	-	380	538	659	851	170	103	151	5
	577. 566. 17	-	-	MB	564	798	977	1262	250	116	188	6
	577. 596. 17	-	-	MB	677	958	1173	1515	300	116	188	6
577. 616. 17	-	-	MB	791	1118	1369	1768	350	116	188	6	
	577. 289. 17	BN	-	-	115	163	200	258	50	68.4	118	4
	577. 369. 17	BN	-	-	182	258	316	408	80	68.4	118	4
	577. 409. 17	-	BW	-	228	322	394	509	100	103	151	5
	577. 439. 17	-	BW	-	273	386	473	610	120	103	151	5
	577. 499. 17	-	BW	-	380	538	659	851	170	103	151	5
	577. 569. 17	-	-	MB	570	806	987	1274	250	116	188	6
	577. 599. 17	-	-	MB	685	969	1187	1532	300	116	188	6
577. 619. 17	-	-	MB	798	1128	1382	1784	350	116	188	6	

Size	Ordering number
NPT 1"	057. 701. 55
NPT 2"	057. 702.55
NPT 3"	057. 703. 55

Higher pressure generally means higher wear and smaller droplets. This might have adverse effects on the cleaning result. We do not recommend the operation with compressed air.

Example of ordering:	Type 577. 404. 17.	+ Connection + BW	= Ordering no. = 577. 404. 17. BW
----------------------	--------------------	-------------------	-----------------------------------



Rotating cleaning nozzle »XactClean®«

Series 5W2 / 5W3

FDA -conform

NEW!



- Controlled rotation
- Powerfull flat jet nozzles
- Very efficient tank cleaning nozzle

Applications:

- Cleaning of
- Plant and equipment
- Tanks
- Machines

Max. tank diameter:

Rinsing: 9.0 m
Cleaning: 6.0 m

Operating pressure:

3.0 - 7.0 bar

Max. temperature:

80 °C

Installation:

Operation in every direction is possible

Material:

Stainless steel AISI 316 L and PTFE

Bearing:



Slide bearing made of PTFE

Filtration:

Line strainer with a mesh size of 0.1 mm/170 mesh

Rotation monitoring sensor:

This series is qualified for rotation monitoring with the Lechler sensor.

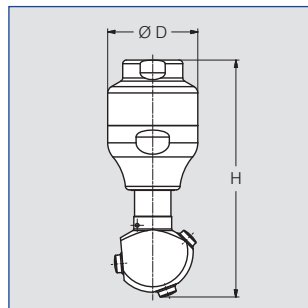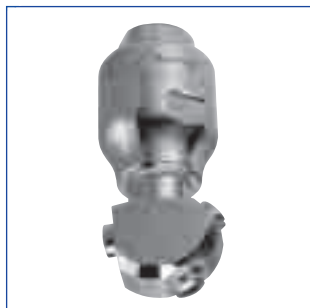


Spray angle 	Ordering number							E Ø [mm]	ṽ [l/min]				Height H [mm]	Dia- meter D [mm]
	Type	Connection							p [bar] (p _{max} = 20 bar)					
		3/8 BSPP* female	1/2 BSPP* female	3/4 BSPP* female	1 BSPP* female	1/2" Slip- on	3/4" Slip- on		2	5	10	at 40 psi [US gal/ min]		
	5W2.875.1Y	AF	AH	-	-	TF05	-	1.7	15	24	34	4.7	120	43
	5W2.995.1Y	-	AH	-	-	TF05	-	2.2	30	47	67	9.3	120	43
	5W3.065.1Y	-	AH	AL	-	-	TF07	2.2	45	71	101	14.0	135	50
	5W3.145.1Y	-	-	AL	-	-	TF07	3.8	70	111	157	21.7	155	60
	5W3.205.1Y	-	-	AL	-	-	TF07	4.8	100	158	224	31.0	155	60
	5W3.255.1Y	-	-	AL	AN	-	TF07	5.5	130	206	291	40.3	155	60
	5W2.876.1Y	AF	AH	-	-	TF05	-	1.7	15	24	34	4.7	120	43
	5W2.996.1Y	-	AH	-	-	TF05	-	2.2	30	47	67	9.3	120	43
	5W3.066.1Y	-	AH	AL	-	-	TF07	2.2	45	71	101	14.0	135	50
	5W3.146.1Y	-	-	AL	-	-	TF07	3.8	70	111	157	21.7	155	60
	5W3.206.1Y	-	-	AL	-	-	TF07	4.8	100	158	224	31.0	155	60
	5W3.256.1Y	-	-	AL	AN	-	TF07	5.5	130	206	291	40.3	155	60
	5W2.879.1Y	AF	AH	-	-	TF05	-	1.52	15	24	34	4.7	120	43
	5W2.999.1Y	-	AH	-	-	TF05	-	2.0	30	47	67	9.3	120	43
	5W3.069.1Y	-	AH	AL	-	-	TF07	2.0	45	71	101	14.0	135	50
	5W3.149.1Y	-	-	AL	-	-	TF07	3.5	70	111	157	21.7	155	60
	5W3.209.1Y	-	-	AL	-	-	TF07	4.4	100	158	224	31.0	155	60
	5W3.259.1Y	-	-	AL	AN	-	TF07	5.0	130	206	291	40.3	155	60

E = Narrowest free cross-section. * NPT on request

Operation with compressed air only for short-term usage. Operation above the recommended operating pressure means higher wear and smaller droplets. This might have adverse effects on the cleaning result.

Slip-on versions: R-clip made of stainless steel AISI 316 L is included (Ordering number: 095.022.1Y.50.60.E (5W3), 095.013.1E.05.59.0 (5W2)). Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and rotating cleaning nozzle.

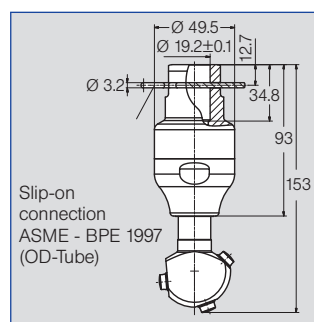

Max. tank diameter [m]

Type	Rinsing	Cleaning
5W2.87X	4	3
5W2.99X	5	3
5W3.06X	7	4
5W3.14X	8	5
5W3.20X	9	6
5W3.25X	9	6

Rotation monitoring sensor

Please ask for more information.





High impact tank cleaning machine

Series 5TM



- Gear driven
- Very powerfull solid jets

Applications:

- Cleaning of
- Plant and equipment
- Tanks
- Machines
- Road tankers
- Large vessels

Max. tank diameter:

Rinsing: 24.0 m
Cleaning: 15.0 m

Operating pressure:

2.0 - 5.0 bar

Max. temperature:

60 °C
(Version for higher temperatures on request)

Installation:

Operation in every direction is possible

Material:

Stainless steel AISI 316L,
Gear components made of
PTFE and carbon fibre

Weight:

approx. 7.5 kg

Bearing:



Ball and slide bearings

Filtration:

Line strainer with a mesh size
of 0.2 mm/80 mesh

Rotation monitoring sensor:

This series is qualified for
rotation monitoring with the
Lechler sensor.

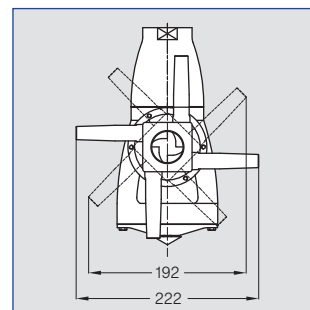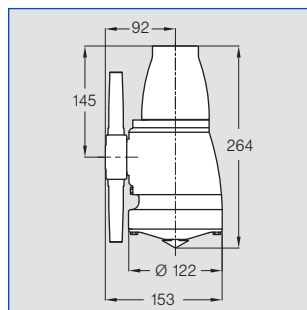

Spray angle	Ordering number	Connection BSPF female	E Ø [mm]	Number, Ø Nozzle [mm]	V̇ [l/min]			
					p [bar] (p _{max} = 7 bar)			at 40 psi [US gal./min]
360°	5TM.208.1Y.AS	1 1/2	8	2x8.0	125	153	198	39
	5TM.210.1Y.AS	1 1/2	10	2x10.0	160	196	253	50
	5TM.406.1Y.AS	1 1/2	6	4x6.0	140	171	221	43
	5TM.407.1Y.AS	1 1/2	7	4x7.0	170	208	269	53
	5TM.408.1Y.AS	1 1/2	8	4x8.0	200	245	316	62
	5TM.410.1Y.AS	1 1/2	10	4x10.0	260	318	411	81

E = Narrowest free cross-section

The cycle time takes between 7 and 41 min depending on type and pressure.

Rotation monitoring sensor

Please ask for more
information.





Static spray balls

Series 527 / 591

FDA-conform

A[®]₃

Slip-on version certified according to »3-A®«.

Series 527

- Effective solid jets

Applications:

- Cleaning of
- Plant and equipment
- Tanks
- Machines

Max. tank diameter:
4.0 - 8.0 m

Operating pressure:
1.0 - 3.0 bar


Max. temperature:
200 °C

Installation:

Operation in every direction is possible

Material:

Stainless steel AISI 316L

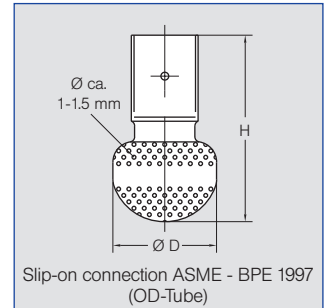

Spray angle 	Ordering number Type	E Ø mm	For pipe Ø	V̇ [l/min]					Height H [mm]	Dia- meter D [mm]
				p [bar] (p _{max} = 5 bar)				at 40 psi [US gal/ min]		
360° 	527.209.1Y.00.75	0.8	3/4"	42	60	73	95	19	68	32
	527.289.1Y.01.50	1.1	1 1/2"	120	170	208	269	50	116	65
	527.449.1Y.02.00	1.7	2"	297	420	514	664	127	152	102

E = Narrowest free cross-section

Operation above the recommended operating pressure might have adverse effects on the cleaning result.

Slip-on versions: - R-clip made of stainless steel AISI 316L is included

- Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and spray ball.

Series 591

- Popular spray ball design
- Effective solid jets

Applications:

- Cleaning of
- Plant and equipment
- Tanks
- Machines

Max. tank diameter:
1.0 - 5.0 m

Operating pressure:
1.0 - 3.0 bar

Max. temperature:
200 °C


Installation:

Operation in every direction is possible

Material:

Stainless steel AISI 316Ti
Pin: Stainless steel AISI 316L

Other materials (316L and PTFE) on request.

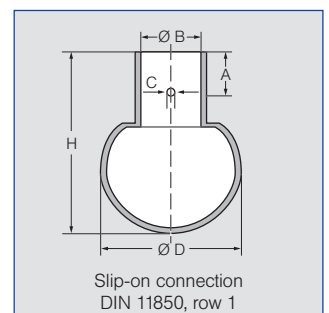

Spray angle 	Ordering number Type	E Ø [mm]	Effective cleaning approx. [m]	V̇ [l/min]					Dimensions approx. [mm]					
				p [bar]				at 40 psi [US gal/ min]	Dia- meter D	Height H	Con- nection B	Slip- on* C	A	
360° 	591.M11.17.00	0.8	0.5	7	10	14	17	4	20	32.5	8.2	DN8	2.2	9.0
	591.X11.17.00	1.2	0.5-1.0	25	35	49	61	15	24	37.5	12.2	DN10	2.2	9.0
	591.Y11.17.00	1.2	1-1.5	49	70	99	121	31	30	42	18.2	DN15	2.2	9.0
	591.A21.17.00	2.0	2-2.5	91	128	181	222	56	40	53	22.2	DN20	2.5	9.0
	591.B31.17.00	2.1	2.0-3.0	130	183	259	318	80	64	90	28.2	DN25	2.8	18.0
	591.B51.17.00	3.0	3.0-4.0	206	292	412	505	128	64	90	28.2	DN25	2.8	18.0
180° 	591.A23.17.00	2.0	2.0-2.5	74	105	148	182	46	40	53	22.2	DN20	2.5	9.0
	591.B53.17.00	3.0	3.0-4.0	146	207	292	358	91	64	90	28.2	DN25	2.8	18.0
	591.B32.17.00	2.1	2.5-3.0	103	145	205	251	64	64	90	28.2	DN25	2.8	18.0
	591.D42.17.00	2.2	4.0-4.5	230	325	460	563	142	90	122	52.3	DN50	3.3	25.0

E = Narrowest free cross-section - * Female thread on request

Operation above the recommended operating pressure might have adverse effects on the cleaning result.

Slip-on versions: - R-clip made of stainless steel AISI 316L is included

- Depending on diameter of the adapter the flow rate can increase due to leakage between connecting pipe and spray ball.



Pneumatic atomizing nozzles, Full cone, pressure principle, internal mixing Series 136.1




Fine full cone atomization and fogging with air or gas. Liquid pressure principle. Internal mixing of fluids.

Applications:


Humidification of air, cooling,
disinfection (e.g. bottles), coa-
ting, dosing, release agent
applications.




Series 136.1

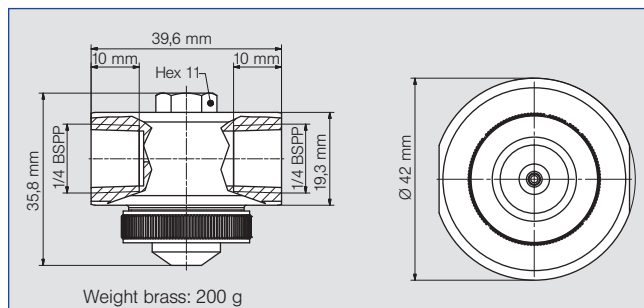

Weight brass: 200 g

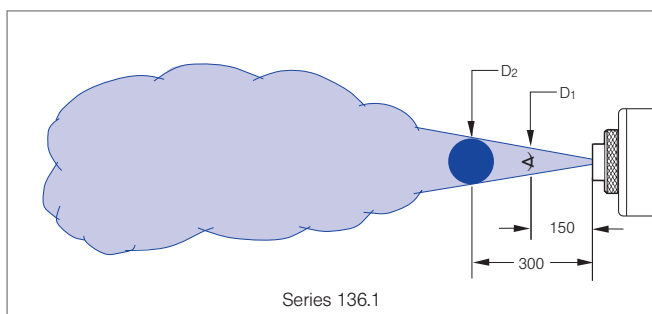

Series 136.1

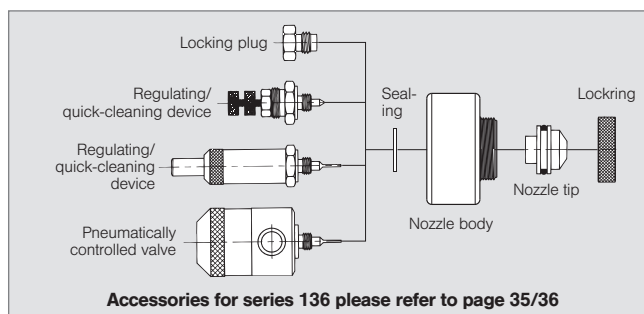

Accessories for series 136 please refer to page 35/36

Spray angle	Ordering no.			E Ø [mm]	Liquid pressure p [bar]												Spray dimensions						
	Type	Mat. no.			0.7			1.5			3.0			4.0			p [bar]	p Water [bar]	D ₁ [mm]	D ₂ [mm]			
		1Y	35		p [bar]	V Water [l/h]	V _n Air [m³/h]	p [bar]	V Water [l/h]	V _n Air [m³/h]	p [bar]	V Water [l/h]	V _n Air [m³/h]	p [bar]	V Water [l/h]	V _n Air [m³/h]							
		316L	Brass plated																				
20°	136. 115. xx. A2	○	○	0.50	0.40	5.90	0.30	1.40	5.80	0.80	2.40	9.10	1.10	3.00	11.00	1.20	0.80	0.70	60	100			
0.80					3.80	0.60	1.80	4.10	1.00	2.80	7.50	1.20	3.40	9.60	1.40	1.80	1.50	60	95				
1.20					1.70	0.90	2.20	2.20	1.40	3.20	5.90	1.50	3.80	8.20	1.60	2.60	2.00	60	100				
-					-	-	2.60	1.20	1.70	3.60	4.40	1.80	4.20	6.80	1.90	3.20	3.00	55	95				
-					-	-	-	-	-	4.00	2.90	2.10	4.60	5.50	2.20	4.40	4.00	55	100				
-					-	-	-	-	-	4.40	2.00	2.50	5.00	4.10	2.50								
-					-	-	-	-	-	4.80	1.10	2.80	5.40	2.90	2.80								
-					-	-	-	-	-	5.20	0.40	3.00	5.80	2.10	3.10								
136. 125. xx. A2					○	○	0.50	0.80	4.70	1.50	1.20	7.00	1.80	2.80	9.10	3.30	3.40	10.60	3.90	1.40	0.70	55	90
								1.20	4.40	1.90	1.60	6.60	2.20	3.20	8.70	3.70	3.80	10.30	4.30	2.20	1.50	55	95
	1.60	4.00	2.30	2.00				6.20	2.60	3.60	8.40	4.10	4.20	9.90	4.60	2.80	2.00	55	100				
	2.00	3.50	2.60	2.40				5.80	3.00	4.00	8.00	4.50	4.60	9.60	5.00	3.40	3.00	60	100				
	2.40	3.00	3.00	2.80				5.40	3.40	4.40	7.70	4.80	5.00	9.30	5.40	4.20	4.00	60	100				
	2.80	2.70	3.20	3.20				4.90	3.70	4.80	7.30	5.20	5.40	8.90	5.80								
	3.20	2.00	3.70	3.60				4.40	4.10	5.20	7.00	5.60	5.80	8.60	6.10								
	3.60	1.60	4.10	4.00				3.90	4.50	5.60	6.60	5.90	-	-	-								
	4.00	1.30	4.50	4.40				3.50	4.80	6.00	6.20	6.30	-	-	-								
	4.40	1.00	4.90	4.80				3.10	5.20	-	-	-	-	-	-								
	4.80	0.60	5.20	5.20				2.70	5.60	-	-	-	-	-	-								
	-	-	-	5.60				2.30	5.90	-	-	-	-	-	-								
	-	-	-	6.00				1.90	6.30	-	-	-	-	-	-								

E = narrowest free cross section (water)

Continued on next page.

Example Type + Material no. (xx) = Ordering no.
for ordering: 136. 115. xx. A2 + 1Y = 136. 115. 1Y. A2




Pneumatic atomizing nozzles, Full cone, pressure principle, internal mixing Series 136.1



Spray angle 	Ordering no.			E Ø [mm]	Liquid pressure p [bar]												Spray dimensions				
	Type	Mat. no.			0.7			1.5			3.0			4.0			p Air [bar]	p Water [bar]	D ₁ [mm]	D ₂ [mm]	
		1Y	35		p Air [bar]	V̇ Water [l/h]	V̇n Air [m³/h]	p Air [bar]	V̇ Water [l/h]	V̇n Air [m³/h]	p Air [bar]	V̇ Water [l/h]	V̇n Air [m³/h]	p Air [bar]	V̇ Water [l/h]	V̇n Air [m³/h]					
																					316L
20°	136. 134. xx. A2	○	○	0.7	1.20	13.20	2.70	2.00	19.40	3.90	3.00	28.30	5.20	3.80	32.60	6.20	1.80	0.70	55	95	
					1.60	12.40	3.30	2.40	18.10	4.40	3.40	27.50	5.70	4.20	32.00	6.80	2.80	1.50	60	105	
					2.00	11.80	3.90	2.80	17.30	4.90	3.80	26.70	6.30	4.60	31.30	7.30	3.80	2.00	60	105	
					2.40	11.40	4.40	3.20	16.70	5.50	4.20	25.90	6.80	5.00	30.60	7.80	5.20	3.00	65	110	
					2.80	11.10	4.90	3.60	16.10	6.00	4.60	25.00	7.30	5.40	29.90	8.40	6.00	4.00	65	110	
					3.20	10.80	5.50	4.00	15.60	6.50	5.00	24.20	7.80	5.80	29.30	8.90					
					3.60	10.60	6.00	4.40	15.20	7.00	5.40	23.60	8.40	-	-	-					
					4.00	10.40	6.50	4.80	15.00	7.60	5.80	23.10	8.90	-	-	-	-				
					4.40	10.10	7.00	5.20	14.60	8.10	-	-	-	-	-	-	-				
					4.80	9.90	7.60	5.60	14.10	8.60	-	-	-	-	-	-	-				
					5.20	9.50	8.10	6.00	13.80	9.10	-	-	-	-	-	-	-				
					5.60	9.00	8.60	-	-	-	-	-	-	-	-	-	-				
					6.00	8.50	9.20	-	-	-	-	-	-	-	-	-	-				
	136. 142. xx. A2	○	○	2.5	1.40	24.20	5.10	1.60	53.40	4.70	3.20	70.80	8.00	3.80	93.20	9.20	0.80	0.70	60	100	
					1.80	20.40	6.30	2.00	42.60	5.90	3.60	62.50	9.20	4.20	83.10	10.10	1.60	1.50	65	105	
					2.20	20.00	7.20	2.40	35.30	7.20	4.00	55.70	10.60	4.60	75.30	11.30	3.00	2.00	60	105	
					2.60	19.30	8.20	2.80	30.40	8.40	4.40	49.30	11.70	5.00	69.00	12.50	4.00	3.00	65	110	
					3.00	17.60	9.30	3.20	28.60	9.50	4.80	44.60	12.90	5.40	63.40	13.70	6.00	4.00	65	110	
					3.40	16.50	10.40	3.60	28.20	10.50	5.20	41.90	14.10	5.80	57.50	14.90					
					3.80	17.00	11.40	4.00	27.30	11.50	5.60	40.40	15.10	-	-	-					
					4.20	16.30	12.40	4.40	25.90	12.50	6.00	39.70	16.10	-	-	-					
					4.60	15.10	13.30	4.80	24.30	13.50	-	-	-	-	-	-					
					5.00	14.00	14.30	5.20	22.30	14.60	-	-	-	-	-	-					
					5.40	13.10	15.30	5.60	21.80	15.70	-	-	-	-	-	-					
					5.80	12.40	16.20	6.00	21.40	16.70	-	-	-	-	-	-					

E = narrowest free cross section (water)

Example Type + Material no. (xx) = Ordering no.
for ordering: 136. 134. xx. A2 + 1Y = 136. 134. 1Y. A2

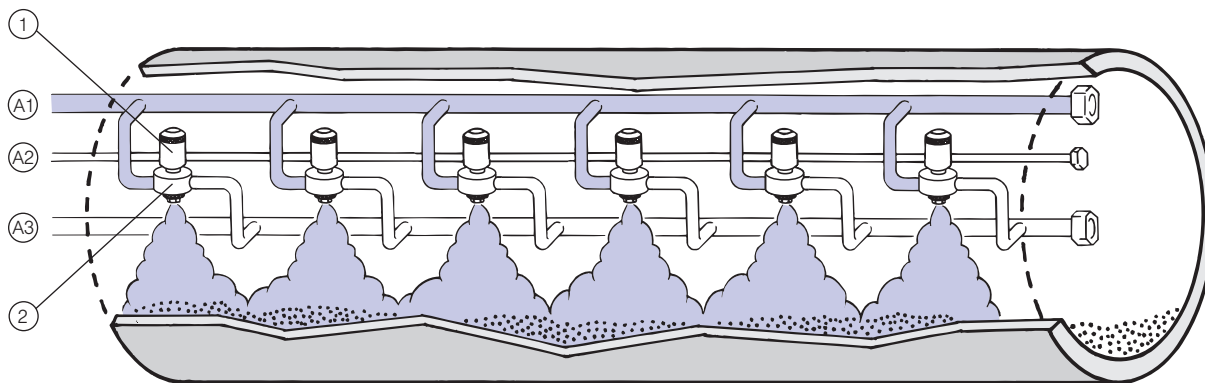

- (A1) Liquid supply line
- (A2) Control air for pneumatic valve
- (A3) Atomizing air supply line

- ① Pneumatically controlled valve
Ordering no. 015. 60x. xx. xx (see Page 35)
- ② Pneumatic atomizing nozzle
Ordering no. 136. xxx. xx. xx



Pneumatic atomizing nozzles, Full cone, pressure principle, internal mixing Series 136.2






Fine full cone atomization and fogging with air or gas. Especially wide spray angle of 60°.

Pressure principle. Internal mixing of fluids.

Applications:

Humidification of air, cooling, disinfection (e.g. bottles), coating, dosing, release agent applications.

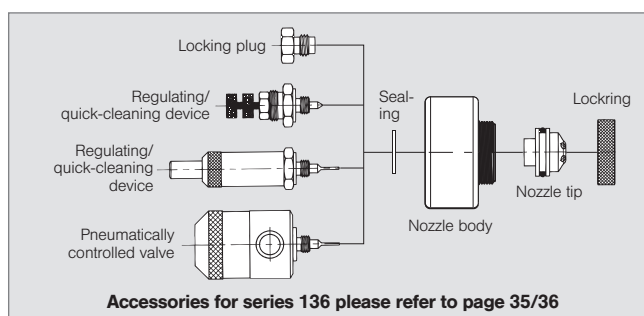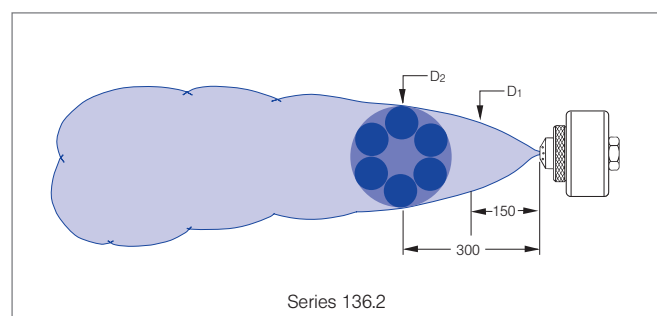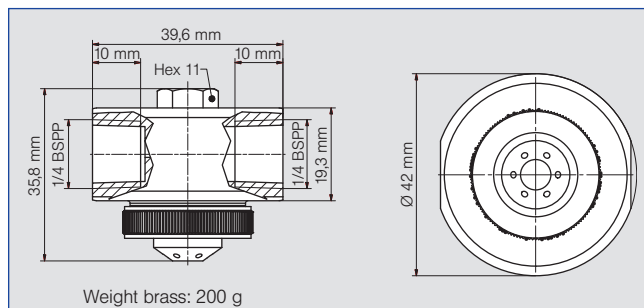

 Spray angle	Ordering no.			E Ø [mm]	Liquid pressure p [bar]												Spray dimensions			
	Type	Mat. no.			0.7			1.5			3.0			4.0			p Air [bar]	p Water [bar]	D ₁ [mm]	D ₂ [mm]
		1Y	35		p Air [bar]	p Water [l/h]	p _n Air [m³/h]	p Air [bar]	p Water [l/h]	p _n Air [m³/h]	p Air [bar]	p Water [l/h]	p _n Air [m³/h]	p Air [bar]	p Water [l/h]	p _n Air [m³/h]				
		316L	Brass plated																	
60°	136. 215. xx. A2	○	○	0.5	1.00	3.00	1.30	1.60	5.80	1.70	2.80	8.50	2.40	3.80	9.40	3.10	1.00	0.70	200	330
					1.20	1.80	1.50	1.80	4.90	1.90	3.20	7.20	2.80	4.20	8.20	3.50	1.60	1.50	230	380
					1.40	0.70	1.80	2.00	3.80	2.10	3.60	5.70	3.20	4.60	6.90	3.90	2.40	2.00	230	385
					-	-	-	2.20	2.80	2.30	4.00	4.00	3.60	5.00	5.40	4.20	3.20	3.00	245	390
					-	-	-	2.40	1.70	2.50	4.40	2.20	4.10	5.40	3.80	4.70	4.20	4.00	250	410
					-	-	-	2.60	0.80	2.80	4.80	0.80	4.50	5.80	2.30	5.20				
					-	-	-	-	-	-	5.00	0.40	4.60	6.00	1.40	5.60				
					-	-	-	-	-	-	-	-	-	-	-	-				
	136. 222. xx. A2	○	○	1.0	0.80	17.50	2.80	1.60	25.90	4.00	3.00	40.40	5.80	3.80	54.90	6.40	0.80	0.70	250	450
					1.00	6.00	4.30	1.80	14.70	5.30	3.20	31.50	6.90	4.00	45.60	7.30	1.60	1.50	245	465
					-	-	-	2.00	6.70	6.70	3.40	22.20	8.20	4.20	37.60	8.50	2.30	2.00	245	465
					-	-	-	2.20	1.90	8.10	3.60	14.60	9.50	4.40	29.60	9.70	3.20	3.00	250	465
					-	-	-	-	-	-	3.80	8.50	11.00	4.60	21.60	11.20	4.20	4.00	245	465
					-	-	-	-	-	-	4.00	4.50	12.30	4.80	15.30	12.40				
					-	-	-	-	-	-	-	-	-	5.00	9.70	13.80				
					-	-	-	-	-	-	-	-	-	5.20	6.00	15.20				
	136. 231. xx. A2	○	○	1.4	1.60	25.60	5.10	2.60	44.20	7.00	3.60	93.70	7.90	4.20	132.90	7.30	2.00	0.70	235	380
					2.00	17.80	6.20	3.00	33.00	8.20	4.00	78.30	9.30	4.60	117.20	9.00	2.60	1.50	245	415
					2.40	11.30	7.20	3.40	24.70	9.20	4.40	65.80	10.60	5.00	101.10	10.40	2.40	2.00	255	420
					2.80	6.90	8.10	3.80	18.10	10.20	4.80	54.90	11.90	5.40	87.90	11.80	3.60	3.00	255	425
					-	-	-	4.20	13.20	11.20	5.20	45.60	13.00	5.80	76.60	13.20	4.20	4.00	265	430
					-	-	-	4.60	9.30	12.00	5.60	38.00	14.10	6.00	71.20	13.80				
					-	-	-	-	-	-	6.00	36.10	14.40	-	-	-				
					-	-	-	-	-	-	-	-	-	-	-	-				

E = narrowest free cross section (water)

Example Type + Material no. (xx) = Ordering no.
for ordering: 136. 215. xx. A2 + 1Y = 136. 215. 1Y. A2





Pneumatic atomizing nozzles, Flat fan, pressure principle, internal mixing Series 136.4




Particularly fine flat fan atomization with air or gas. Siphon principle. Internal mixing of fluids.

Applications:


Belt lubrication, cooling, humidification of goods, coating, dosing (e.g. Conveyor belt), release agent applications.




Series 136.4

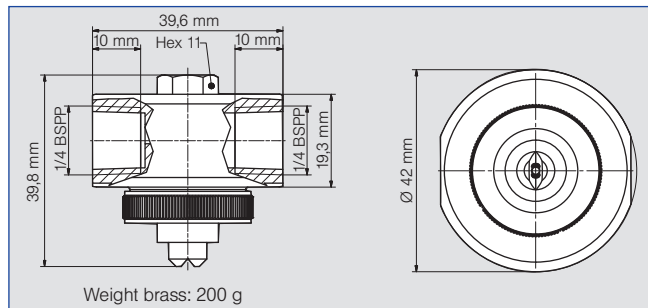

Weight brass: 200 g

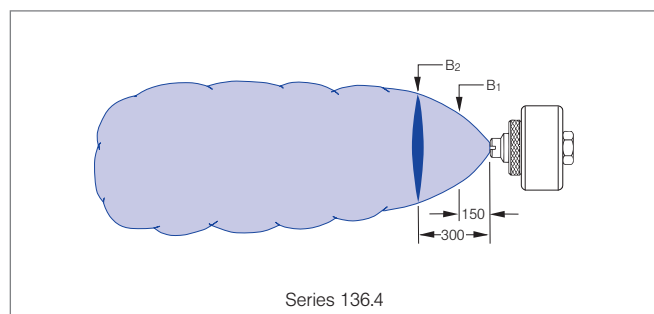

Series 136.4

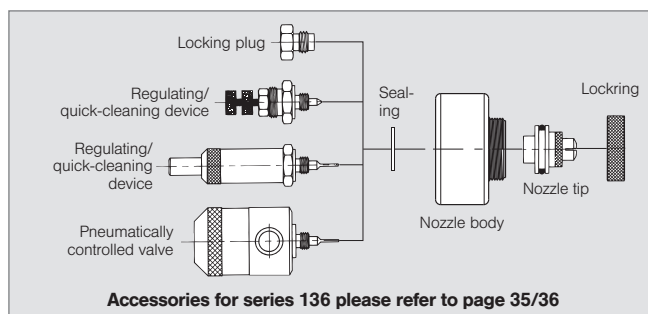

Accessories for series 136 please refer to page 35/36

Spray angle	Ordering no.		E Ø [mm]	Liquid pressure p [bar]												Spray dimensions				
	Type	Mat. no.		0.7			1.5			3.0			4.0			p Air [bar]	p Water [bar]	B ₁ [mm]	B ₂ [mm]	
		1Y 316L		35 Brass plated	p Air [bar]	ṽ Water [l/h]	ṽ_n Air [m³/h]	p Air [bar]	ṽ Water [l/h]	ṽ_n Air [m³/h]	p Air [bar]	ṽ Water [l/h]	ṽ_n Air [m³/h]	p Air [bar]	ṽ Water [l/h]					ṽ_n Air [m³/h]
45°	136. 414. xx. A2	○	○	0.7	1.00	7.70	1.30	1.40	14.30	1.50	2.20	22.40	2.00	3.00	25.10	2.50	1.40	0.70	85	125
1.20					6.00	1.50	1.60	13.00	1.60	2.60	20.00	2.30	3.40	23.00	2.80	2.40	1.50	100	145	
1.40					4.20	1.70	1.80	11.60	1.80	3.00	17.70	2.60	3.80	20.90	3.10	3.20	2.00	105	155	
1.60					2.70	1.90	2.00	10.20	2.00	3.40	15.50	3.00	4.20	18.90	3.50	3.80	3.00	120	170	
1.80					1.30	2.10	2.20	8.90	2.20	3.80	13.30	3.40	4.60	16.90	3.80	4.60	4.00	130	210	
-					-	-	2.40	7.40	2.40	4.20	11.00	3.70	5.00	14.90	4.20					
-					-	-	2.60	5.90	2.60	4.60	8.80	4.10	5.40	12.80	4.60					
-					-	-	2.80	4.60	2.80	5.00	6.60	4.50	5.80	10.80	5.00					
-					-	-	3.00	3.20	3.00	5.40	4.30	4.90	6.00	9.80	5.20					
-					-	-	3.20	2.10	3.20	5.80	2.50	5.30	-	-	-					
-					-	-	3.40	1.10	3.40	6.00	1.60	5.50	-	-	-					
136. 443. xx. A2	○	○	1.0	1.20	13.90	1.50	1.60	26.60	1.60	3.00	37.10	2.60	3.60	45.60	2.90	1.20	0.70	110	165	
				1.40	11.90	1.70	1.80	24.30	1.80	3.40	33.10	3.00	4.00	41.90	3.30	2.00	1.50	115	190	
				1.60	9.50	1.90	2.00	22.00	2.00	3.80	29.50	3.40	4.40	38.30	3.70	2.80	2.00	145	190	
				1.80	7.80	2.10	2.20	19.90	2.20	4.20	26.20	3.80	4.80	35.00	4.00	3.80	3.00	150	210	
				-	-	-	2.40	18.00	2.40	4.60	23.00	4.20	5.20	31.80	4.50	4.80	4.00	160	230	
				-	-	-	2.60	16.20	2.60	5.00	20.20	4.60	5.60	29.00	4.90					
				-	-	-	2.80	14.40	2.80	5.40	17.60	4.90	6.00	26.20	5.20					
				-	-	-	3.00	12.80	3.00	5.80	14.90	5.30	-	-	-					
				-	-	-	3.20	11.30	3.20	6.00	14.10	5.50	-	-	-					
				-	-	-	3.40	9.90	3.40	-	-	-	-	-	-					
				-	-	-	3.60	8.80	3.60	-	-	-	-	-	-					

E = narrowest free cross section (water)

Continued on next page.

Example Type + Material no. (xx) = Ordering no.
for ordering: 136. 414. xx. A2 + 1Y = 136. 414. 1Y. A2



Pneumatic atomizing nozzles, Flat fan, pressure principle, internal mixing Series 136.4



Spray angle	Ordering no.				E Ø [mm]	Liquid pressure p [bar]												Spray dimensions							
	Type	Mat. no.		1Y 316L		35 Brass plated	0.7			1.5			3.0			4.0			p Air [bar]	p Water [bar]	B ₁ [mm]	B ₂ [mm]			
45°	136. 462. xx. A2	○	○	1.5	1.20	19.00	2.60	2.00	22.00	2.00	3.00	61.80	4.00	3.80	76.10	4.60	1.20	0.70	120	140					
					1.60	12.20	3.40	2.40	18.00	2.40	3.40	51.90	4.80	4.00	70.40	5.10	2.40	1.50	120	170					
					2.00	9.40	4.10	2.80	14.40	2.80	3.80	44.60	5.80	4.20	65.60	5.50	3.20	2.00	120	175					
					2.40	7.10	4.80	3.20	11.30	3.20	4.20	39.00	6.60	4.40	61.30	5.90	3.80	3.00	140	205					
					2.80	5.70	5.40	3.60	8.80	3.60	4.60	33.40	7.40	4.60	57.30	6.40	6.00	4.00	145	205					
					3.20	5.00	6.00	4.00	8.10	3.90	5.00	29.40	8.10	4.80	54.10	6.70									
					3.60	3.60	6.60	4.40	6.20	4.30	5.40	25.50	8.90	5.00	51.30	7.20									
					4.00	3.20	7.20	4.80	4.60	4.60	5.80	22.00	9.60	5.20	49.30	7.70									
					4.40	2.20	7.80	5.20	3.20	4.90	6.00	20.60	9.90	5.40	46.50	8.20									
					-	-	-	5.60	1.60	5.30	-	-	-	5.60	43.70	8.60									
					-	-	-	5.80	0.80	5.40	-	-	-	5.80	41.30	8.90									
					-	-	-	-	-	-	-	-	-	6.00	39.00	9.30									
					60°	136. 425. xx. A2	○	○	0.5	080	6.50	1.20	1.40	9.40	1.70	2.40	13.20	2.50	2.40	16.10	2.50	1.20	0.70	155	195
										1.20	5.50	1.60	1.80	8.70	2.10	2.60	12.90	2.70	2.80	15.50	2.90	2.20	1.50	165	255
										1.60	4.70	1.90	2.20	7.90	2.40	3.00	12.30	3.00	3.20	15.00	3.20	3.00	2.00	170	265
										2.00	4.00	2.30	2.60	7.20	2.70	3.40	11.80	3.40	3.60	14.50	3.50	3.40	3.00	200	330
2.40	3.20	2.60	3.00	6.40						3.10	3.80	11.10	3.70	4.00	13.90	3.80	5.60	4.00	200	330					
2.80	2.60	2.90	3.40	5.70						3.40	4.20	10.40	4.00	4.40	13.40	4.10									
3.00	2.20	3.10	3.80	5.10						3.70	4.60	9.80	4.30	4.80	12.80	4.50									
-	-	-	4.00	4.80						3.90	5.00	9.20	4.60	5.20	12.20	4.80									
-	-	-	4.40	4.20						4.20	5.40	8.60	5.00	5.60	11.70	5.10									
-	-	-	4.80	3.60						4.50	5.80	8.10	5.30	6.00	11.20	5.40									
-	-	-	5.20	2.80						4.80	6.00	7.80	5.40	-	-	-									
-	-	-	5.60	2.20						5.10	-	-	-	-	-	-									
-	-	-	6.00	1.60						5.50	-	-	-	-	-	-									
136. 452. xx. A2	○	○	1.5	1.00		18.80	3.90	1.80	31.00	5.30	3.20	50.10	7.70	3.80	70.70	8.20	1.00	0.70	130	185					
				1.40		8.60	5.70	2.00	25.40	6.30	3.60	39.50	9.40	4.20	58.60	9.60	1.80	1.50	150	240					
				1.80		7.40	7.00	2.20	20.10	7.20	4.00	31.30	11.20	4.60	48.60	11.20	2.60	2.00	155	245					
				2.20		4.10	8.40	2.40	15.50	8.00	4.40	24.00	12.90	5.00	41.20	13.10	3.60	3.00	175	280					
				2.60		1.00	9.80	2.60	12.40	8.90	4.80	17.70	14.50	5.40	33.60	14.80	5.00	4.00	180	285					
				2.80		0.10	10.30	2.80	10.40	9.60	5.20	13.40	16.00	5.80	27.50	16.40									
				-		-	-	-	-	-	5.60	10.60	17.50	6.00	24.40	17.20									
				-		-	-	-	-	-	6.00	8.60	18.80	-	-	-									
80°	136. 433. xx. A2	○	○	0.4	1.00	11.60	2.00	1.80	18.30	2.80	3.00	31.00	3.70	3.80	37.50	4.40	1.40	0.70	150	210					
					1.20	8.10	2.40	2.00	15.30	3.20	3.40	25.40	4.40	4.20	32.40	5.00	2.20	1.50	185	255					
					1.40	5.30	2.80	2.20	12.20	3.60	3.80	20.60	5.10	4.60	27.70	5.70	3.00	2.00	205	300					
					1.60	3.70	3.20	2.40	9.80	4.00	4.20	16.30	5.90	5.00	23.40	6.50	3.80	4.00	300	485					
					-	-	-	2.60	7.60	4.30	4.60	12.50	6.60	5.40	19.40	7.20	5.20	4.00	260	395					
					-	-	-	2.80	5.90	4.70	5.00	9.30	7.30	5.80	15.90	7.90									
					-	-	-	3.00	4.40	5.00	5.40	6.50	8.00	6.00	14.20	8.30									
					-	-	-	-	-	-	-	-	-	-	-	-									
					-	-	-	-	-	-	-	-	-	-	-	-									
					-	-	-	-	-	-	-	-	-	-	-	-									

E = narrowest free cross section (water)



Example Type + Material no. (xx) = Ordering no.
for ordering: 136. 462. xx. A2 + 1Y = 136. 462. 1Y. A2



Accessories for pneumatic atomizing nozzles


Series 136

Regulating device and shutting-off needle:

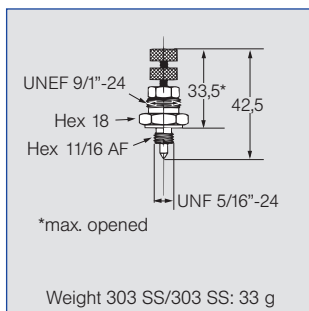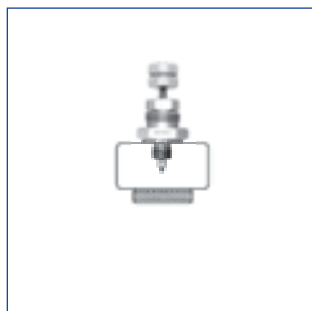


Ordering no.		For all nozzles of the series 136
Type	Mat. no.	
	16 303 SS	
015. 600	●	

Pneumatically controlled valve Opening pressure 2.1 bar, max. 180 cycles/min.

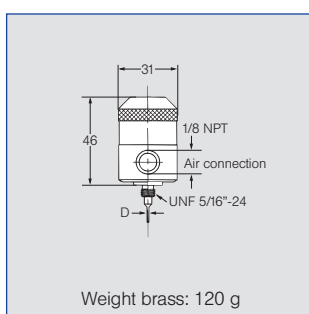


Ordering no.		For nozzles	Needle diameter D [mm]
Type	Mat. no.		
	16 35 303 SS Brass plated		
013. 601. xx. 10	● ●	136. xx1	2.1
013. 602. xx. 10	● ●	136. xx2	1.2
013. 604. xx. 10	● ●	136. xx4	0.6

Quick-cleaning device

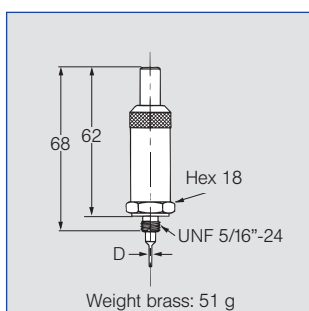

Ordering no.		For nozzles	Needle diameter D [mm]
Type	Mat. no.		
	16 35 303 SS Brass plated		
013. 601. xx. 20	● ●	136. xx1	2.1
013. 602. xx. 20	● ●	136. xx2	1.2
013. 604. xx. 20	● ●	136. xx4	0.6

Regulating device with quick-cleaning needle

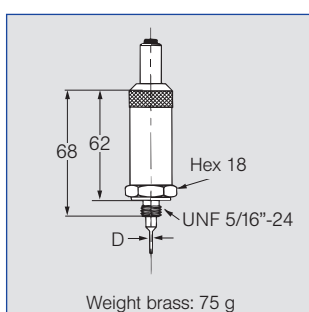

Ordering no.		For nozzles	Needle diameter D [mm]
Type	Mat. no.		
	16 35 303 SS Brass plated		
013. 601. xx. 30	● ●	136. xx1	2.1
013. 602. xx. 30	● ●	136. xx2	1.2
013. 604. xx. 30	● ●	136. xx4	0.6


Example Type + Material no. (xx) = Ordering no.
for ordering: 013. 601. xx. 10 + 16 = 013. 601. 16. 10



Accessories for pneumatic atomizing nozzles


Series 136

Screwed connection for hose diameter 6 mm

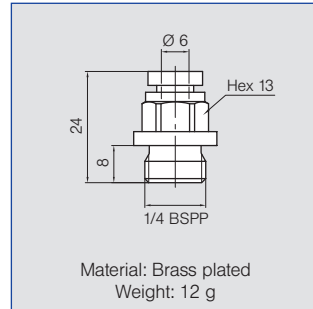


Ordering no.	For all nozzles of the series 136
095. 016. 35. 11. 79. 0	

Angled screwed connection for hose diameter 6 mm

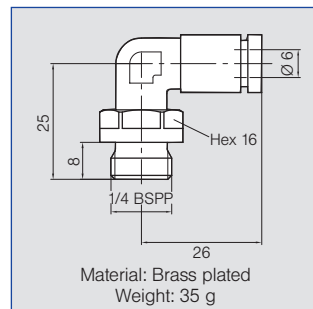


Ordering no.	For all nozzles of the series 136
095. 016. 35. 13. 13. 0	

Screwed connection for hose diameter 8 mm

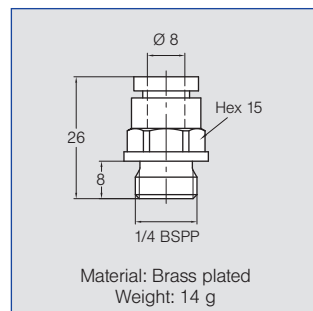

Ordering no.	For all nozzles of the series 136
095. 016. 35. 11. 80. 0	


Angled screwed connection for hose diameter 8 mm

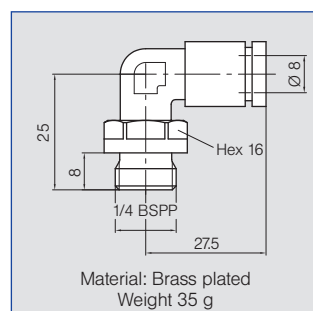

Ordering no.	For all nozzles of the series 136
095. 016. 35. 13. 14. 0	



Pneumatic atomizing nozzles, for atomizing viscous media Series 176 ViscoMist™

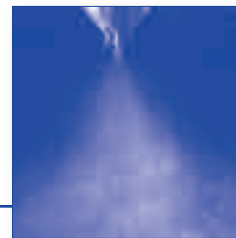

The ViscoMist™ series offers independent regulation of both atomising air and fan air, which provides the user with infinite control over the viscous fluid's spray pattern and droplet size.

The ViscoMist™ nozzle features a standard 'Liquid Shut-Off/ Clean-Out Needle' function. This design element activates and deactivates the liquid supply, while simultaneously removing excess fluid from the fluid nozzle preventing clogging. This feature is especially vital when the viscous liquids are being applied in continuous process environments.

The modular design of the ViscoMist™ allows maximum flexibility to meet the exact spray requirements.

Interchangeable air caps and various flow capacities are available to suit any spraying application needs.




One nozzle – three spray characters

- Solid stream
- Full cone
- Flat fan
- Independent regulation of liquid, atomising air and fan air
- Fluid circulation possible (Nozzle body with 5 connections)

Outside mixing to spray viscous liquids, for example:

- Coating
- Moisturising
- Lubrication
- Glazing
- Sanitising

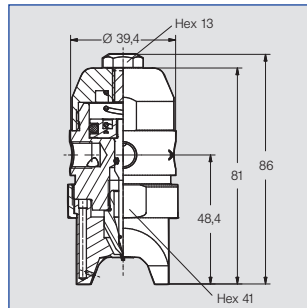

Fluid cap options

Ø 0.38 mm to 2.54 mm

Valve position

Normally closed, fail-safe with loss of air

Signal air pressure

Min. 1.5 bar
Max. 3 bar

Cycles per minute (short term)

180 cycles / min

Material

1Y (1.4404 (316L))
35 (Nickel plated brass))

Ports

01 (1/8" NPT (F))
11 (1/8" BSPP (F))






Flow rate range

- Water: 7.8 to 307 l/h, at 2 bar
- Air: 7.5 to 28.4 m³/h i.N., at 2 bar

Further information and ordering data on request.

Nozzle body configurations

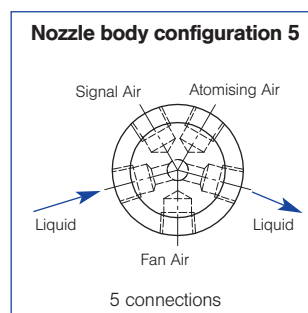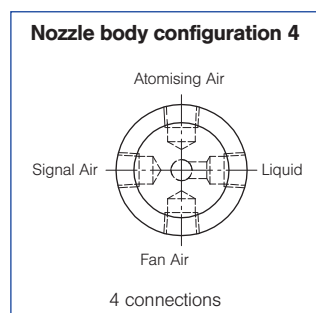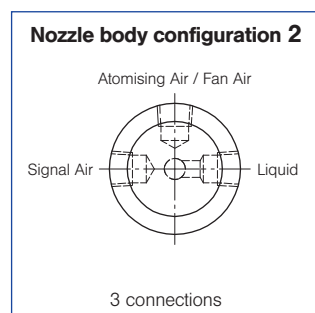



Axial-flow hollow cone nozzles

Series 212




Extremely fine, fog-like hollow cone spray.

Applications:
Disinfection, humidification of air, spraying over germinating boxes, product humidification, spraying of oil.




1/4 BSPP


1/4 BSPT

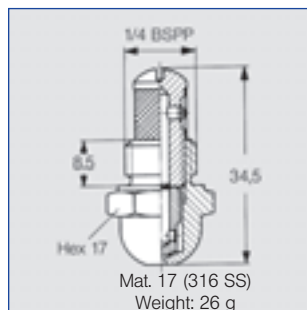

Mat. 17 (316 SS)
Weight: 26 g

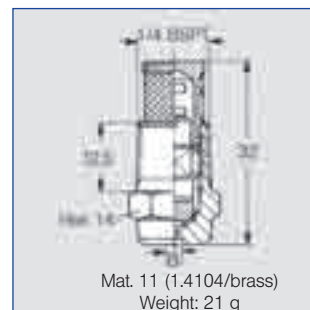

Mat. 11 (1.4104/brass)
Weight: 21 g

Spray angle	Ordering no.					B Ø [mm]	E Ø [mm]	ṽ [l/min]						Spray diameter D at p=7 bar  H = 100 mm
	Type	Mat. no.		Code				p [bar]						
		11 1.4104/Brass	17 316 SS	1/4 BSPP	1/4 BSPT									
								2.0	3.0	5.0	7.0	10.0	20.0	
60°	212. 004	-	○	AC	-	0.10	0.10	-	-	0.013	0.015	0.018	0.025	80
	212. 014	-	○	AC	-	0.15	0.15	-	-	0.019	0.023	0.027	0.039	80
	212. 054	-	○	AC	-	0.20	0.15	-	-	0.027	0.033	0.039	0.057	80
80°	212. 085	○*	○**	-	CC	0.25	0.25	-	-	0.040	0.047	0.057	0.080	140
	212. 125	○*	○**	AC	CC	0.35	0.25	-	0.048	0.062	0.073	0.088	0.124	140
	212. 145	○	-	-	CC	0.40	0.30	-	0.063	0.082	0.097	0.116	0.164	140
	212. 165	○	-	-	CC	0.45	0.30	-	0.080	0.103	0.122	0.146	0.206	140
	212. 185	○	-	-	CC	0.50	0.35	-	0.101	0.130	0.154	0.184	0.260	140
	212. 205	○	-	-	CC	0.60	0.35	0.107	0.131	0.168	0.199	0.238	0.336	140
	212. 245	○	-	-	CC	0.70	0.45	0.166	0.202	0.261	0.310	0.370	0.522	140
	212. 285	○*	○**	AC	CC	0.90	0.60	0.262	0.320	0.390	0.460	0.550	0.770	140

B = bore diameter · E = narrowest free cross section

*Only available with code CC

**Only available with code AC

The integrated strainer avoids clogging of the nozzle and increases its service life.

Example	Type	+	Material-No.	+	Code	=	Ordering no.
for ordering:	212. 004	+	17	+	AC	=	212. 004. 17. AC

Materials			
Material no.	Nozzle	Strainer holder	Strainer
11	1.4104	Messing	Monel
17	1.4571	316 SS	316 SS



Axial-flow hollow cone nozzles


Series 214 / 216




Fine, uniform hollow cone spray.

Applications:


Dust control, spraying onto filters, spray drying, hand disinfection.

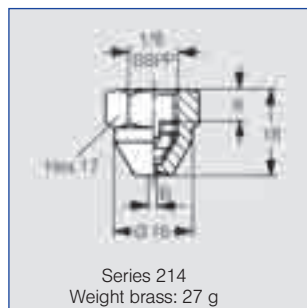

Series 214
Weight brass: 27 g

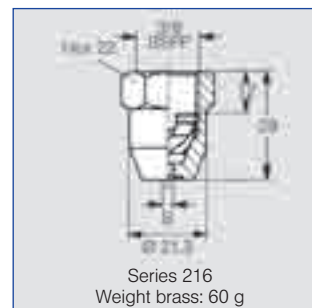

Series 216
Weight brass: 60 g

 Spray angle	Ordering no.			G	B Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray diameter D at p=3 bar  H = 250 mm
	Type	Mat. no.					p [bar]								
		17	30												
		316 SS	Brass												
				BSPP			0.5	1.0	2.0	3.0	5.0	10.0	20.0		
60°	214. 184	☐	☐	1/8"	0.50	0.50	-	-	0.08	0.10	0.13	0.18	0.25	200	
80°	214. 245	☐	☐	1/8"	1.00	0.50	-	-	0.16	0.20	0.25	0.36	0.51	450	
	214. 305	☐	☐	1/8"	1.80	0.50	-	0.23	0.32	0.39	0.51	0.72	1.01	450	
60°	216. 324	☐	☐	3/8"	1.00	1.00	-	0.28	0.40	0.49	0.63	0.89	1.26	200	
	216. 364	☐	☐	3/8"	1.40	1.40	-	0.45	0.63	0.77	1.00	1.41	1.99	200	
	216. 404	☐	☐	3/8"	2.00	2.00	-	0.71	1.00	1.22	1.58	2.24	3.16	200	
90°	216. 496	☐	☐	3/8"	3.00	2.00	-	1.20	1.70	2.08	2.69	3.80	5.38	500	
	216. 566	☐	☐	3/8"	4.00	2.00	-	1.77	2.50	3.06	3.95	5.59	7.91	500	
	216. 646	☐	☐	3/8"	3.50	2.00	2.00	2.83	4.00	4.90	6.32	8.94	12.65	500	
	216. 686	☐	☐	3/8"	4.00	2.00	2.50	3.54	5.00	6.12	7.91	11.18	15.81	500	
	216. 726	☐	☐	3/8"	5.00	2.00	3.15	4.45	6.30	7.72	9.96	14.09	19.92	500	
	216. 776	☐	☐	3/8"	6.00	2.00	4.30	6.00	8.50	10.40	13.40	19.00	26.90	500	

B = bore diameter · E = narrowest free cross section

Example	Type	+	Material no.	=	Ordering no.
for ordering	214. 184	+	17	=	214. 184. 17

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \sqrt{\frac{p_2}{p_1}}$



Tangential-flow hollow cone nozzles

Plastic version



Series 302




Uniform hollow cone spray. Non-clogging nozzle, with- out swirl insert.

Applications:

Dust control, spraying onto
filters, foam control, pasteuriza-
tion.

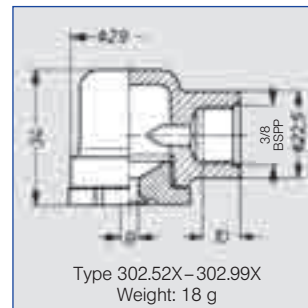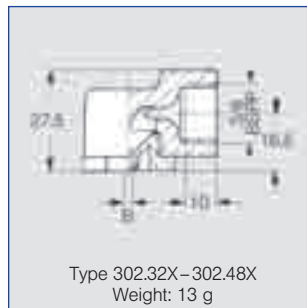

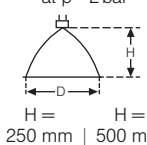Spray angle	Ordering no.				B Ø [mm]	E Ø [mm]	V̇ [l/min]							Spray diameter D at p=2 bar 	
	Type	Mat. no.					p [bar]								
		5E	51	53											
		P/DF	PA	PP			0.5	1.0	2.0	[US gal/ min] at 40 psi	3.0	5.0	10.0	H = 250 mm	H = 500 mm
60°	302. 364	-	○	○	1.50	1.50	0.31	0.45	0.63	0.20	0.77	1.00	1.41	200	350
	302. 464	-	○	○	3.80	1.95	0.70	0.99	1.40	0.43	1.71	2.21	3.13	300	560
90°	302. 326	○	○	-	1.20	0.90	0.20	0.28	0.40	0.12	0.49	0.63	0.89	400	700
	302. 366	○	○	-	2.10	1.30	0.31	0.45	0.63	0.20	0.77	1.00	1.41	400	880
	302. 406	○	○	○	2.60	1.40	0.50	0.71	1.00	0.31	1.22	1.58	2.24	400	880
	302. 486	-	○	○	2.60	2.60	0.80	1.13	1.60	0.50	1.96	2.53	3.58	400	880
	302. 526	-	○	○	5.00	2.00	1.00	1.41	2.00	0.62	2.45	3.16	4.47	400	880
	302. 566	-	○	○	5.00	2.40	1.25	1.77	2.50	0.78	3.06	3.95	5.59	400	880
	302. 606	-	○	○	5.00	3.20	1.57	2.23	3.15	0.98	3.86	4.98	7.04	450	950
	302. 686	-	○	-	7.50	3.40	2.50	3.45	5.00	1.55	6.12	7.91	11.18	500	1050
	302. 766	-	○	-	9.00	4.30	4.00	5.66	8.00	2.48	9.80	12.65	17.89	500	1050
	302. 846	-	○	○	11.00	5.20	6.25	8.84	12.50	3.88	15.31	19.67	27.95	550	1130
302. 886	○	○	○	11.00	6.40	8.00	11.31	16.00	4.96	19.60	25.30	35.78	550	1130	
302. 966	-	○	-	11.00	8.60	12.50	17.68	25.00	7.75	30.62	39.53	55.90	550	1130	
130°	302. 328	○	-	-	1.35	0.80	0.20	0.28	0.40	0.12	0.49	0.63	0.89	700	1380
	302. 368	○	○	-	1.85	1.10	0.31	0.45	0.63	0.20	0.77	1.00	1.41	700	1380
	302. 408	○	○	-	3.65	1.30	0.50	0.71	1.00	0.31	1.22	1.58	2.24	700	1380
	302. 488	-	○	○	5.20	1.60	0.80	1.13	1.60	0.50	1.96	2.53	3.58	700	1380
	302. 528	-	○	-	5.00	2.00	1.00	1.41	2.00	0.62	2.45	3.16	4.47	700	1380
	302. 568	-	○	-	5.00	2.40	1.25	1.77	2.50	0.78	3.06	3.95	5.59	780	1520
	302. 608	○	○	○	5.00	3.20	1.57	2.23	3.15	0.98	3.86	4.98	7.04	780	1520
	302. 648	-	○	-	7.50	3.00	2.00	2.83	4.00	1.20	4.90	6.32	8.94	950	1850
	302. 688	-	○	-	7.50	3.40	2.50	3.54	5.00	1.55	6.12	7.91	11.18	950	1850
	302. 728	-	○	-	7.50	4.10	3.15	4.45	6.30	1.89	7.72	9.96	14.09	950	1850
	302. 768	-	○	-	9.00	4.30	4.00	5.66	8.00	2.48	9.80	12.65	17.89	950	1850
	302. 848	-	○	-	11.00	5.20	6.25	8.84	12.50	3.88	15.31	19.76	27.95	950	1850
	302. 888	-	○	○	11.00	6.40	8.00	11.31	16.00	4.96	19.60	25.30	35.78	950	1850
	302. 968	○	○	-	11.00	8.60	12.50	17.68	25.00	7.75	30.62	39.53	55.90	950	1850

B = bore diameter · E = narrowest free cross section

Example	Type	+	Material no.	=	Ordering no.
for ordering	302. 364	+	51	=	302. 364. 51



Axial-flow full cone nozzles

Series 490


NEW Patent pending



Non-clogging nozzle design.
Stable spray angle. Particularly even liquid distribution.


Applications:

Cleaning and washing processes, surface spraying, bottle cleaning, keg cleaning, sausage showers, foam control, degassing.

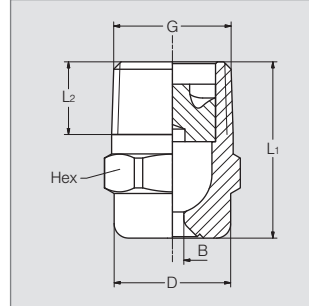

Series 490 represents a new generation within the axial-flow full cone nozzles product group. These nozzles were developed using state-of-the-art design and simulation methods (CFD) and in practical operation they impress with their advantages.

Code	G	Dimensions [mm]			Hex	Weight 316 L
		L ₁	L ₂	D		
CA	1/8" BSPT	18.0	6.5	10.0	11	13 g
CC	1/4" BSPT	22.0	10.0	13.0	14	16 g
CE	3/8" BSPT	24.5	10.0	16.0	17	28 g

Spray angle	Ordering no.						B Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray diameter D at p=2 bar 	
	Type	Mat. no.		Code					p [bar]									
		30	1Y	1/8" BSPT	1/4" BSPT	3/8" BSPT												
		Brass	316 L						0.5	1.0	2.0	3.0	5.0	7.0	10.0	H = 200 mm	H = 500 mm	
60°	490.404	○	○	CA	-	-	1.10	1.10	0.57	0.76	1.00	1.18	1.44	1.65	1.90	220	560	
	490.444	○	○	CA	-	-	1.30	1.30	0.82	0.95	1.25	1.47	1.80	2.06	2.38	220	560	
	490.484	○	○	CA	-	-	1.40	1.40	0.92	1.21	1.60	1.88	2.31	2.64	3.05	220	560	
	490.524	○	○	CA	-	-	1.60	1.60	1.15	1.52	2.00	2.35	2.89	3.30	3.81	220	560	
	490.564	○	○	CA	-	-	1.80	1.80	1.44	1.89	2.50	2.94	3.61	4.13	4.76	220	560	
	490.604	○	○	CA	CC	CE	2.10	2.10	1.81	2.39	3.15	3.70	4.54	5.20	6.00	220	560	
	490.644	○	○	-	CC	CE	2.30	2.30	2.30	3.03	4.00	4.70	5.77	6.60	7.61	220	560	
	490.684	○	○	-	CC	CE	2.60	2.60	2.87	3.79	5.00	5.88	7.21	8.25	9.52	220	560	
	490.724	○	○	-	CC	CE	3.00	2.80	3.62	4.77	6.30	7.41	9.09	10.40	11.99	220	560	
	490.764	○	○	-	-	CE	3.30	3.30	4.59	6.06	8.00	9.41	11.54	13.20	15.22	220	560	
490.804	○	○	-	-	CE	3.70	3.70	5.74	7.58	10.00	11.76	14.43	16.51	19.04	220	560		
90°	490.406	○	○	CA	-	-	1.20	1.20	0.57	0.76	1.00	1.18	1.44	1.65	1.90	380	860	
	490.446	○	○	CA	-	-	1.20	1.20	0.82	0.95	1.25	1.47	1.80	2.06	2.38	380	860	
	490.486	○	○	CA	-	-	1.50	1.50	0.92	1.21	1.60	1.88	2.31	2.64	3.05	380	960	
	490.526	○	○	CA	-	-	1.70	1.70	1.15	1.52	2.00	2.35	2.89	3.30	3.81	380	860	
	490.566	○	○	CA	-	-	1.90	1.90	1.44	1.89	2.50	3.61	2.94	4.13	4.76	380	860	
	490.606	○	○	CA	-	CE	2.10	2.10	1.81	2.39	3.15	4.54	3.70	5.20	6.00	380	860	
	490.646	○	○	-	CC	CE	2.40	2.40	2.30	3.03	4.00	5.77	4.70	6.60	7.61	390	960	
	490.686	○	○	-	CC	CE	2.70	2.70	2.87	3.79	5.00	7.21	5.88	8.25	9.52	390	960	
	490.726	○	○	-	CC	CE	3.20	2.80	3.62	4.77	6.30	9.09	7.41	10.40	11.99	390	960	
	490.746	○	○	-	-	CE	3.20	3.20	4.08	5.38	7.10	10.24	8.35	11.72	13.52	390	960	
	490.766	○	○	-	-	CE	3.40	3.40	4.59	6.06	8.00	11.54	9.41	13.20	15.22	390	960	
	490.806	○	○	-	-	CE	3.90	3.90	5.74	7.58	10.00	14.43	11.76	16.51	19.04	390	960	
	490.846	○	○	-	-	CE	4.70	4.00	7.18	9.47	12.50	18.03	14.70	20.63	23.80	390	960	

B = bore diameter · E = narrowest free cross section

Continued on next page.

Example	Type	+	Material no.	+	Code	=	Ordering no.
for ordering:	490.404	+	1Y	+	CA	=	490.404.1Y.CA

Other nozzle sizes and materials are available on request.

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \left(\frac{p_2}{p_1} \right)^{0.4}$
(≤ 10 bar)




Axial-flow full cone nozzles

Series 490

NEW Patent pending



Strahlwinkel	Ordering no.						B Ø [mm]	E Ø [mm]	ṽ [l/min]								Spray diameter D at p=2 bar 	
	Type	Mat. no.		Code					p [bar]									
		30	1Y	1/8" BSPT	1/4" BSPT	3/8" BSPT												
120°	490.368	○	○	CA	-	-	0.80	0.60	0.36	0.50	0.63	0.74	0.91	1.04	1.20	680	1220	
	490.448	○	○	CA	-	-	1.30	1.30	0.82	0.95	1.25	1.47	1.80	2.06	2.38	680	1220	
	490.488	○	○	CA	-	-	1.50	1.50	0.92	1.21	1.60	1.88	2.31	2.64	3.05	680	1220	
	490.528	○	○	CA	-	-	1.70	1.70	1.15	1.52	2.00	2.35	2.89	3.30	3.81	680	1220	
	490. 568	○	○	CA	-	-	1.90	1.90	1.44	1.89	2.50	2.94	3.61	4.13	4.76	680	1220	
	490. 608	○	○	CA	-	-	2.10	2.10	1.81	2.39	3.15	3.70	4.54	5.20	6.00	680	1220	
	490. 648	○	○	-	CC	CE	2.40	2.40	2.30	3.03	4.00	4.70	5.77	6.60	7.61	680	1330	
	490. 688	○	○	-	CC	CE	2.80	2.80	2.87	3.79	5.00	5.88	7.21	8.25	9.52	680	1330	
	490. 728	○	○	-	CC	CE	3.20	2.80	3.62	4.77	6.30	7.41	9.09	10.40	11.99	680	1330	
	490. 748	○	○	-	-	CE	3.20	3.20	4.08	5.38	7.10	8.35	10.24	11.72	13.52	680	1330	
	490. 768	○	○	-	-	CE	3.50	3.50	4.59	6.44	8.00	9.41	11.54	13.20	15.22	680	1330	
	490. 808	○	○	-	-	CE	3.90	3.90	5.74	7.58	10.00	11.76	14.43	16.51	19.04	680	1330	
	490. 848	○	○	-	-	CE	4.70	4.00	7.18	9.47	12.50	14.70	18.03	20.63	23.80	680	1330	

B = bore diameter · E = narrowest free cross section


Other nozzle sizes and materials are available on request.

Example	Type	+	Material no.	+	Code	=	Ordering no.
for ordering:	490.368	+	1Y	+	CA	=	490.368.1Y.CA


Series 490 represents a new generation within the axial-flow full cone nozzles product group. These nozzles were developed using state-of-the-art design and simulation methods (CFD) and in practical operation they impress with their advantages.



Simulation of the spray jet with CFD (computational fluid dynamics)

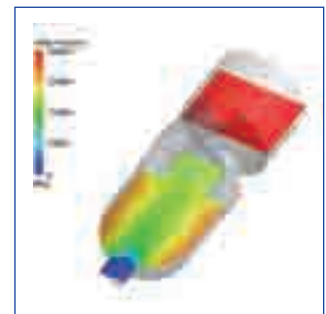

Simulation of the static pressure in the vortex chamber with CFD

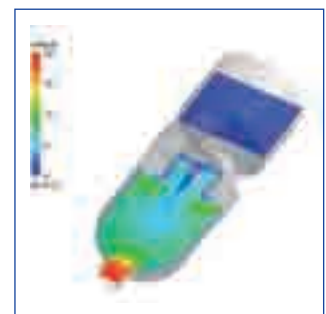

Simulation of the velocity curve in the vortex chamber with CFD



Tangential-flow full cone nozzles


Series 422



Tangentially arranged liquid supply. Without swirl inserts. Non-clogging. Stable spray angle. Uniform spray.

Applications:

Cleaning and washing processes, surface spraying, bottle cleaning, keg cleaning, sausage showers, foam control, degassing.

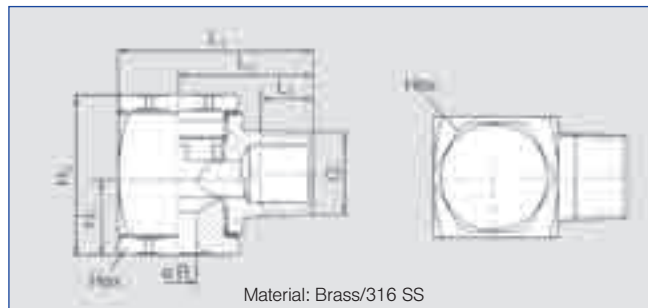

Material: Brass/316 SS

Dimensions [mm]							Weight Brass
G	L ₁	L ₂	L ₃	H ₁	H ₂	Hex	
1/4 BSPT	28.0	20.0	10.0	8.0	20.5	12.0	43 g
3/8 BSPT	36.0	25.0	10.0	11.0	26.5	19.0	105 g
1/2 BSPT	48.5	33.5	13.0	20.0	38.5	27.0	250 g
3/4 BSPT	58.0	38.0	14.5	23.5	57.0	36.0	660 g
1 BSPT	76.0	48.5	17.0	27.5	66.0	41.0	1,330 g

Spray angle	Ordering no.								B Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray diameter D at p=1-10 bar 	
	Type	Mat.-no.		Code				p [bar]												
		30	17 ¹⁾	316 SS/316L	1/4 BSPT	3/8 BSPT	1/2 BSPT	3/4 BSPT			1 BSPT	[US gal./min] at 40 psi							H = 200 mm	H = 500 mm
												0.5	1.0	2.0	3.0	5.0	10.0			
60°	422. 644	○	○	-	CE	-	-	-	3.00	3.00	2.00	2.83	4.00	1.24	4.90	6.32	8.94	225	510	
90°	422. 406	○	○	CC	-	-	-	-	1.50	1.45	0.50	0.71	1.00	0.31	1.22	1.58	2.24	380	860	
	422. 486	-	○	CC	-	-	-	-	1.90	1.80	0.80	1.13	1.60	0.50	1.96	2.53	3.58	380	860	
	422. 566	○	○	CC	-	-	-	-	2.30	2.20	1.25	1.77	2.50	0.78	3.06	3.95	5.59	380	860	
	422. 606	○	○	-	CE	-	-	-	2.60	2.50	1.57	2.23	3.15	0.98	3.86	4.98	7.04	380	860	
	422. 646	○	○	-	CE	-	-	-	3.00	2.90	2.00	2.83	4.00	1.24	4.90	6.32	8.94	390	960	
	422. 726	○	-	-	CE	-	-	-	3.70	3.60	3.15	4.45	6.30	1.95	7.72	9.96	14.09	390	960	
	422. 766	-	○	-	CE	-	-	-	4.15	4.10	4.00	5.66	8.00	2.48	9.80	12.65	17.89	390	960	
	422. 806	○	-	-	CE	-	-	-	4.65	4.60	5.00	7.07	10.00	3.10	12.25	15.81	22.36	390	960	
	422. 846	○	○	-	CE	-	-	-	5.20	5.10	6.25	8.84	12.50	3.88	15.31	19.76	27.95	390	960	
422. 886	○	○	-	CE	-	-	-	5.80	5.70	8.00	11.31	16.00	4.96	19.60	25.30	35.78	390	960		
422. 966	-	○	-	-	CG	-	-	-	8.00	8.00	12.50	17.68	25.00	7.75	30.62	39.53	55.90	390	960	
120°	422. 488	○	-	CC	-	-	-	-	1.90	1.80	0.80	1.13	1.60	0.50	1.96	2.53	3.58	680	1220	
	422. 568	○	○	CC	-	-	-	-	2.30	2.20	1.25	1.77	2.50	0.78	3.06	3.95	5.59	680	1220	
	422. 608	○	-	-	CE	-	-	-	2.60	2.50	1.57	2.23	3.15	0.98	3.86	4.98	7.04	680	1600	
	422. 728	○	○	-	CE	-	-	-	3.70	3.60	3.15	4.45	6.30	1.95	7.72	9.96	14.09	680	1600	
	422. 808	-	○	-	CE	-	-	-	4.65	4.60	5.00	7.07	10.00	3.10	12.25	15.81	22.36	680	1600	
	422. 848	○	○	-	CE	-	-	-	5.20	5.10	6.25	8.84	12.50	3.88	15.31	19.76	27.95	680	1600	
	422. 888	○	○	-	CE	-	-	-	5.80	5.70	8.00	11.31	16.00	4.96	19.60	25.30	35.78	680	1600	
	422. 928	-	○	-	-	CG	-	-	7.30	7.30	10.00	14.14	20.00	6.20	24.49	31.62	44.72	680	1600	
	422. 968	○	○	-	-	CG	-	-	8.00	8.00	12.50	17.68	25.00	7.75	30.62	39.53	55.90	680	1600	
	423. 008	-	○	-	-	CG	-	-	8.70	8.70	15.75	22.27	31.50	9.77	38.88	49.81	70.44	680	1600	
	423.128	-	○	-	-	-	CK	-	12.70	12.30	31.50	44.55	63.00	19.54	77.16	99.61	140.87	680	1600	
	423.208	-	○	-	-	-	-	CM	19.00	16.00	50.00	70.71	100.00	31.00	122.47	158.11	223.61	680	1600	

¹⁾ We reserve the right to deliver 316 SS or 316 L under the material no. 17.
B = bore diameter · E = narrowest free cross section

Example Type + Material-no. + Code = Ordering no.
for ordering: 422. 644 + 30 + CE = 422. 644. 30. CE

Plastic version see next page.


Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 * \left(\frac{p_2}{p_1} \right)^{0.4}$
(≤ 10 bar)



Tangential-flow full cone nozzles

Plastic version


Series 422/423

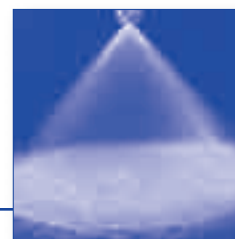

Tangentially arranged liquid supply. Without swirl inserts. Non-clogging. Stable spray angle. Uniform spray.

Applications:

Cleaning and washing processes, surface spraying, bottle cleaning, keg cleaning, sausage showers, foam control, degassing, pasteurization.

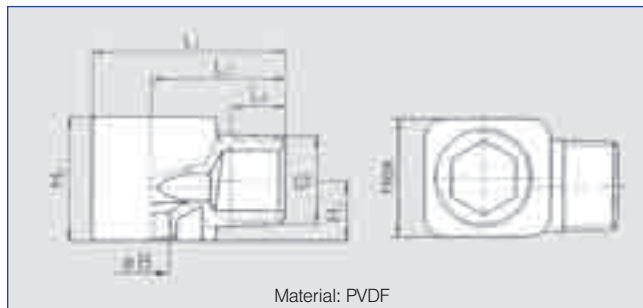

Material: PVDF

Dimensions [mm]							Weight PVDF
G	L ₁	L ₂	L ₃	H ₁	H ₂	Hex	
1/4 BSPT	28.0	20.0	9.8	8.0	16.0	16.0	7 g
3/8 BSPT	36.0	25.0	10.1	11.2	23.0	22.0	16 g
1/2 BSPT	49.5	33.5	13.2	19.2	38.0	32.0	40 g
3/4 BSPT	58.5	38.5	18.5	24.5	50.0	41.0	50 g

Spray angle	Ordering no.						B Ø [mm]	E Ø [mm]	V̇ [l/min]							Spray diameter D at p=1-10 bar  H = 200 mm H = 500 mm	
	Type	Mat. Nr. 5E	Code						p [bar]								
			PVDF	1/4 BSPT	3/8 BSPT	1/2 BSPT			3/4 BSPT	[US gal/ min] at 40 psi							
										0.5	1.0	2.0	3.0	5.0	10.0		
60°	422. 724	○	-	CE	-	-	3.60	3.60	3.15	4.45	6.30	1.95	7.72	9.96	14.09	225	510
90°	422. 406	○	CC	-	-	-	1.50	1.45	0.50	0.71	1.00	0.31	1.22	1.58	2.24	380	860
	422. 566	○	CC	-	-	-	2.30	2.20	1.25	1.77	2.50	0.78	3.06	3.95	5.59	380	860
	422. 606	○	-	CE	-	-	2.60	2.50	1.57	2.23	3.15	0.98	3.86	4.98	7.04	380	860
	422. 646	○	-	CE	-	-	3.00	2.90	2.00	2.83	4.00	1.24	4.90	6.32	8.94	390	960
	422. 726	○	-	CE	-	-	3.70	3.60	3.15	4.45	6.30	1.95	7.72	9.96	14.09	390	960
	422. 806	○	-	CE	-	-	4.65	4.60	5.00	7.07	10.00	3.10	12.25	15.81	22.36	390	960
	422. 846	○	-	CE	-	-	5.20	5.10	6.25	8.84	12.50	3.88	15.31	19.76	27.95	390	960
	422. 886	○	-	CE	-	-	5.80	5.70	8.00	11.31	16.00	4.96	19.60	25.30	35.78	390	960
	422. 926	○	-	-	CG	-	7.30	7.30	10.00	14.14	20.00	6.20	24.49	31.62	44.72	390	960
	422. 966	○	-	-	CG	-	8.00	8.00	12.50	17.68	25.00	7.75	30.62	39.53	55.90	390	960
423. 006	○	-	-	CG	-	8.70	8.70	15.75	22.27	31.50	9.77	38.58	49.81	70.44	390	960	
423. 126	○	-	-	-	CK	12.00	12.00	31.50	44.55	63.00	19.54	77.16	99.61	140.87	390	960	
120°	422. 408	○	CC	-	-	-	1.50	1.45	0.50	0.71	1.00	0.31	1.22	1.58	2.24	680	1220
	422. 448	○	CC	-	-	-	1.65	1.60	0.62	0.88	1.25	0.39	1.53	1.98	2.80	680	1220
	422. 488	○	CC	-	-	-	1.90	1.80	0.80	1.13	1.60	0.50	1.96	2.53	3.58	680	1220
	422. 568	○	CC	-	-	-	2.30	2.20	1.25	1.77	2.50	0.78	3.06	3.95	5.59	680	1220
	422. 728	○	-	CE	-	-	3.70	3.60	3.15	4.45	6.30	1.95	7.72	9.96	14.09	680	1600
	422. 888	○	-	CE	-	-	5.80	5.70	8.00	11.31	16.00	4.96	19.60	25.30	35.78	680	1600
	422. 968	○	-	-	CG	-	8.00	8.00	12.50	17.68	25.00	7.75	30.62	39.53	55.90	680	1600
	423. 008	○	-	-	CG	-	8.70	8.70	15.75	22.27	31.50	9.77	38.58	49.81	70.44	680	1600
	423. 128	○	-	-	-	CK	12.70	12.30	31.50	44.55	63.00	19.54	77.16	99.61	140.87	680	1600


B = bore diameter · E = narrowest free cross section

Example of ordering: Type 422. 724 + Material-no. 5E + Code CE = Ordering no. 422. 724. 5E. CE



Flat fan nozzles




Series 632/633

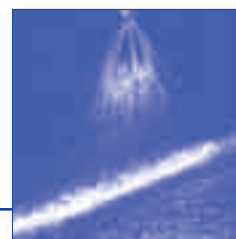



Standard design with conical, self-sealing thread connection. Stable spray angle. Uniform, parabolical distribution of liquid. Spray pipes equipped with these nozzles show an extremely uniform total distribution of liquid.


Applications:

Cleaning (e.g. surfaces, filters, belts), crate washers, lubricating, coating.

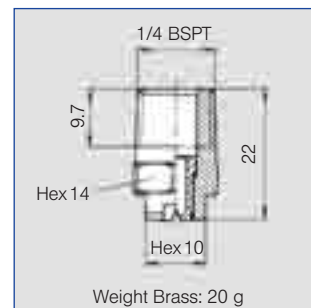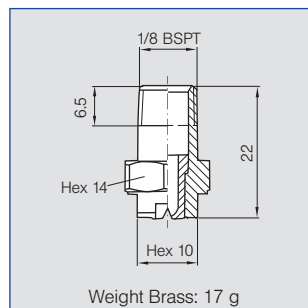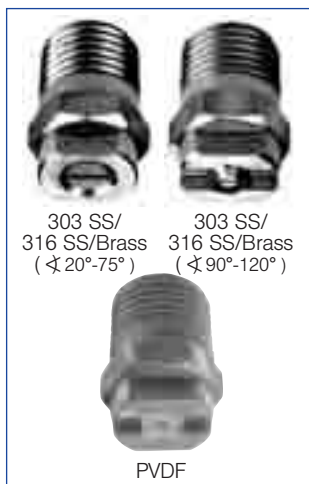

Version with short length on request.

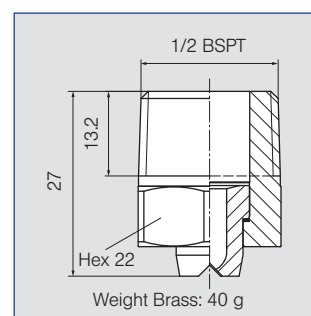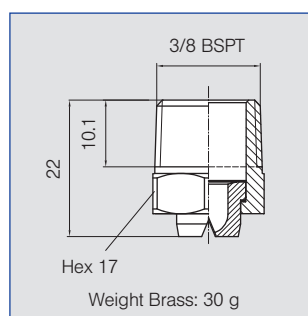

Spray angle	A Ø [mm]	E Ø [mm]	V̇ [l/min]																Spray width B at p = 2 bar 		
			Type	Material-no.				Code				p [bar]									
				16	17 ¹⁾	30	5E														
			303 SS	316 SS/316 L	Brass	PVDF	1/8 BSPT	1/4 BSPT	3/8 BSPT	1/2 BSPT	0.5	1.0	2.0	3.0	5.0	7.0	10.0	H= 250 mm	H= 500 mm		
20°	632. 301	○	○	○	○	CA	CC	-	-	0.70	0.60	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	65	120	
	632. 361	○	○	○	○	CA	CC	-	-	1.00	0.80	0.31*	0.44*	0.63	0.77	1.00	1.18	1.40	70	130	
	632. 441	○	○	○	○	CA	CC	-	-	1.35	1.10	0.62*	0.88	1.25	1.53	1.98	2.34	2.80	75	145	
	632. 481	○	○	○	○	CA	CC	-	-	1.50	1.20	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	75	150	
30°	632. 302	○	○	○	○	CA	CC	-	-	0.60	0.50	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	120	235	
	632. 362	○	○	○	○	CA	CC	-	-	1.00	0.70	0.31*	0.44*	0.63	0.77	1.00	1.18	1.40	120	235	
	632. 402	○	○	○	○	CA	CC	-	-	1.20	0.90	0.50*	0.71	1.00	1.23	1.58	1.87	2.24	120	235	
	632. 482	○	○	○	○	CA	CC	-	-	1.50	1.10	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	120	235	
	632. 562	○	○	○	○	CA	CC	-	-	2.00	1.50	1.25	1.77	2.50	3.06	3.95	4.68	5.59	120	235	
	632. 642	○	○	○	-	-	CC	-	-	2.50	1.80	2.00	2.83	4.00	4.90	6.33	7.48	8.94	120	240	
	632. 722	○	○	○	-	-	CC	-	-	3.00	2.40	3.15	4.46	6.30	7.72	9.96	11.79	14.09	125	240	
	632. 762	○	○	○	-	-	CC	-	-	3.50	2.70	4.00	5.66	8.00	9.80	12.65	14.97	17.89	125	240	
	632. 802	○	○	○	-	-	CC	-	-	4.00	3.10	5.00	7.07	10.00	12.25	15.81	18.71	22.36	130	250	

¹⁾ We reserve the right to deliver 316 SS or 316 L under the material no. 17.

A = Equivalent bore diameter · E = narrowest free cross section

*Differing spray pattern

Subject to technical modifications.


Continued on next page.


Example **Type** + **Material-no.** + **Code** = **Ordering no.**
for ordering: 632. 301 + 16 + CA = 632. 301. 16. CC

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \sqrt{\frac{p_2}{p_1}}$

Flat fan nozzles

Series 632/633

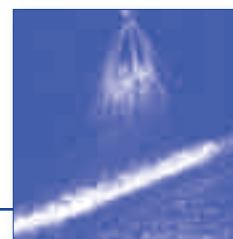

Spray angle	Ordering no.								A Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray width B at p = 2 bar 	
	Type	Material-no.				Code					p [bar]									
		16	17 ¹⁾	30	5E															
		303 SS	316 SS/316 L	Brass	PVDF	1/8 BSPT	1/4 BSPT	3/8 BSPT			1/2 BSPT	0.5	1.0	2.0	3.0	5.0	7.0	10.0	H= 250 mm	H= 500 mm
45°	632. 303	○	○	○	-	CA	CC	-	-	0.70	0.50	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	150	270
	632. 363	○	○	○	○	CA	CC	-	-	1.00	0.60	0.31*	0.44*	0.63	0.77	1.00	1.18	1.40	155	280
	632. 403	○	○	○	○	CA	CC	-	-	1.20	0.90	0.50*	0.71	1.00	1.23	1.58	1.87	2.24	175	320
	632. 483	○	○	○	○	CA	CC	-	-	1.50	1.10	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	180	340
	632. 563	○	○	○	○	CA	CC	-	-	2.00	1.40	1.25	1.77	2.50	3.06	3.95	4.68	5.59	185	355
	632. 643	○	○	○	○	CA	CC	-	-	2.50	1.80	2.00	2.83	4.00	4.90	6.33	7.48	8.94	195	370
	632. 673	○	○	○	-	-	CC	CE	-	2.70	2.00	2.83	3.36	4.75	5.82	7.51	8.89	10.62	200	375
	632. 723	○	○	○	-	-	CC	CE	-	3.00	2.40	3.15	4.46	6.30	7.72	9.96	11.79	14.09	200	375
	632. 763	○	○	○	-	-	CC	CE	-	3.50	2.60	4.00	5.66	8.00	9.80	12.65	14.97	17.89	200	380
	632. 803	○	○	○	-	-	CC	CE	CG	4.00	3.00	5.00	7.07	10.00	12.25	15.81	18.71	22.36	205	385
	632. 843	○	○***	○	-	-	CC	-	CG	4.50	3.40	6.25	8.84	12.50	15.31	19.76	23.39	27.95	205	385
	632. 883	○	○	○	-	-	-	-	CG	5.00	3.80	8.00	11.31	16.00	19.60	25.30	29.93	35.78	220	440
	632. 923	○	○	○	-	-	-	-	CG	5.50	4.20	10.00	14.14	20.00	24.50	31.62	37.42	44.72	220	440
632. 963	○	○	○	-	-	-	-	CG	6.00	4.40	12.50	17.68	25.00	30.62	39.53	46.77	55.90	220	440	
60°	632. 304	○	○	○	○	CA	CC	-	-	0.70	0.40	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	215	425
	632. 334	○	○	○	○	CA	CC	-	-	0.90	0.50	0.22*	0.32*	0.45	0.55	0.71	0.84	1.01	220	440
	632. 364	○	○	○	○	CA	CC	-	-	1.00	0.60	0.31*	0.44*	0.63	0.77	1.00	1.18	1.40	230	460
	632. 404	○	○	○	○	CA	CC	-	-	1.20	0.80	0.50*	0.71	1.00	1.23	1.58	1.87	2.24	245	485
	632. 444	○	○	○	○	CA	CC	-	-	1.35	0.90	0.62*	0.88	1.25	1.53	1.98	2.34	2.80	255	495
	632. 484	○	○	○	○	CA	CC	-	-	1.50	1.00	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	260	510
	632. 514	○	○	○	○	CA	CC	-	-	1.65	1.10	0.95*	1.34	1.90	2.33	3.00	3.56	4.25	270	520
	632. 564	○	○	○	○	CA	CC	-	-	2.00	1.30	1.25	1.77	2.50	3.06	3.95	4.68	5.59	280	535
	632. 604	○	○	○	○	CA	CC	-	-	2.20	1.50	1.58	2.23	3.15	3.86	4.98	5.89	7.04	290	550
	632. 644	○	○	○	○**	-	CC	CE	-	2.50	1.60	2.00	2.83	4.00	4.90	6.33	7.48	8.94	295	565
	632. 674	○	○	○	○**	-	CC	CE	-	2.70	1.80	2.38	3.36	4.75	5.82	7.51	8.89	10.62	300	575
	632. 724	○	○	○	○**	-	CC	CE	-	3.00	2.10	3.15	4.46	6.30	7.72	9.96	11.79	14.09	305	590
	632. 764	○	○	○	-	-	CC	CE	-	3.50	2.30	4.00	5.66	8.00	9.80	12.65	14.97	17.89	310	595
	632. 804	○	○***	○	○**	-	CC	-	CG	4.00	2.60	5.00	7.07	10.00	12.25	15.81	18.71	22.36	310	595
	632. 844	○	○***	○	○**	-	CC	-	CG	4.50	3.00	6.25	8.84	12.50	15.31	19.76	23.39	27.95	310	590
	632. 884	○	○***	○	○**	-	CC	-	CG	5.00	3.40	8.00	11.31	16.00	19.60	25.30	29.93	35.78	300	570
	632. 924	○	○	○	-	-	-	-	CG	5.50	4.10	10.00	14.14	20.00	24.50	31.62	37.42	44.72	330	630
	632. 964	○	○	○	-	-	-	-	CG	6.00	4.20	12.50	17.68	25.00	30.62	39.53	46.77	55.90	330	630
	633. 004	○	○	-	-	-	-	-	CG	7.00	4.80	15.75	22.27	31.50	38.57	49.80	58.92	70.43	330	630
633. 044	○	○	○	-	-	-	-	CG	8.00	5.50	20.00	28.28	40.00	48.99	63.25	74.83	89.44	340	640	
633. 084	○	○	○	-	-	-	-	CG	9.00	6.80	25.00	35.36	50.00	61.24	79.06	93.54	111.80	340	640	
75°	632. 145	○	-	○	-	CA	CC	-	-	0.20	0.12	-	0.04*	0.05	0.06	0.08	0.09	0.11	280	550
	632. 165	○	-	○	-	CA	CC	-	-	0.20	0.08	-	0.05*	0.07	0.08	0.10	0.12	0.15	290	560
	632. 185	○	-	○	-	CA	CC	-	-	0.20	0.15	-	0.06*	0.08	0.10	0.13	0.15	0.18	300	575
	632. 215	○	-	○	-	CA	CC	-	-	0.40	0.20	-	0.08*	0.11	0.14	0.18	0.21	0.25	300	580
	632. 245	○	-	○	-	CA	CC	-	-	0.50	0.30	-	0.12*	0.16	0.20	0.26	0.30	0.36	310	585
	632. 275	○	-	○	-	CA	CC	-	-	0.60	0.30	0.11*	0.16*	0.22	0.27	0.35	0.41	0.49	310	590

1) We reserve the right to deliver 316 SS or 316 L under the material no. 17.

A = Equivalent bore diameter · E = narrowest free cross section

*Differing spray pattern

**Only available with code CC.

*** Only available with code CG

Only available with code CG.
Subject to technical modifications.


Continued on next page.


Example	Type	+	Material-no.	+	Code	=	Ordering no.
for ordering:	632. 303.	+	16	+	CA	=	632. 303. 16. CA



Flat fan nozzles

Series 632/633

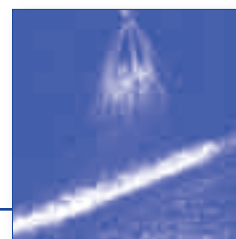

Spray angle	Ordering no.									A Ø [mm]	E Ø [mm]	V̇ [l/min]							Spray width B at p = 2 bar 	
	Type	Material-no.				Code						p [bar]								
		16	17 ¹⁾	30	5E															
		303 SS	316 SS/316 L	Brass	PVDF	1/8 BSPT	1/4 BSPT	3/8 BSPT	1/2 BSPT			0.5	1.0	2.0	3.0	5.0	7.0	10.0	H=250 mm	H=500 mm
90°	632. 216	○	-	○	-	CA	CC	-	-	0.40	0.20	-	0.08*	0.11	0.14	0.18	0.21	0.25	370	700
	632. 276	○	-	○	-	CA	CC	-	-	0.60	0.30	0.11*	0.16*	0.22	0.27	0.35	0.41	0.49	375	720
	632. 306	○	○	○	○	CA	CC	-	-	0.70	0.40	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	380	740
	632. 336	○	○	○	○	CA	CC	-	-	0.90	0.50	0.22*	0.32*	0.45	0.55	0.71	0.84	1.01	415	800
	632. 366	○	○	○	○	CA	CC	-	-	1.00	0.50	0.31*	0.44*	0.63	0.77	1.00	1.18	1.41	420	810
	632. 406	○	○	○	○	CA	CC	-	-	1.20	0.70	0.50*	0.71	1.00	1.23	1.58	1.87	2.24	430	820
	632. 446	○	○	○	○	CA	CC	-	-	1.35	0.80	0.62*	0.88	1.25	1.53	1.98	2.34	2.80	435	830
	632. 486	○	○	○	○	CA	CC	-	-	1.50	0.80	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	440	835
	632. 516	○	○	○	○	CA	CC	-	-	1.65	0.90	0.95*	1.34	1.90	2.33	3.00	3.56	4.25	440	840
	632. 566	○	○	○	○	CA	CC	-	-	2.00	1.10	1.25	1.77	2.50	3.06	3.95	4.68	5.59	445	850
	632. 606	○	○	○	○	CA	CC	-	-	2.20	1.20	1.58	2.23	3.15	3.86	4.98	5.89	7.04	450	860
	632. 646	○	○	○	○**	-	CC	CE	-	2.50	1.30	2.00	2.83	4.00	4.90	6.33	7.48	8.94	455	865
	632. 676	○	○	○	○**	-	CC	CE	-	2.70	1.40	2.38	3.36	4.75	5.82	7.51	8.89	10.62	465	875
	632. 726	○	○	○	○**	-	CC	CE	-	3.00	1.70	3.15	4.46	6.30	7.72	9.96	11.79	14.09	470	885
	632. 766	○	○	○	○**	-	CC	CE	-	3.50	1.90	4.00	5.66	8.00	9.80	12.65	14.97	17.89	475	890
	632. 806	○	○***	○	○**	-	CC	-	CG	4.00	2.40	5.00	7.07	10.00	12.25	15.81	18.71	22.36	480	900
	632. 846	○	○***	○	○**	-	CC	-	CG	4.50	2.40	6.25	8.84	12.50	15.31	19.76	23.39	27.95	480	900
	632. 886	○	○***	○	○**	-	CC	-	CG	5.00	3.10	8.00	11.31	16.00	19.60	25.30	29.93	35.78	480	910
632. 926	○	○	○	-	-	-	-	CG	5.50	3.60	10.00	14.14	20.00	24.50	31.62	37.42	44.72	525	1020	
632. 966	○	○	○	-	-	-	-	CG	6.00	3.90	12.50	17.68	25.00	30.62	39.53	46.77	55.90	525	1020	
120°	632. 187	○	-	○	-	CA	CC	-	-	0.35	0.20	-	0.06*	0.08	0.10	0.13	0.15	0.18	630	1200
	632. 217	○	-	○	-	CA	CC	-	-	0.40	0.20	-	0.08*	0.11	0.14	0.18	0.21	0.25	640	1210
	632. 247	○	-	○	-	CA	CC	-	-	0.50	0.20	-	0.12*	0.16	0.20	0.26	0.30	0.36	650	1230
	632. 277	○	-	○	-	CA	CC	-	-	0.60	0.30	-	0.16*	0.22	0.27	0.35	0.41	0.49	660	1250
	632. 307	○	○	○	○	CA	CC	-	-	0.70	0.30	0.16*	0.23*	0.32	0.39	0.51	0.60	0.72	660	1250
	632. 337	○	○	○	○	CA	CC	-	-	0.90	0.40	0.22*	0.32*	0.45	0.55	0.71	0.84	1.01	670	1270
	632. 367	○	○	○	○	CA	CC	-	-	1.00	0.50	0.31*	0.44*	0.63	0.77	1.00	1.18	1.41	670	1270
	632. 407	○	○	○	○	CA	CC	-	-	1.20	0.60	0.50*	0.71	1.00	1.23	1.58	1.87	2.24	670	1270
	632. 447	○	○	○	○	CA	CC	-	-	1.35	0.60	0.62*	0.88	1.25	1.53	1.98	2.34	2.80	675	1270
	632. 487	○	○	○	○	CA	CC	-	-	1.50	0.60	0.80*	1.13	1.60	1.96	2.53	2.99	3.58	680	1275
	632. 517	○	○	○	○	CA	CC	-	-	1.65	0.90	0.95*	1.34	1.90	2.33	3.00	3.56	4.25	685	1280
	632. 567	○	○	○	○	CA	CC	-	-	2.00	0.90	1.25	1.77	2.50	3.06	3.95	4.68	5.59	690	1285
	632. 607	○	○	○	○	CA	CC	-	-	2.20	1.10	1.58	2.23	3.15	3.86	4.98	5.89	7.04	700	1300
	632. 647	○	○	○	-	-	CC	CE	-	2.50	1.30	2.00	2.83	4.00	4.90	6.33	7.48	8.94	700	1300
	632. 677	○	○	○	○**	-	CC	CE	-	2.70	1.40	2.38	3.36	4.75	5.82	7.51	8.89	10.62	720	1330
	632. 727	○	○	○	○**	-	CC	CE	-	3.00	1.60	3.15	4.46	6.30	7.72	9.96	11.79	14.09	740	1360
	632. 767	○	○	○	○**	-	CC	CE	-	3.50	1.70	4.00	5.66	8.00	9.80	12.65	14.97	17.89	760	1400
	632. 807	○	○***	○	-	-	CC	-	CG	4.00	2.00	5.00	7.07	10.00	12.25	15.81	18.71	22.36	790	1450
	632. 847	○***	○***	○***	○**	-	CC	-	CG	4.50	2.30	6.25	8.84	12.50	15.31	19.76	23.39	27.95	790	1450
	632. 887	○	○	○	-	-	-	-	CG	5.00	2.60	8.00	11.31	16.00	19.60	25.30	29.93	35.78	800	1460
	632. 927	○	○	○	-	-	-	-	CG	5.00	2.90	10.00	14.14	20.00	24.50	31.62	37.42	44.72	800	1460

¹⁾ We reserve the right to deliver 316 SS or 316 L under the material no. 17.

A = Equivalent bore diameter · E = narrowest free cross section

*Differing spray pattern

**Only available with code CC.

***Only available with code CG.


Subject to technical modifications.

Example for ordering: Type + Material-no. + Code = Ordering no.
632. 216. + 16 + CA = 632. 216. 16. CA

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \sqrt{\frac{p_2}{p_1}}$




Flat fan nozzles for retaining nut Series 652

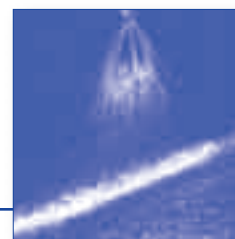

Assembly with retaining nut.
Easy nozzle changing, simple
jet alignment. Uniform, para-
bolic distribution of liquid.
Spray pipes equipped with
these nozzles show an
extremely uniform total liquid
distribution.


Applications:
Cleaning (e.g. surfaces, filters,
belts), crate washers, lubrica-
ting, coating.

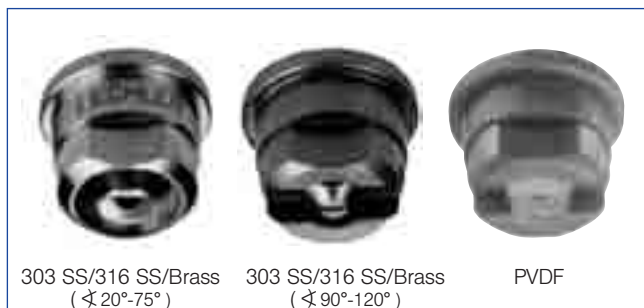

303 SS/316 SS/Brass
($\angle 20^\circ-75^\circ$)

303 SS/316 SS/Brass
($\angle 90^\circ-120^\circ$)

PVDF

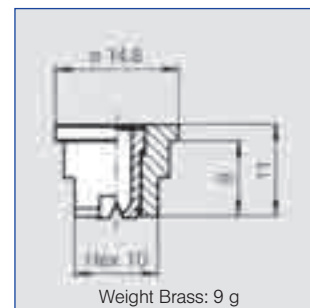

Weight Brass: 9 g

Spray angle	Ordering no.					A Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray width B at p = 2 bar	
	Type	Material-no.						p [bar]									
		16	17 ¹⁾	30	5E												
								0.5	1.0	2.0	[US gal./min] at 40 psi	3.0	5.0	10.0	H = 250 mm	H = 500 mm	
20°	652. 301	○	○	○	○	0.70	0.60	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	65	125	
	652. 361	○	○	○	○	1.00	0.80	0.31*	0.44*	0.63	0.20	0.77	1.00	1.40	65	125	
	652. 441	○	○	○	○	1.35	1.10	0.62*	0.88	1.25	0.39	1.53	1.98	2.80	65	125	
	652. 481	○	○	○	○	1.50	1.20	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	65	125	
30°	652. 302	○	○	○	○	0.60	0.50	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	115	230	
	652. 362	○	○	○	○	1.00	0.70	0.31*	0.44*	0.63	0.20	0.77	1.00	1.40	115	230	
	652. 402	○	○	○	○	1.20	0.90	0.50*	0.71	1.00	0.31	1.23	1.58	2.24	115	230	
	652. 482	○	○	○	○	1.50	1.10	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	115	230	
	652. 562	○	○	○	○	2.00	1.50	1.25	1.77	2.50	0.78	3.06	3.95	5.59	115	230	
	652. 642	○	○	○	-	2.50	1.80	2.00	2.83	4.00	1.24	4.90	6.33	8.94	120	230	
	652. 722	○	○	○	-	3.00	2.40	3.15	4.46	6.30	1.95	7.72	9.96	14.09	120	235	
	652. 762	○	○	○	-	3.50	2.70	4.00	5.66	8.00	2.48	9.80	12.65	17.89	120	235	
	652. 802	○	○	○	-	4.00	3.10	5.00	7.07	10.00	3.10	12.25	15.81	22.36	120	240	
45°	652. 303	○	○	○	-	0.70	0.50	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	180	340	
	652. 363	○	○	○	○	1.00	0.60	0.31*	0.44*	0.63	0.20	0.77	1.00	1.40	185	340	
	652. 403	○	○	○	○	1.20	0.90	0.50*	0.71	1.00	0.31	1.23	1.58	2.24	185	340	
	652. 483	○	○	○	○	1.50	1.10	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	185	340	
	652. 563	○	○	○	○	2.00	1.40	1.25	1.77	2.50	0.78	3.06	3.95	5.59	185	340	
	652. 643	○	○	○	○	2.50	1.80	2.00	2.83	4.00	1.24	4.90	6.33	8.94	185	345	
	652. 723	○	○	○	-	3.00	2.40	3.15	4.46	6.30	1.95	7.72	9.96	14.09	190	355	
	652. 763	○	○	○	-	3.50	2.60	4.00	5.66	8.00	2.48	9.80	12.65	17.89	190	355	
	652. 803	○	○	○	-	4.00	3.00	5.00	7.07	10.00	3.10	12.25	15.81	22.36	195	360	
60°	652. 304	○	○	○	○	0.70	0.40	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	275	525	
	652. 334	○	○	○	○	0.90	0.50	0.22*	0.32*	0.45	0.14	0.55	0.71	1.01	275	525	
	652. 364	○	○	○	○	1.00	0.60	0.31*	0.44*	0.63	0.20	0.77	1.00	1.40	275	525	
	652. 404	○	○	○	○	1.20	0.80	0.50*	0.71	1.00	0.31	1.23	1.58	2.24	275	525	
	652. 444	○	○	○	○	1.35	0.90	0.62*	0.88	1.25	0.39	1.53	1.98	2.80	280	530	
	652. 484	○	○	○	○	1.50	1.00	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	280	530	
	652. 514	○	○	○	○	1.65	1.10	0.95*	1.34	1.90	0.59	2.33	3.00	4.25	280	530	
	652. 564	○	○	○	○	2.00	1.30	1.25	1.77	2.50	0.78	3.06	3.95	5.59	280	525	
	652. 604	○	○	○	○	2.20	1.50	1.58	2.23	3.15	0.98	3.86	4.98	7.04	280	520	
	652. 644	○	○	○	○	2.50	1.60	2.00	2.83	4.00	1.24	4.90	6.33	8.94	275	520	
	652. 674	○	○	○	○	2.70	1.80	2.38	3.36	4.75	1.47	5.82	7.51	10.62	275	520	
	652. 724	○	○	○	○	3.00	2.10	3.15	4.46	6.30	1.95	7.72	9.96	14.09	275	520	
	652. 764	○	○	○	-	3.50	2.30	4.00	5.66	8.00	2.48	9.80	12.65	17.89	270	515	
	652. 804	○	○	○	○	4.00	2.60	5.00	7.07	10.00	3.10	12.25	15.81	22.36	270	510	
	652. 844	○	-	-	○	4.50	3.00	6.25	8.84	12.50	3.88	15.31	19.76	27.95	270	510	
	652. 884	○	-	○	-	5.00	3.40	8.00	11.31	16.00	4.96	19.60	25.30	35.78	270	505	


¹⁾ We reserve the right to deliver 316 SS or 316 L under the material no. 17.


A = Equivalent bore diameter · E = narrowest free cross section · * Differing spray pattern.

Continued on next page.



Flat fan nozzles for retaining nut Series 652

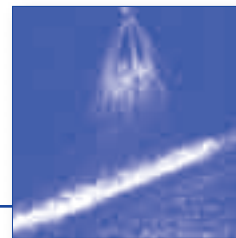

Spray angle	Ordering no.					A Ø [mm]	E Ø [mm]	V̇ [l/min]								Spray width B at p = 2 bar 	
	Type	Material-no.						p [bar]									
		16	17 ¹⁾	30	5E												
		303 SS	316 SS/316 L	Brass	PVDF			0.5	1.0	2.0	[US gal/ min] at 40 psi	3.0	5.0	10.0	H = 250 mm	H = 500 mm	
75°	652. 145	○	-	○	-	0.20	0.12	-	0.04*	0.05	0.02	0.06	0.08	0.11	285	550	
	652. 165	○	-	○	-	0.20	0.08	-	0.05*	0.07	0.02	0.08	0.10	0.15	285	555	
	652. 185	○	-	○	-	0.20	0.15	-	0.06*	0.08	0.02	0.10	0.13	0.18	290	560	
	652. 215	○	-	○	-	0.40	0.20	-	0.08*	0.11	0.03	0.14	0.18	0.25	290	560	
	652. 245	○	-	○	-	0.50	0.30	-	0.12*	0.16	0.05	0.20	0.26	0.36	290	560	
	652. 275	○	-	○	-	0.60	0.30	0.11*	0.16*	0.22	0.07	0.27	0.35	0.49	290	560	
90°	652. 216	○	-	○	-	0.40	0.20	0.06*	0.08*	0.11	0.03	0.14	0.18	0.25	380	760	
	652. 246	○	-	○	-	0.50	0.30	0.08*	0.12*	0.16	0.05	0.20	0.26	0.36	380	760	
	652. 276	○	-	○	-	0.60	0.30	0.11*	0.16*	0.22	0.07	0.27	0.35	0.49	450	795	
	652. 306	○	○	○	○	0.70	0.40	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	450	795	
	652. 336	○	○	○	○	0.90	0.50	0.22*	0.32*	0.45	0.14	0.55	0.71	1.01	450	795	
	652. 366	○	○	○	○	1.00	0.50	0.31*	0.44*	0.63	0.20	0.77	1.00	1.41	450	795	
	652. 406	○	○	○	○	1.20	0.70	0.50*	0.71	1.00	0.31	1.23	1.58	2.24	450	800	
	652. 446	○	○	○	○	1.35	0.80	0.62*	0.88	1.25	0.39	1.53	1.98	2.80	450	800	
	652. 486	○	○	○	○	1.50	0.80	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	450	800	
	652. 516	○	○	○	○	1.65	0.90	0.95*	1.34	1.90	0.59	2.33	3.00	4.25	450	800	
	652. 566	○	○	○	○	2.00	1.10	1.25	1.77	2.50	0.78	3.06	3.95	5.59	450	805	
	652. 606	○	○	○	○	2.20	1.20	1.58	2.23	3.15	0.98	3.86	4.98	7.04	450	805	
	652. 646	○	○	○	○	2.50	1.30	2.00	2.83	4.00	1.24	4.90	6.33	8.94	450	805	
	652. 676	○	○	○	○	2.70	1.40	2.38	3.36	4.75	1.47	5.82	7.51	10.62	450	810	
	652. 726	○	○	○	○	3.00	1.70	3.15	4.46	6.30	1.95	7.72	9.96	14.09	450	810	
	652. 766	○	○	○	-	3.50	1.90	4.00	5.66	8.00	2.48	9.80	12.65	17.89	450	815	
	652. 806	○	○	○	○	4.00	2.40	5.00	7.07	10.00	3.10	12.25	15.81	22.36	450	820	
	652. 846	-	-	○	○	4.50	2.40	6.25	8.84	12.50	3.88	15.31	19.76	27.95	450	820	
	652. 886	○	-	○	○	5.00	3.10	8.00	11.31	16.00	4.96	19.60	25.30	35.78	450	835	
	120°	652. 187	○	-	○	-	0.35	0.20	-	0.06*	0.08	0.02	0.10	0.13	0.18	640	1220
652. 217		○	-	○	-	0.40	0.20	-	0.08*	0.11	0.03	0.14	0.18	0.25	650	1230	
652. 247		○	-	○	-	0.50	0.20	-	0.12*	0.16	0.05	0.20	0.26	0.36	655	1245	
652. 277		○	-	○	-	0.60	0.30	-	0.16*	0.22	0.07	0.27	0.35	0.49	655	1250	
652. 307		○	-	○	○	0.70	0.30	0.16*	0.23*	0.32	0.10	0.39	0.51	0.72	660	1260	
652. 337		○	○	○	○	0.90	0.40	0.22*	0.32*	0.45	0.14	0.55	0.71	1.01	660	1260	
652. 367		○	○	○	○	1.00	0.50	0.31*	0.44*	0.63	0.20	0.77	1.00	1.41	660	1265	
652. 407		○	○	○	○	1.20	0.60	0.50*	0.71	1.00	0.31	1.23	1.58	2.24	660	1270	
652. 447		○	○	○	○	1.35	0.60	0.62*	0.88	1.25	0.39	1.53	1.98	2.80	665	1270	
652. 487		○	○	○	○	1.50	0.60	0.80*	1.13	1.60	0.50	1.96	2.53	3.58	665	1270	
652. 517		○	○	○	○	1.65	0.90	0.95*	1.34	1.90	0.59	2.33	3.00	4.25	670	1275	
652. 567		○	○	○	○	2.00	0.90	1.25	1.77	2.50	0.78	3.06	3.95	5.59	670	1280	
652. 607		○	○	○	○	2.20	1.10	1.58	2.23	3.15	0.98	3.86	4.98	7.04	675	1285	
652. 647		○	○	○	-	2.50	1.30	2.00	2.83	4.00	1.24	4.90	6.33	8.94	680	1295	
652. 677		○	○	○	-	2.70	1.40	2.38	3.36	4.75	1.47	5.82	7.51	10.62	685	1300	
652. 727		○	○	○	○	3.00	1.60	3.15	4.46	6.30	1.95	7.72	9.96	14.09	695	1315	
652. 767		○	○	○	-	3.50	1.70	4.00	5.66	8.00	2.48	9.80	12.65	17.89	705	1330	
652. 807		○	-	○	-	4.00	2.00	5.00	7.07	10.00	3.10	12.25	15.81	22.36	705	1330	
652. 847		-	-	-	○	4.50	2.30	6.25	8.84	12.50	3.88	15.31	19.76	27.95	800	1460	
652. 887		-	-	-	○	5.00	2.60	8.00	11.31	16.00	4.96	19.60	25.30	35.78	800	1460	

¹⁾ We reserve the right to deliver 316 SS or 316 L under the material no. 17.

A = Equivalent bore diameter · E = narrowest free cross section

*Differing spray pattern

Subject to technical modifications.


Example	Type	+	Material-no.	=	Ordering no.
for ordering:	652. 145	+	16	=	652. 145. 16

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \sqrt{\frac{p_2}{p_1}}$




Flat fan nozzles for belt lubrication

Series 652. xxx. 8H. 03

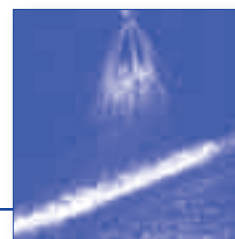

Especially low flow rates.
Parabolic liquid distribution
 Applications:
 Belt lubrication, spraying of
 food products, oiling of metal
 sheets.

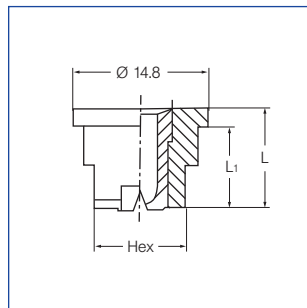

Operating pressure range:
 1.0 to 5.0 bar

Recommended operating pressure:
 3.0 bar

Viscosity:
 The nozzles can be operated
 with viscous media, e. g.
 transmission fluid (max.
 approx. 200 mPas). However
 the spray angle decreases.

 Spray angle	Ordering no.		Colour	E Ø [mm]	ṽ [l/min]				
	Type	Mat.-no.			p [bar]				
		16 303 SS							8H.03* POM / 303 SS
					1.0	2.0	3.0	5.0	
75°	652. 145	○	○	green	0.30	0.04**	0.05	0.06	0.08
	652. 165	○	○	black	0.34	0.05**	0.07	0.08	0.10
	652. 185	○	○	red	0.20	0.06**	0.08	0.10	0.13
	652. 215	○	○	blue	0.20	0.08**	0.11	0.14	0.18
	652. 245	○	○	orange	0.30	0.12**	0.16	0.20	0.26
	652.275	○	○	brown	0.30	0.16**	0.22	0.27	0.35
120°	652. 187	○	○	grey	0.20	0.06**	0.08	0.10	0.13
	652. 247	○	○	black	0.20	0.12**	0.16	0.20	0.26
	652. 277	○	○	black	0.30	0.16**	0.22	0.27	0.35

E = narrowest free cross section

* Housing POM, nozzle insert 303 SS

** Differing spray pattern Subject to technical modifications.


Return valve with gauze filter:

- Prevents dripping and saves medium
- Size of filter mesh:
0,08 mm (200 mesh)
- **095.016.53.11.00**
Opening pressure:
approx. 0,5 bar
Closing pressure:
approx. 0,3 bar
- **095.016.53.14.63**
Opening pressure:
approx. 2,8 bar
Closing pressure:
approx. 1,6 bar

Pos.	Name	Ordering no.	Material	Dimensions [mm]			** [mm]
				L	L1	SW	
1	Gauze filter with return valve	095. 016. 53. 11. 00	PP	21	1.5	-	0.08
		095. 016. 53. 14. 63	PP	21	1.5	-	0.08
2	Gasket	065. 240. 55	PTFE	-	-	-	-
		065. 240. 72	EWP 210	-	-	-	-
3	Nozzle	Ordering no. see flow tables	303 SS	11	9	10	-
			POM/303 SS*	12	10	8	-
4	Cap nut	065. 200. 16	303 SS	13	10	22	-
		065. 200. 56	POM	14.5	11.5	22	-

* Housing POM, Nozzle insert 303 SS


** Size of mesh

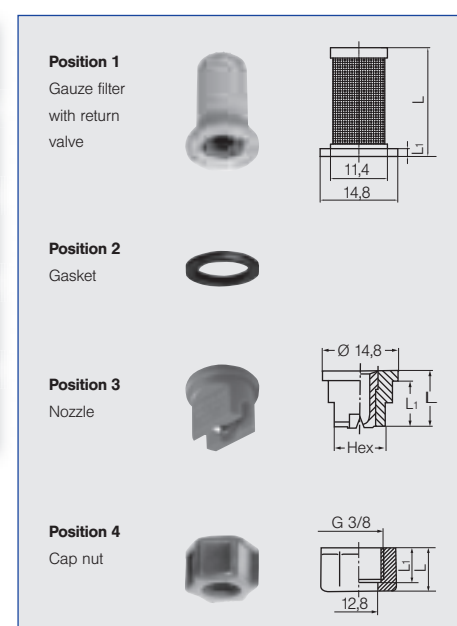



Tongue-type nozzles


Series 686

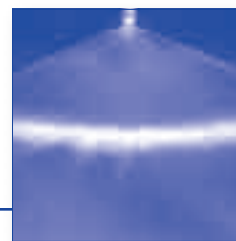

Wide flat fan with a sharply delimited jet pattern. Particularly clog-proof.

Applications:

Foam control in storage tanks, crate washers, cleaning and washing processes requiring powerful and concentrated water jets.

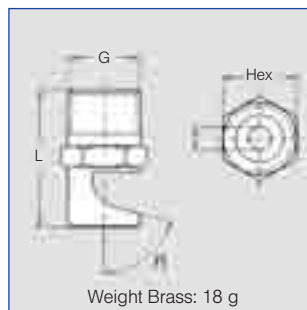

Spray angle	η	Ordering no.								B Ø [mm]	V̇ [l/min]			Dimensions								Spray width B at p=2 bar  H = 250 mm
		Type	Material-no.			Code G					p [bar]			L [mm] R 1/8 R 1/4 R 3/8 R 1/2				Hex [mm] R 1/8 R 1/4 R 3/8 R 1/2				
			16	30	5E	1/8 BSPT	1/4 BSPT	3/8 BSPT	1/2 BSPT													
			303 SS	Brass	PVDF	1/8 BSPT	1/4 BSPT	3/8 BSPT	1/2 BSPT		1.0	2.0	5.0	R 1/8	R 1/4	R 3/8	R 1/2	R 1/8	R 1/4	R 3/8	R 1/2	
90°	53°	686.366	-	○	-	CA	-	-	-	0.80	0.45	0.63	1.00	22	-	-	-	11	-	-	-	520
	75°	686.406	○	○	-	CA	-	-	-	1.00	0.71	1.00	1.58	23	-	-	-	11	-	-	-	525
	40°	686.686	○	○	-	-	CC	-	-	2.40	3.54	5.00	7.91	-	29	-	-	-	14	-	-	530
	40°	686.726	-	○	-	CA	-	-	-	2.70	4.45	6.30	9.96	26	-	-	-	11	-	-	-	530
	40°	686.806	○	○	-	-	CC	-	-	3.40	7.07	10.00	15.81	-	34	-	-	-	14	-	-	530
	40°	686.886	○	-	-	-	CC	-	-	4.20	11.31	16.00	25.30	-	36	-	-	-	17	-	-	530
	40°	686.926	○	-	-	-	-	CE	-	4.70	14.14	20.00	31.62	-	-	39	-	-	-	17	-	530
140°	75°	686.368	○	○	-	CA	-	-	-	0.80	0.45	0.63	1.00	23	-	-	-	11	-	-	-	1360
		686.408	○	○	-	CA	-	-	-	1.00	0.71	1.00	1.58	23	-	-	-	11	-	-	-	1370
		686.448	○	○	-	-	CC	-	-	1.20	0.88	1.25	1.98	-	28	-	-	-	14	-	-	1370
		686.488	○	○	-	CA	CC	-	-	1.30	1.13	1.60	2.53	23	28	-	-	11	14	-	-	1370
		686.528	○	○	-	CA	CC	-	-	1.50	1.41	2.00	3.16	23	28	-	-	11	14	-	-	1370
		686.568	○	○	○*	CA	CC	-	-	1.70	1.77	2.50	3.59	23	-	-	-	11	-	-	-	1370
		686.608	○	○	-	CA	CC	-	-	1.90	2.23	3.15	4.98	23	28	-	-	11	14	-	-	1370
		686.648	○	○	-	-	CC	-	-	2.20	2.83	4.00	6.32	-	28	-	-	-	14	-	-	1370
		686.688	○	○	-	CA	CC	-	-	2.40	3.54	5.00	7.91	23	28	-	-	11	14	-	-	1370
		686.728	○	○	-	CA	CC	-	-	2.70	4.45	6.30	9.96	23	-	-	-	11	-	-	-	1370
		686.768	○	○	-	-	CC	-	-	3.00	5.66	8.00	12.65	-	28	-	-	-	14	-	-	1370
		686.808	○	○	-	CA	CC	-	-	3.40	7.07	10.00	15.81	23	28	-	-	11	14	-	-	1370
		686.828	○	○	-	-	CC	-	-	3.60	7.92	11.20	17.71	-	28	-	-	-	14	-	-	1370
		686.848	○	○	-	-	CC	-	-	3.80	8.80	12.50	19.76	-	28	-	-	-	14	-	-	1370
		686.868	○	○	-	-	CC	-	-	4.00	9.90	14.00	22.14	-	28	-	-	-	14	-	-	1370
		686.888	○	○	-	-	CC	-	-	4.20	11.31	16.00	25.30	-	28	-	-	-	14	-	-	1370
		686.908	○	○	-	-	CC	-	-	4.50	12.73	18.00	28.46	-	28	-	-	-	14	-	-	1370
		686.928	○	-	-	-	-	CE	-	4.70	14.14	20.00	31.62	-	-	32	-	-	-	17	-	1370
		686.968	-	○	-	-	-	CE	CG	5.30	17.68	25.00	39.53	-	-	32	40	-	-	17	22	1370
		686.988	○	-	-	-	-	CE	CG	5.60	19.80	28.00	44.27	-	-	32	40	-	-	17	22	1370

B = Bore diameter

Can also be used for air or saturated steam.


* Only available with code CA.

Example for ordering: Type 686.366 + Material-no. 30 + Code CA = Ordering no. 686.366.30.CA

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 * \sqrt{\frac{p_2}{p_1}}$




Tongue-type nozzles for retaining nut Series 684 / 688 / 689

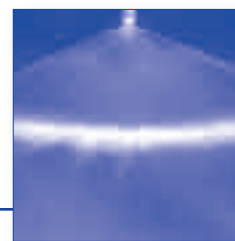

Series 684

Assembly with retaining nut.
Wide flat fan with a sharply delimited spray pattern.
Particularly clog-proof. Easy nozzle changing. Simple jet alignment.

Applications:
Foam control in storage tanks,
crate washers, cleaning and
washing processes requiring
powerful and concentrated
water jets.

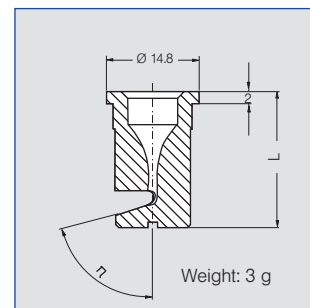


Spray angle	η	Ordering no.		Colour**	B Ø [mm]	$\dot{V}$ [l/min]			L [mm]	Spray width B at p = 2 bar  H = 250 mm		
		Type	Mat.- no.			p [bar]						
											56	5E
											POM	PVDF
1.0	2.0	5.0										
140°	75°	684. 348	○	-	green	0.7	0.35*	0.50	0.79	20	1360	
	75°	684. 368	○	○	yellow	0.8	0.45*	0.63	1.00	20	1360	
	75°	684. 408	○	-	blue	1.0	0.71	1.00	1.58	20	1370	
	75°	684. 448	○	-	red	1.2	0.88	1.25	1.98	20	1370	
	75°	684. 488	○	○	brown	1.3	1.13	1.60	2.53	20	1370	
	75°	684. 528	○	-	grey	1.5	1.41	2.00	3.16	20	1370	
	75°	684. 568	○	○	white	1.7	1.77	2.50	3.95	19	1370	
	75°	684. 608	○	-	light blue	1.9	2.23	3.15	4.98	19	1370	
	75°	684. 688	○	-	green	2.4	3.54	5.00	7.91	17	1370	
	75°	684. 728	○	○	black	2.7	4.45	6.30	9.96	17	1370	
	75°	684. 808	○	-	purple	3.4	7.07	10.00	15.81	16	1370	

B = Bore diameter · * Differing spray pattern. · ** Material PVDF generally blue

Series 688 / 689

Hard, sharp flat fan, narrowly delimited jet pattern. Not prone to clogging.

Applications:
Foam control in storage tanks,
crate washers, cleaning and
washing processes requiring
powerful and concentrated
water jets.

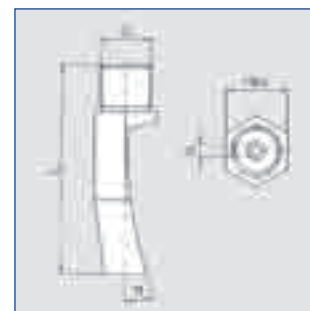

Spray angle	η	Ordering no.						B $\varnothing$ [mm]	$\dot{V}$ [l/min]				Dimensions		Weight	Spray width B at p=2 bar							
		Type	Mat.-no.		Code G		p [bar]				L [mm]	SW [mm]		H = 250 mm		H = 500 mm							
			16	5E																			
																	303 SS	PVDF	3/8 BSPT	3/4 BSPP			
																0.5	1.0	2.0	5.0				
45°	35°	688. 763	○	-	CE	-	3.0	4.00	5.66	8.00	12.65	43	19	114 g	220	440							
	30°	688. 843	○	-	CE	-	3.8	6.25	8.84	12.50	19.76	50	19	133 g	220	440							
	29°	688. 923	○	-	CE	-	4.8	10.00	14.14	20.00	31.62	59	22	247 g	220	440							
	35°	689. 003	○	○	-	90	6.0	15.75	22.27	31.50	49.81	80/80	32/24	306/33	250	490							

B = Bore diameter





High pressure flat fan nozzles

Series 602 / 608 / 652



Sharp uniform flat fan with an extremely narrow jet depth.


Applications:

High pressure cleaners, steam jet cleaners


Materials:

Nozzle body: stainless steel
303 SS

Insert: hardened stainless steel 1.403 S

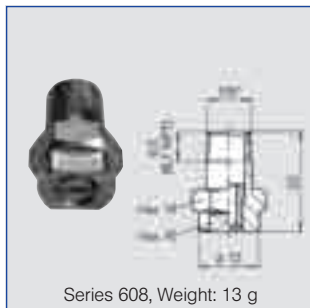

Series 608, Weight: 13 g

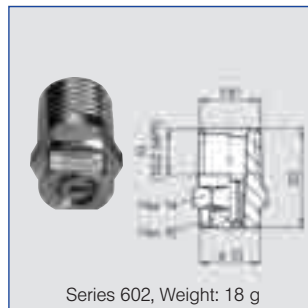

Series 602, Weight: 18 g



Series 652, Weight: 13 g

US gal/min. bei 40 psi	Nozzle-Code			Flow rate code				A Ø [mm]	ṽ [l/min]						
	Connection			Spray angle					p [bar]						
	1/8"	1/4"	Mutter	20°	30°	45°	60°		40	60	80	100	120	150	200
02	608	602	652	361	362	363	364	1.00	2.86	3.50	4.04	4.52	4.95	5.53	6.39
025	608	602	652	381	382	383	384	1.10	3.54	4.33	5.00	5.59	6.12	6.85	7.91
03	608	602	652	401	402	403	404	1.18	4.31	5.28	6.10	6.82	7.47	8.35	9.64
034	608	602	652	411	412	413	414	1.30	4.95	6.06	7.00	7.83	8.57	9.59	11.07
04	608	602	652	451	452	453	454	1.35	5.80	7.10	8.20	9.17	10.04	11.23	12.97
045	608	602	652	471	472	473	474	1.40	6.51	7.97	9.20	10.29	11.27	12.60	14.55
05	608	602	652	481	482	483	484	1.55	7.29	8.92	10.30	11.52	12.62	14.11	16.29
055	608	602	652	501	502	503	504	1.60	7.96	9.74	11.25	12.58	13.78	15.41	17.79
06	608	602	652	521	522	523	524	1.72	8.70	10.66	12.31	13.76	15.07	16.85	19.46
065	608	602	652	531	532	533	534	1.75	9.38	11.49	13.26	14.83	16.25	18.16	20.97
07	608	602	652	541	542	543	544	1.80	10.06	12.32	14.22	15.90	17.42	19.47	22.49
075	608	602	652	551	552	553	554	1.90	10.75	13.16	15.20	16.99	18.62	20.81	24.04
08	608	602	652	571	572	573	574	2.05	11.48	14.06	16.23	18.15	19.88	22.23	25.67
09	608	602	652	591	592	593	594	2.10	13.01	15.93	18.40	20.57	22.53	25.19	29.09
10	608	602	652	601	602	603	604	2.30	14.43	17.76	20.40	22.81	24.99	27.94	32.26
125	-	602	652	641	642	643	644	2.50	17.82	21.82	25.20	28.17	30.86	34.51	39.85
15	-	602	652	671	672	673	674	2.70	21.35	26.15	30.20	33.76	36.98	41.35	47.74
175	-	602	652	701	702	703	704	3.00	25.03	30.66	35.40	39.58	43.36	48.47	55.97
20	-	602	652	-	-	723	724	3.05	28.85	35.33	40.80	45.62	49.97	55.87	64.52
30	-	602	652	-	-	793	-	3.90	42.43	51.96	60.00	67.08	73.48	82.16	94.88

A = Equivalent bore diameter


Connection Code	Connection	p _{max} [bar]
A3. 00	BSPT	ca. 350
A3. 07	NPT	ca. 350
A3. 29	Lock nut	ca. 200

Example Nozzle-Code + Flow rate code + Connection-Code = Ordering no.
for ordering: 602 + 361 + A3. 07 = 602. 361. A3. 07
(Flat fan 20°; 4.52 l/min. at 100 bar; 1/4" NPT)

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 * \sqrt{\frac{p_2}{p_1}}$



Easy-Clip nozzle system

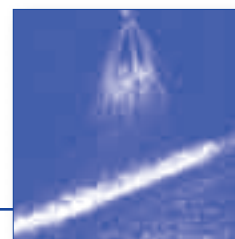


Quick and easy assembly with clamp. No tools required. Allround swivelling by 30°.

Easy adjustment and cleaning.

Applications:
Crate washers, cleaning and washing processes.

Materials:
Clamp: Stainless steel 1.4310
Sealing: EPDM
Cylinder pin, Screw, Screw unit: 1.4401.
Body, ball retainer cap: PP,
reinforced
Nozzle. ball joint: PP

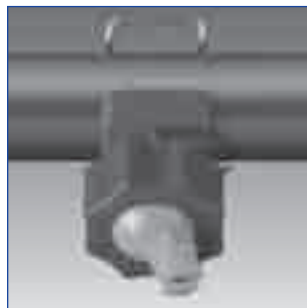

Sets

existing of

- Nozzle
- Single clamp for 1 1/4" pipe
- Ball retainer cap

Ordering no.	Nozzle Colour		$\dot{V}$ [l/min]				
			p [bar]				
			0.5	1.0	1.5	2.0	2.5
676. 724. 53. 31	grey	60°	3.15	4.45	5.45	6.30	7.04
676. 764. 53. 31	brown		4.00	5.66	6.93	8.00	8.94
676. 804. 53. 31	lilac		5.00	7.07	8.66	10.00	11.18
676. 844. 53. 31	yellow		6.25	8.84	10.83	12.50	13.98
676. 884. 53. 31	red		8.00	11.31	13.85	16.00	17.89
676. 904. 53. 31	blue		9.10	12.87	15.76	18.20	20.35
676. 924. 53. 31	green		10.00	14.14	17.32	20.00	22.36

existing of



- Ball joint
- Single clamp for 1 1/4" pipe
- Ball retainer cap

Ordering no.	Ball Colour	Nozzle connection	For nozzle series
092. 081. 53. AB	beige	G 1/8"	460, 632, 686, 610, 544
092. 081. 53. AD	beige	G 1/4"	422, 460, 544, 612, 632, 686
092. 081. 53. AF	beige	G 3/8"	422, 460, 632, 686, 688
092. 081. 53. AH	beige	G 1/2"	422, 460, 632, 686

Components


1 Nozzle

Ordering no.	Colour		$\dot{V}$ [l/min]				
			p [bar]				
			0.5	1.0	1.5	2.0	2.5
676. 724. 53. 30. 01	grey	60°	3.15	4.45	5.45	6.30	7.04
676. 764. 53. 30. 01	brown		4.00	5.66	6.93	8.00	8.94
676. 804. 53. 30. 01	lilac		5.00	7.07	8.66	10.00	11.18
676. 844. 53. 30. 01	yellow		6.25	8.84	10.83	12.50	13.98
676. 884. 53. 30. 01	red		8.00	11.31	13.85	16.00	17.89
676. 904. 53. 30. 01	blue		9.10	12.87	15.67	18.20	20.35
676. 924. 53. 30. 01	green		10.00	14.14	17.32	20.00	22.36
092. 080. 53. 00. 01	grey		Blind nozzle				

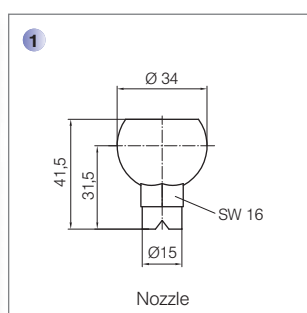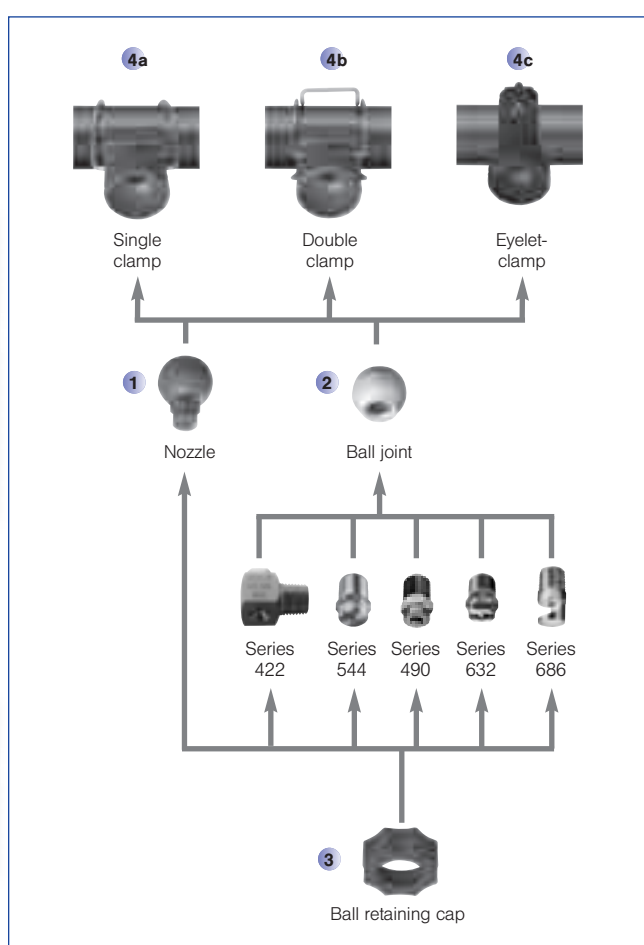




Easy-Clip nozzle system

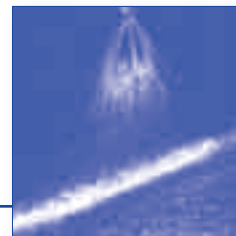


2 Ball joint

Ordering no.	Colour	Nozzle connection	For nozzle series
092. 080. 53. AB. 01	beige	G 1/8"	460, 544, 610, 632, 686
092. 080. 53. AD. 01	beige	G 1/4"	422, 460, 544, 612, 632, 686
092. 080. 53. AF. 01	beige	G 3/8"	422, 460, 632, 686, 688
092. 080. 53. AH. 01	beige	G 1/2"	422, 460, 632, 686

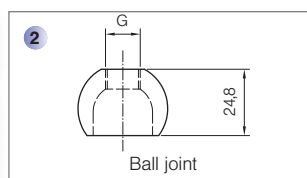

3 Ball retainer cap


Ordering no.
092. 080. 53. 00. 02

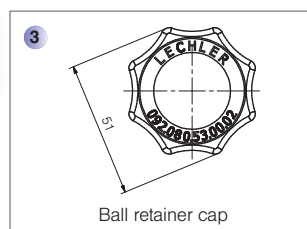

4a Single clamp

Ordering no.	Bore-Ø	For pipe-Ø
092. 080. 53. 00	16 mm	1" (32.0-34.5 mm)
092. 081. 53. 00	16 mm	1 1/4" (40.0-43.0 mm)
092. 082. 53. 00	16 mm	1 1/2" (46.0-49.0 mm)
092. 083. 53. 00	16 mm	2" (58.0-62.0 mm)


Other bore-Ø (13.8 / 20.0 mm) on request.

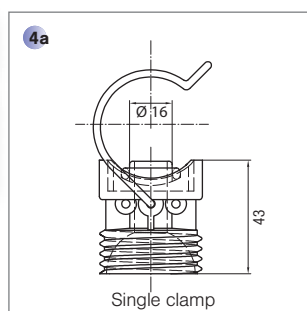

4b Double clamp

Ordering no.	Bore-Ø	For Pipe-Ø
092. 090. 53. 00	16 mm	1" (32.0-34.5 mm)
092. 091. 53. 00	16 mm	1 1/4" (40.0-43.0 mm)
092. 092. 53. 00	16 mm	1 1/2" (46.0-49.0 mm)
092. 093. 53. 00	16 mm	2" (58.0-62.0 mm)


Other bore-Ø (13.8 / 20.0 mm) on request.

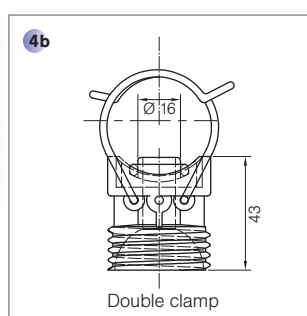

4c Eyelet clamp

Ordering no.	Bore-Ø	For pipe-Ø
090. 023. 53. 43. 10. 0	16 mm	1" (32.0-34.5 mm)
090. 033. 53. 43. 10. 0	16 mm	1 1/4" (40.0-43.0 mm)
090. 043. 53. 43. 10. 0	16 mm	1 1/2" (46.0-49.0 mm)

Other bore-Ø (13.8 / 20.0 mm) on request.

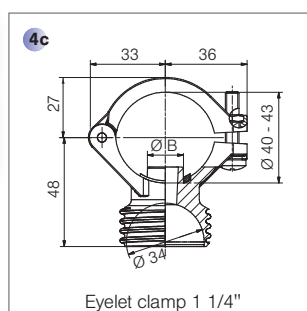



Flat fan nozzles with ball joint


Series 676




**Swivelling nozzle for precise adjusting of jet direction.
No gaskets necessary.
Long, unproblematic service life.**

Applications:

Cleaning (e.g. surfaces, filters, belts), crate washers, lubricating, coating.

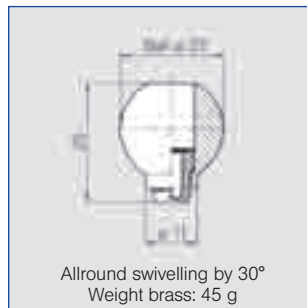

Spray angle	Ordering no.				A Ø [mm]	E Ø [mm]	ṽ [l/min]						Spray width B at p = 2 bar	
	Type	Mat.-no.		p [bar] (p _{max} = 30 bar)										
		16	30											
		14305	Ms	0.5			1.0	2.0	3.0			5.0	10.0	H = 250 mm
45°	676. 303	○	○	0.70	0.50	0.16*	0.23*	0.32	0.39	0.51	0.72	150	270	
	676. 363	○	○	1.00	0.60	0.31*	0.44*	0.63	0.77	1.00	1.40	155	280	
	676. 403	○	○	1.20	0.90	0.50*	0.71	1.00	1.23	1.58	2.24	175	320	
	676. 483	○	○	1.50	1.10	0.80	1.13	1.60	1.96	2.53	3.58	180	340	
	676. 563	○	○	2.00	1.40	1.25	1.77	2.50	3.06	3.95	5.59	185	355	
	676. 643	○	○	2.50	1.80	2.00	2.83	4.00	4.90	6.33	8.94	195	370	
	676. 723	○	○	3.00	2.40	3.15	4.46	6.30	7.72	9.96	14.09	200	375	
	676. 763	○	○	3.50	2.60	4.00	5.66	8.00	9.80	12.65	17.89	200	380	
676. 803	○	○	4.00	3.00	5.00	7.07	10.00	12.25	15.81	22.36	205	385		
60°	676. 304	○	○	0.70	0.40	0.16*	0.23*	0.32	0.39	0.51	0.72	215	425	
	676. 334	○	○	0.90	0.50	0.22*	0.32*	0.45	0.55	0.71	1.01	220	440	
	676. 364	○	○	1.00	0.60	0.31*	0.44*	0.63	0.77	1.00	1.40	230	460	
	676. 404	○	○	1.20	0.80	0.50*	0.71	1.00	1.23	1.58	2.24	245	485	
	676. 444	○	○	1.35	0.90	0.62*	0.88	1.25	1.53	1.98	2.80	255	495	
	676. 484	○	○	1.50	1.00	0.80*	1.13	1.60	1.96	2.53	3.58	260	510	
	676. 514	○	○	1.65	1.10	0.95*	1.34	1.90	2.33	3.00	4.25	270	520	
	676. 564	○	○	2.00	1.30	1.25	1.77	2.50	3.06	3.95	5.59	280	535	
	676. 604	○	○	2.20	1.50	1.58	2.23	3.15	3.86	4.98	7.04	290	550	
	676. 644	○	○	2.50	1.60	2.00	2.83	4.00	4.90	6.33	8.94	295	565	
	676. 674	○	○	2.70	1.80	2.38	3.36	4.75	5.82	7.51	10.62	300	575	
	676. 724	○	○	3.00	2.10	3.15	4.46	6.30	7.72	9.96	14.09	305	590	
676. 764	○	○	3.50	2.30	4.00	5.66	8.00	9.80	12.65	17.89	310	595		
90°	676. 216	○	○	0.40	0.20	-	0.08*	0.11	0.14	0.18	0.25	370	700	
	676. 276	○	○	0.60	0.30	0.11*	0.16*	0.22	0.27	0.35	0.49	375	720	
	676. 306	○	○	0.70	0.40	0.16*	0.23*	0.32	0.39	0.51	0.72	380	740	
	676. 336	○	○	0.90	0.50	0.22*	0.32*	0.45	0.55	0.71	1.01	415	800	
	676. 366	○	○	1.00	0.50	0.31*	0.44*	0.63	0.77	1.00	1.40	420	810	
	676. 406	○	○	1.20	0.70	0.50*	0.71	1.00	1.23	1.58	2.24	430	820	
	676. 446	○	○	1.35	0.80	0.62*	0.88	1.25	1.53	1.98	2.80	435	830	
	676. 486	○	○	1.50	0.80	0.80*	1.13	1.60	1.96	2.53	3.58	440	835	
	676. 516	○	○	1.65	0.90	0.95*	1.34	1.90	2.33	3.00	4.25	440	840	
	676. 566	○	○	2.00	1.10	1.25	1.77	2.50	3.06	3.95	5.59	445	850	
	676. 606	○	○	2.20	1.20	1.58	2.23	3.15	3.86	4.98	7.04	450	860	
	676. 646	○	○	2.50	1.30	2.00	2.83	4.00	4.90	6.33	8.94	455	865	
	676. 676	○	○	2.70	1.40	2.38	3.36	4.75	5.82	7.51	10.62	465	875	
	676. 726	○	○	3.00	1.70	3.15	4.46	6.30	7.72	9.96	14.09	470	885	

A = äquivalenter Bohrungs-Ø · E = Engster Querschnitt
* Abweichendes Spritzbild.


Fortsetzung der Tabelle auf der folgenden Seite.



Flat fan nozzles with ball joint

Series 676



Spray angle	Ordering no.			A Ø [mm]	E Ø [mm]	V̇ [l/min]						Spray width B at p = 2 bar	
	Type	Mat.-no.				p [bar] (p _{max} = 30 bar)							
		16	30										
		1.4305	Ms										
						0,5	1,0	2,0	3,0	5,0	10,0	H = 250 mm	H = 500 mm
120°	676. 187	○	○	0,35	0,20	-	0,06*	0,08	0,10	0,13	0,18	630	1200
	676. 217	○	○	0,40	0,20	-	0,08*	0,11	0,14	0,18	0,25	640	1210
	676. 247	○	○	0,50	0,20	-	0,12*	0,16	0,20	0,26	0,36	650	1230
	676. 277	○	○	0,60	0,30	-	0,16*	0,22	0,27	0,35	0,49	660	1250
	676. 307	○	○	0,70	0,30	0,16*	0,23*	0,32	0,39	0,51	0,72	660	1250
	676. 337	○	○	0,90	0,40	0,22*	0,32*	0,45	0,55	0,71	1,01	670	1270
	676. 367	○	○	1,00	0,50	0,31*	0,44*	0,63	0,77	1,00	1,40	670	1270
	676. 407	○	○	1,20	0,60	0,50*	0,71	1,00	1,23	1,58	2,24	670	1270
	676. 447	○	○	1,35	0,60	0,62*	0,88	1,25	1,53	1,98	2,80	675	1270
	676. 487	○	○	1,50	0,60	0,80*	1,13	1,60	1,96	2,53	3,58	680	1275
	676. 517	○	○	1,65	0,90	0,95*	1,34	1,90	2,33	3,00	4,25	685	1280
	676. 567	○	○	2,00	0,90	1,25	1,77	2,50	3,06	3,95	5,59	690	1285
	676. 607	○	○	2,20	1,10	1,58	2,23	3,15	3,86	4,98	7,04	700	1300
	676. 647	○	○	2,50	1,30	2,00	2,83	4,00	4,90	6,33	8,94	700	1300
	676. 677	○	○	2,70	1,40	2,38	3,36	4,75	5,82	7,51	10,62	720	1330
	676. 727	○	○	3,00	1,60	3,15	4,46	6,30	7,72	9,96	14,09	740	1360
	676. 767	○	○	3,50	1,70	4,00	5,66	8,00	9,80	12,65	17,89	760	1400

A = Equivalent bore diameter · E = narrowest free cross section

* Differing spray pattern

Example	Type	+	Material-no.	=	Ordering no.
for ordering:	676. 145	+	16	=	676. 145. 16

Accessories

Retaining nut

092. 020. 16. 00. 02

Material: 303 SS

092. 020. 30. 00. 02

Material: Brass




Socket

092. 020. 16. AF. 03

Material: 303 SS

092. 020. 30. AF. 03

Material: Brass

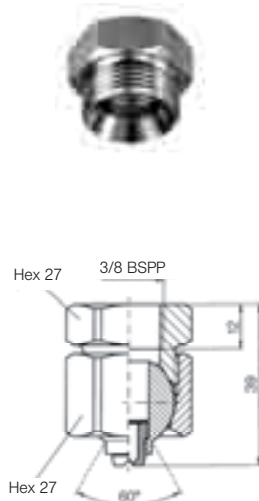


Retaining nipple

092. 024. 16. AC. 03

Material: 303 SS

092. 024. 30. AC. 03


Material: Brass

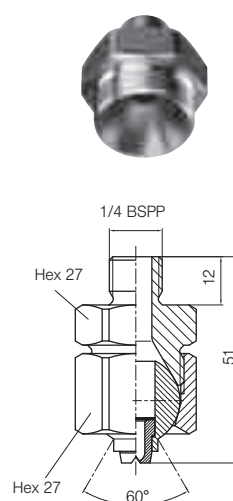

Welding nipple

092. 020. 17. 00. 04


Material: 316 SS

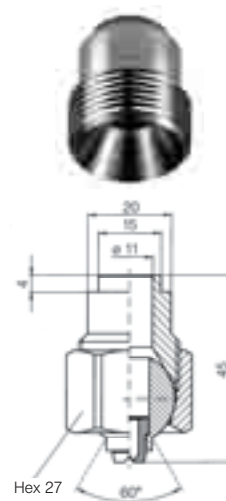

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 \cdot \sqrt{\frac{p_2}{p_1}}$



Nozzles and accessories in Hygienic Design

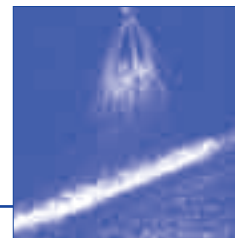


Features

The hygienically designed nozzles and accessories are characterized by their very good surface finish ($RA < 0,8 \mu m$). This minimises the tendency for soiling and provides good cleanability. The nozzles and accessories are available in 316L (1.4435) or 316Ti (1.4571) and the seals are made of FDA approved EPDM.

Applications


Aseptic filling, suitable for high hygienic demands.

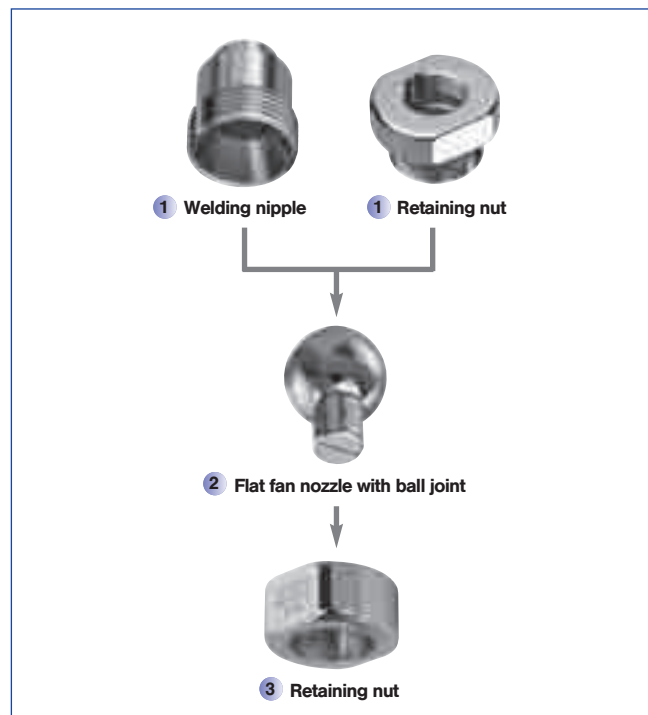

1



Welding nipple for ball joint
Ordering no. 092.020.1E.67.04

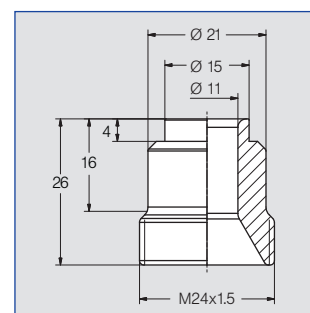

1



Retaining nut for ball joint
Ordering no. 092.020.1E.67.38

2



Flat fan nozzle with ball joint,
30° Swivel-mounted 30° in all directions.

2







Tongue type nozzle with ball joint,
Swivel-mounted 30° in all directions.

3



Retaining nut for ball joint
Ordering no. 092.020.1E.67.02





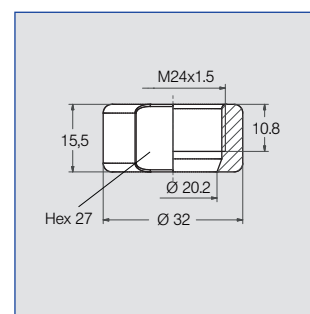
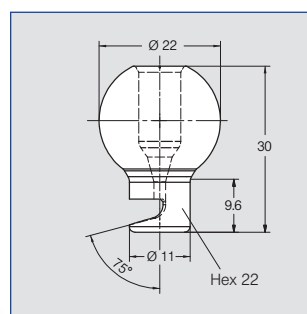
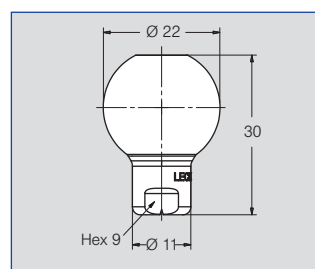
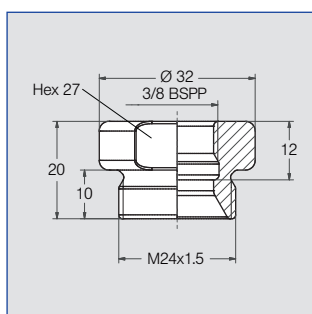


	Ordering-no.	$\dot{V}$ [l/min] at 2 bar
20°	676.641.17.67	4.00
30°	676.402.17.67	1.00
	676.562.17.67	2.50
	676.722.17.67	6.30
	676.802.17.67	10.00
45°	676.763.17.67	8.00
	676.883.17.67	16.00
60°	676.514.17.67	1.90
	676.764.17.67	8.00
90°	676.366.17.67	0.60
	676.646.17.67	4.00
120°	676.647.17.67	4.00
	676.676.17.67	8.00

	Ordering-no.	$\dot{V}$ [l/min] at 2 bar
140°	6ZK.648.1E.67	4.00



Nozzles and accessories in Hygienic Design

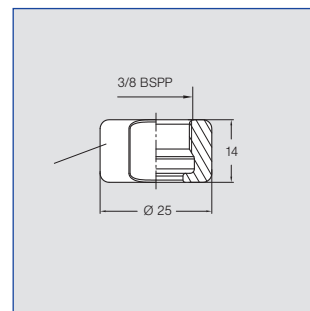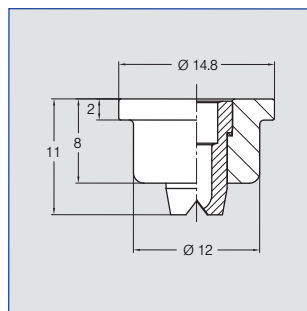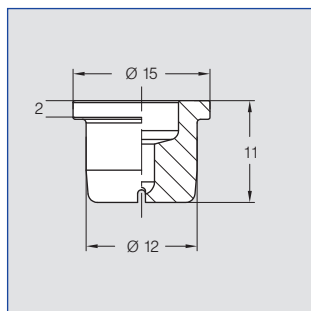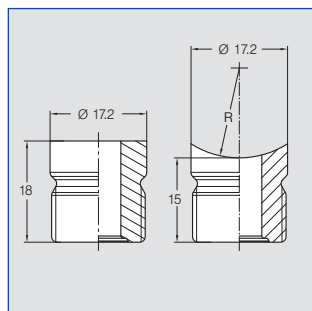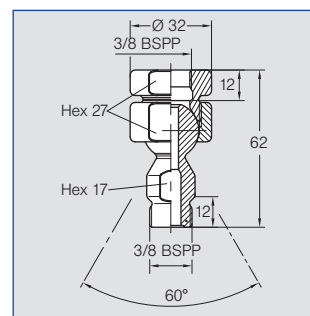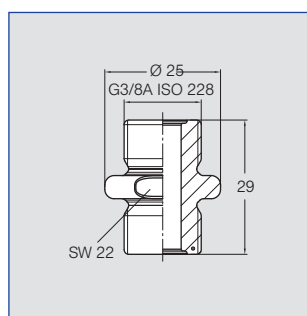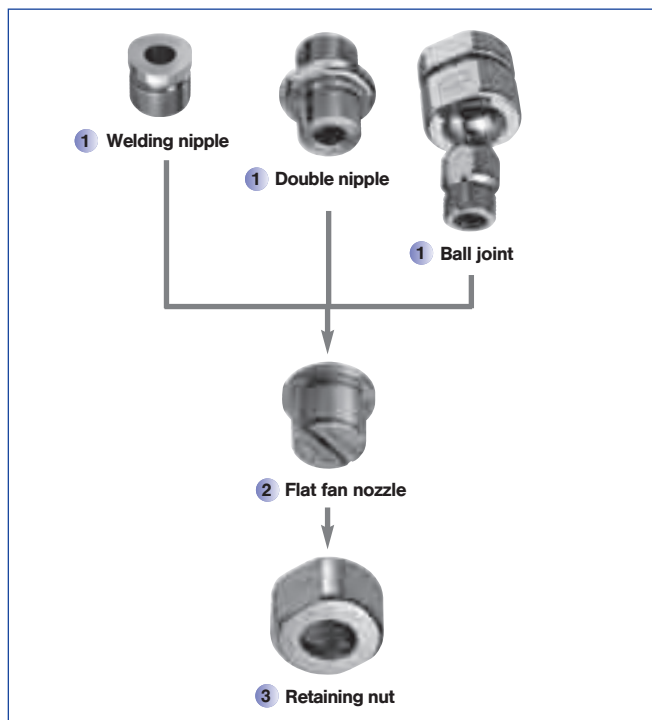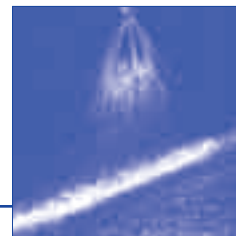

Ordering no.	Radius [mm]
065.210.1E.67.00	no radius
065.217.1E.67.10	10
065.217.1E.67.13	12,5
065.217.1E.67.16	16
065.217.1E.67.20	20
065.217.1E.67.31	31

Ordering no.	$\dot{V}$ [l/min] at 2 bar
60° 652.604.1E.67	3,10
652.924.1E.67	20,00


Ordering no.	$\dot{V}$ [l/min] at 2 bar
60° 652.484.17.87	1,60
652.514.17.87	1,90
652.544.17.87	2,20
652.564.17.87	2,50
652.604.17.87	3,10
652.644.17.87	4,00
652.674.17.87	4,70
652.724.17.87	6,30
652.764.17.87	8,00

Conversion formula for the above series: $\dot{V}_2 = \dot{V}_1 * \sqrt{\frac{p_2}{p_1}}$



High-pressure solid stream nozzles

Series 546 / 548 / 550

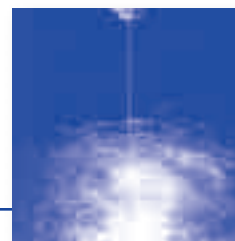

Punctiform, extremely tight, non-dispersing solid stream. Highest impact.




Applications:

High-pressure cleaning, cutting and separating.

Materials:

Nozzle body: Stainless steel 303 SS

Insert: Hardened steel 1.4034S

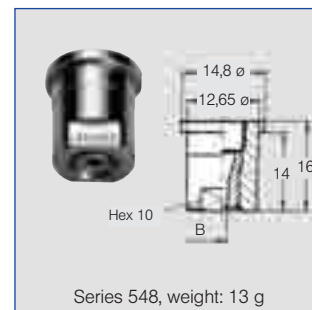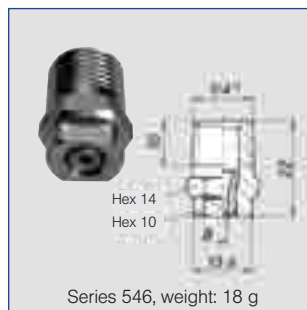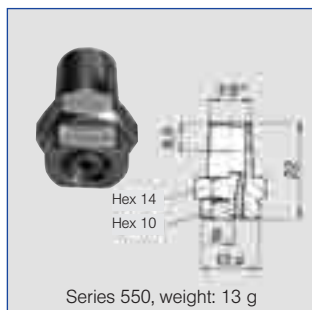

US gal/min. at 40 psi	Nozzle Code			Flow rate code	B Ø [mm]	ṽ [l/min]						
	Connection					p [bar]						
	1/8"	1/4"	Retaining nut			40	60	80	100	150	200	300
02	550	546	548	360	0.84	2.86	3.50	4.04	4.52	5.54	6.39	7.83
03	550	546	548	400	1.03	4.31	5.28	6.10	6.82	8.35	9.64	11.81
034	550	546	548	410	1.07	4.70	5.80	6.70	7.49	9.17	10.59	12.97
035	550	546	548	420	1.11	5.06	6.20	7.16	8.00	9.80	11.32	13.86
04	550	546	548	450	1.19	5.80	7.10	8.20	9.17	11.23	12.97	15.88
045	550	546	548	470	1.26	6.54	8.00	9.25	10.34	12.66	14.62	17.91
05	550	546	548	480	1.33	7.29	8.92	10.30	11.52	14.11	16.29	19.95
055	550	546	548	500	1.39	7.96	9.75	11.26	12.59	15.42	17.80	21.81
06	550	546	548	520	1.46	8.70	10.66	12.31	13.76	16.85	19.46	23.83
08	550	546	548	570	1.69	11.48	14.06	16.23	18.15	22.23	25.67	31.44
10	550	546	548	600	1.88	14.32	17.54	20.25	22.64	27.73	32.02	39.21
15	550	546	548	670	2.30	21.60	26.46	30.55	34.16	41.84	48.31	59.17
20	550	546	548	720	2.66	28.85	35.34	40.80	45.62	55.87	64.52	79.02

B = bore diameter

Connection code	Connection	p _{max} [bar]
A3. 00	BSPT	approx. 350
A3. 07	NPT	approx. 350
A3. 29	Lock nut	approx. 200

Example for ordering: Nozzle Code 550 + Flow rate code 360 + Connection code A3. 07 = Ordering no. 550. 360. A3. 07 (Solid stream; 4.52 l/min. at 100 bar; 1/8" NPT)



Multi-channel flat fan nozzles for air Whisperblast®, Plastic versions Series 600. 130 / 600. 484

Particularly
silent!


**Highly efficient air stream,
acting upon areas. Reduced
noise levels. Low air con-
sumption.**

Applications:


Blowing off and blowing out,
cleaning, drying, cooling,
sorting with air.




600. 130 (POM or PP)

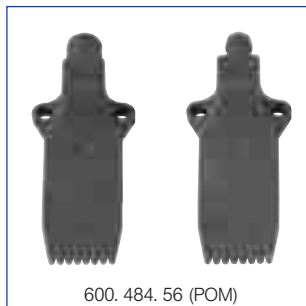

600. 484. 56 (POM)

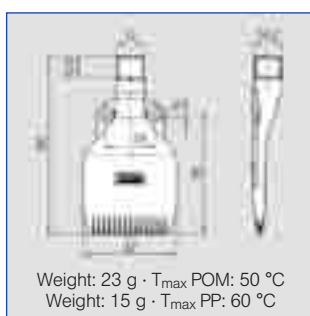


Weight: 23 g · T_{max} POM: 50 °C
Weight: 15 g · T_{max} PP: 60 °C

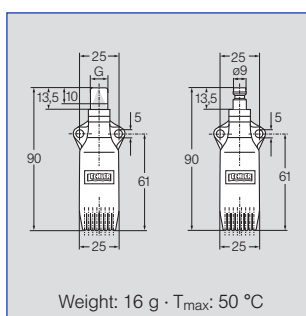

Weight: 16 g · T_{max}: 50 °C


Technical Data

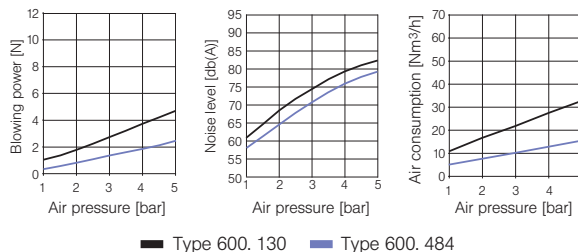

1/4 BSPP



M 12 x 1,25

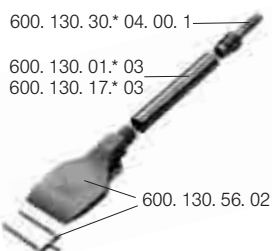

600. 130. 56. 01 with accessories
*01 = 1.0711 / 17 = 316 SS / 30 = Brass

Ordering no.						
Type	Material no.		Code			
	S2	56				
	PP	POM	1/4 BSPP	1/4 NPT	M12 x 1.25	Quick connection NW 5
600. 130	○	○	AC	BC	-	-
600. 130 with plug	-	○	02	-	-	-
600. 130 with plug, hose barb (D = 8 mm) and extension tube, steel (L = 85 mm)	-	○	01	-	-	-
600. 484	-	○	AC	BC	HG	00

Example Type + Material no. + Code = Ordering no.
for ordering: 600. 130. + 56. + AC = 600. 130. 56. AC

Socket
Ordering no.
095.016.30.14.23.0

Material: Brass

For connection of series
600.130 with compressed air
guns.



Ball joints see page 66



Multi-channel flat fan nozzles for air Whisperblast®, metallic versions Series 600. 283 / 600. 493 / 600. 562

**Particularly
silent!**

Metallic versions for higher temperatures. Highly efficient air stream, acting upon areas. Reduced noise levels. Low air consumption.

Applications:

Blowing off and blowing out, cleaning, drying, cooling, conveying with air.



600. 283. 42 (Aluminium)



600. 493. 1Y (Stainless steel 316 L)




600. 562. 1Y. 10 (Stainless steel 316 L)




1/4 BSPP


M 12 x 1,25

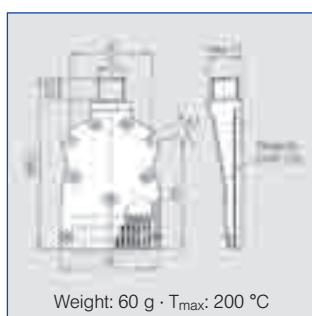

Weight: 60 g · T_{max}: 200 °C

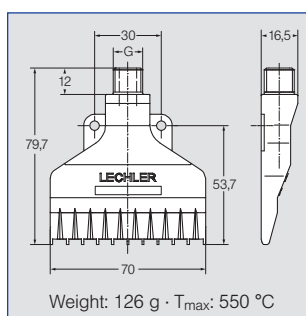

Weight: 126 g · T_{max}: 550 °C

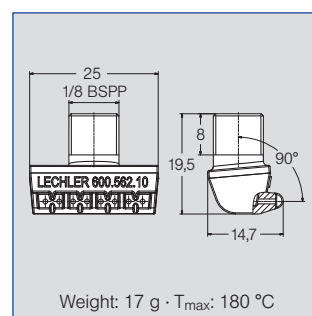

Weight: 17 g · T_{max}: 180 °C


**Socket
Ordering no.
095.016.30.14.23.0**

Material: Brass

For connection with compressed air guns for the following series:

- 600. 283
- 600. 493

Technical data

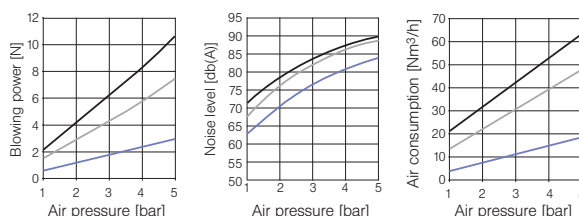

For more information please ask for our special brochure »Nozzles and Accessories for Compressed Air«.



Ordering no.					
Type	Material-no.		Code		
	42 Aluminium	1Y Stainless steel	1/8 BSPP	1/4 BSPP	1/4 NPT
600. 283	○	-	-	AC	BC
600. 493	-	○	-	AC	BC
600. 562. 1Y. 10	-	○	○	-	-

Example Type + Material no. + Code = Ordering no.
for ordering: 600. 283. + 42. + AC = 600. 283. 42. AC



Ball joints see page 66



Multi-channel round jet nozzles for air



Series 600. 326 / 600.388

**Particularly
silent!**

Powerful air jet, producing punctiform impact patterns. Low noise level. Low air consumption.


Applications:
Targeted blowing out and blowing off with compressed air guns.

Reduction of noise level of up to 12 dB (A).

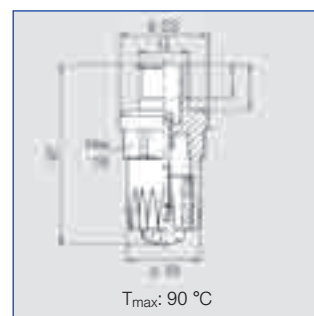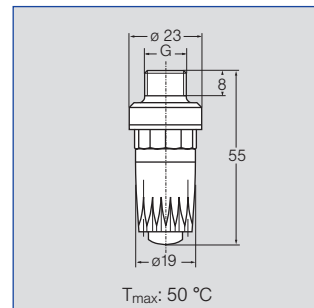

Mini-round jet nozzle. Compact design

Applications:
Especially for blowing out pocket holes.

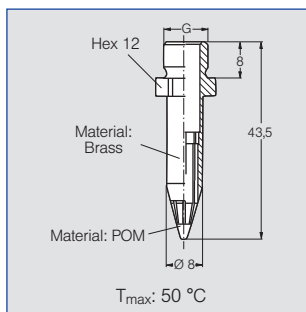


Ball joints see page 66

Ordering no.		Connection thread G	Weight
Type	Code		
600. 326. 5K (Material: ABS)	AC	1/4 BSPP	9 g
	HG	M 12 x 1.25	
600. 326. 3W (Material: Zinc)	AC	1/4 BSPP	47 g
	HG	M 12 x 1.25	
600. 388. 30 (Material: Brass/POM)	AA	1/8 BSPP	12 g
	HG	M 12 x 1.25	

Example: Type 600. 326. 5K + Code AC = Ordering no. 600. 326. 5K. AC
for ordering


Technical data

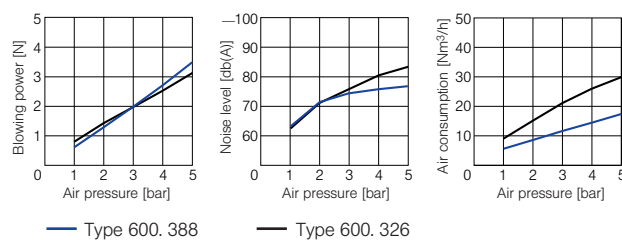





Accessories

Eyelet clamps / Retaining nuts

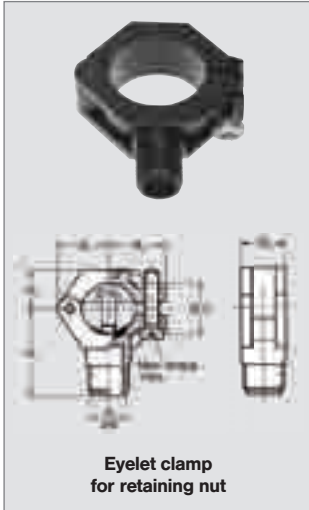

For series	Ordering no.				Screw	Dimensions [mm]										Weight (Polyamid)
	Type	Material no.				BSPP	Pipe ø	D ø	B _R ø	B ₁	B ₂	B ₃	H ₁	H ₂		
		51	53	5E												
		Polyamid	Polypropylene	PVDF												
2TR/216/302/308/350 468/548/679/684/652	090. 053	○	○	○	Material 303 SS	3/8	3/8"	16.5-18.0	6.2	19.0	22.0	18.5	34.5	14.5	20 g	
	090. 003	○	○	○		3/8	1/2"	20-22.0	6.2	21.2	23.8	18.5	36.5	16.5	20 g	
	090. 013	○	○	○		3/8	3/4"	25-27.5	7.8	24.5	26.5	22.0	39.5	17.5	25 g	
	090. 023	○	○	○		3/8	1"	32-34.5	10.8	30.0	31.0	22.0	44.0	21.0	32 g	
	090. 033	○	○	○		3/8	1 1/4"	40-43.0	12.8	34.0	35.5	25.0	48.0	25.0	38 g	

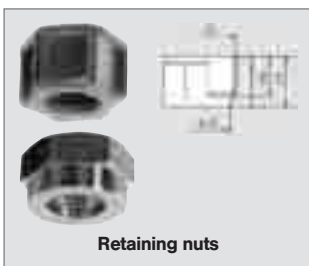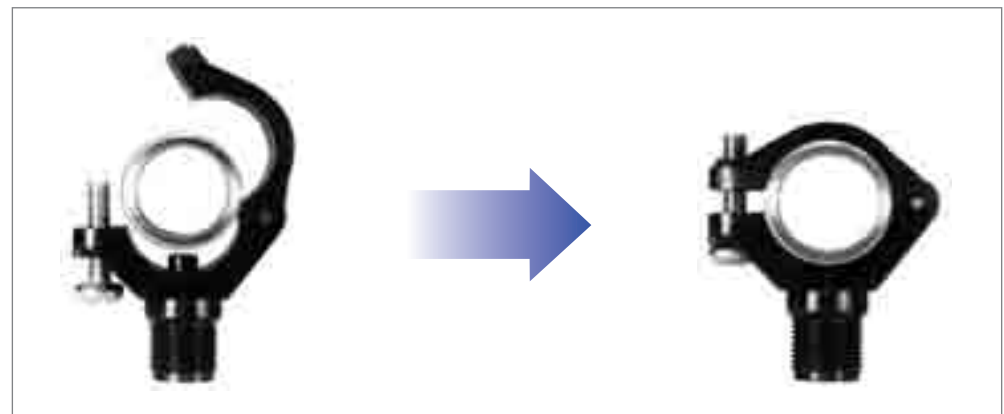






For series	Ordering no.						Dimensions [mm]					Weight (Brass)
	Type	Material no.					BSPP	H ₁	H ₂	D	Hex	
		16	17	30	56	5E						
		303 SS	316 SS	Brass	POM	PVDF						
2TR/468/548 652/660/679 684	065. 200	●	●	●	-	-	3/8	13.0	10.0	12.8	22	25 g
	065. 200	-	-	-	●	●	3/8	14.5	11.5	12.8	22	
	069. 000	●	●	●	-	-	UNF 11/16	13.0	10.0	12.8	22	
656/657 664/665	065. 600	●	●	●	-	●	3/8	16.0	13.0	20.1	32	60 g

For filters and non-return valves please refer to page 67



Accessories

Sockets / Nipples

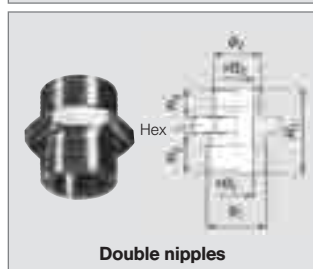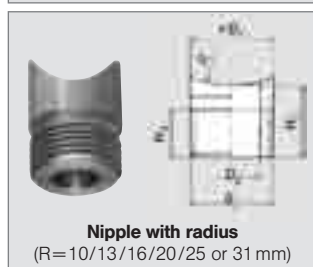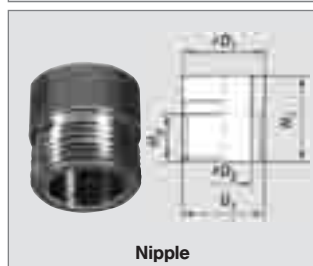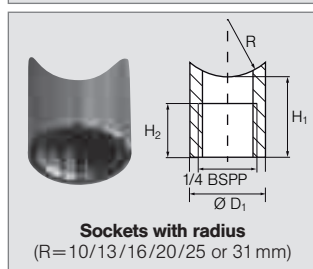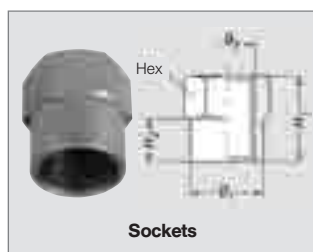

For series	Ordering no.						Dimensions [mm]							Weight (Brass)
	Type	Material no.					G ₁	G ₂	H ₁	H ₂	D ₁	D ₂	Hex	
		02	1Y	17	30	53								
		Steel	316L	316 SS	Brass	Polypropylene								
For all nozzles with 1/8" male thread.	040. 270	-	○	-	○	-	-	1/8 BSPP	20	10	13.8	-	14	20 g
For all nozzles with 1/4" male thread.	061. 220	-	○	-	○	-	-	1/4 BSPP	20	10	16.8	-	17	25 g
For all nozzles with 3/8" male thread.	040. 271	-	-	○	○	-	-	3/8 BSPP	20	10	21.5	-	22	25 g
	040. 271	-	-	-	-	○	-	3/8 BSPP	20	10	24.5		22	25 g
For all nozzles with 1/4" male thread.	040.228. xx.yy*	-	○	-	-	-	1/4 BSPP	-	18	12	17	-	-	16 g
2TR/216/302 308/350/548/468 679/684/652	065. 210	○	-	○	○	○	3/8 BSPP	-	18	10	17.2	11.5	-	20 g
306/307 502/503 656/657	065. 610	○	-	○	-	○	3/4 BSPP	-	27	14	28	18	-	61 g
2TR/216/302/308/350 548/468/679/684/652	065. 217. xx. yy*	-	-	○	-	-	3/8 BSPP	-	18	10	17.2	11.5	-	20 g
2TR/216/302/308 350/548/468 679/684/652	065. 215 ¹⁾	-	-	○	○	-	3/8 BSPP	1/4 BSPP	25	10	10	7	22	30 g
	065. 211	-	-	○	○	-	3/8 BSPP	3/8 BSPP	25	10	11.5	-	22	25 g
656/657	065. 611	-	-	○	○	-	3/4 BSPP	3/4 BSPP	35	14	18	-	32	90 g

* Replace **xx** by material no. and **yy** by radius R

¹⁾ Not to be used with non return valve or filter.





Example	Type	+	Material no.	=	Ordering no.
for ordering:	040. 270	+	1Y	=	040. 270. 1Y



Accessories


Ball joints

Allround swivelling action of 30°.
No sealings, no wear.
Long service life even after many adjustments.
 P_{max} : 25 bar.

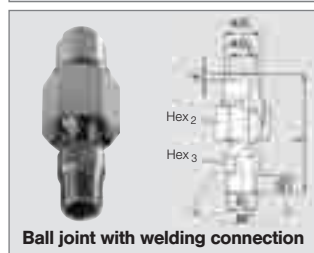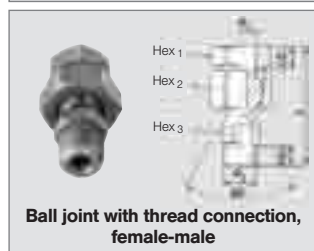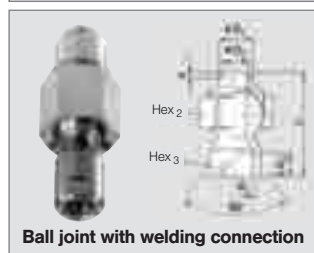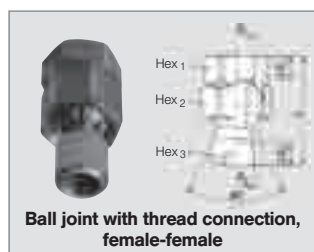

For series	Ordering no.					Dimensions [mm]											Weight (Brass)
	Type	Material no.			Code	D ₁	D ₂	G ₁ BSPP	G ₂ BSPP	L _{G1}	L _{G2}	L	Hex ₁	Hex ₂	Hex ₃		
		16 303 SS/316 SS	16 303 SS	30 Brass													
For all nozzles with 1/4" male thread.	092. 020	-	●	●	AD	-	-	1/4	1/4	12.0	11.5	60.3	27	27	17	60 g	
	092. 021	-	●	●	AF	-	-	3/8	1/4	12.0	11.5	58.3	27	27	17	80 g	
For all nozzles with 3/8" male thread.	092. 030	-	●	●	AF	-	-	3/8	3/8	12.0	12.0	56.7	27	30	19	80 g	
For all nozzles with 1/4" male thread.	092. 020	●	-	-	SD	20.0	15.0	-	1/4	-	11.5	64.3	-	27	17	60 g	
For all nozzles with 3/8" male thread.	092. 030	●	-	-	SF	22.0	15.0	-	3/8	-	12.0	58.7	-	30	19	80 g	
2TR/216/302/308/350 548/468/679/684/652	092. 022	-	●	●	AD	-	-	1/4	3/8	12.0	10.0	63.8	27	27	17	80 g	
	092. 022	-	●	●	AF	-	-	3/8	3/8	12.0	10.0	61.8	27	27	17	85 g	
2TR/216/302/308/350 548/468/679/684/652	092. 022	●	-	-	SE	20.0	15.0	-	3/8	-	10.0	67.8	-	27	17	80 g	

Compact ball joints for narrow installation conditions


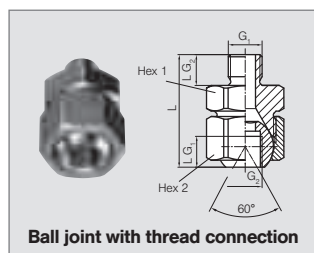


For all nozzles with 1/8" male thread.	092. 010	-	○	○	AA	-	-	1/8	1/8	8.0	8.0	29.3	22	24	-	70 g
	092. 024	-	○	○	AC	-	-	1/4	1/4	12.0	12.0	44	27	27	-	140 g
	092. 030	-	○	○	AE	-	-	3/8	3/8	12.0	12.0	44	27	30	-	160 g




Accessories

Nonreturn valves / filters

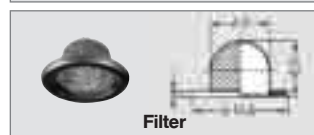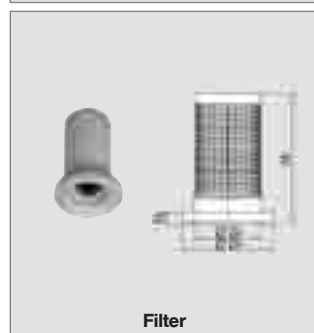


For nozzle size	Ordering no.			Colour	Opening pressure [bar]	Closing pressure [bar]	Mesh size [mm]	Dimensions [mm]				Weight
	Type	Mat.-no.						H ₁	H ₂	D ₁	D ₂	
		56 POM	26 Monel/Copper									
xxx.32x- xxx.44x	065.265 Ball 1.4034 Spring 1.4310	○	–	blue	0.5–1.0	0.4–0.9	0.25	21.5	2.0	14.8	11.0	2 g
	065.266 Ball 1.4034 Spring 1.4310	○	–	red	0.4-0.5	0.35-0.45	0.65	21.5	2.0	14.8	11.0	2 g
xxx.32x- xxx.44x	065.257	○	–	blue	–	–	0.25	21.5	2.0	14.8	11.0	2 g
	065.256	○	–	red	–	–	0.65	21.5	2.0	14.8	11.0	2 g
xxx.32x- xxx.44x	065.252	–	○	–	–	–	0.50	8.5	1.0	14.8	9.0	1 g

Example for ordering: Type + Material no. = Ordering no.
065. 265 + 56 = 065. 265. 56



VarioSpray II

Nozzle valve system for the variable atomization of very small liquid volumes

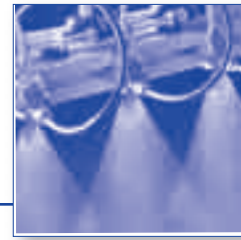

Applications

- Vitamin spraying
- Spraying of low-viscosity sugar solutions
- Anti-Scuffing
- Hygiene applications
- Product moisturizing
- Belt lubrication


Innovative spraying technology opens up new applications

The pressure to standardize is increasing in almost all areas, and the demand for more economical and more environmentally friendly production processes is growing. The newly developed Lechler VarioSpray II nozzle valve system with pulse width modulation impresses with its enormous flexibility and offers the possibility of spraying very small volumes of liquid with precision.

In the case of hydraulic nozzle systems, the narrowest cross section of the spray nozzle determines the liquid flow rate. For reasons of economy and production however, it is not possible to reduce this narrowest cross sections to any further degree desired. For this reason there are physical limits to a nozzle's minimum flow rate. Pneumatic systems are therefore used in order to realize the lowest flow rates. This allows very small flow rates to be generated by using air. However, this pneumatic atomization has its limits where the volumes delivered must be varied and adapted to changed process parameters. This often makes control disproportionately complex.

Using air can also have an unfavorable effect on operating costs, as aerosols form and liquid is lost due to the rebound effect.

VarioSpray II allows very small volumes of liquid to be atomized while using hydraulic nozzles at the same time.

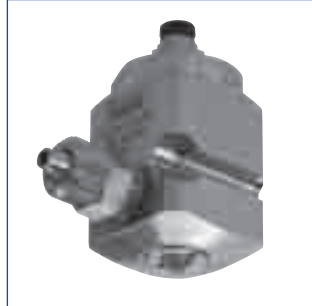

Flexible system

- Simple change to the pulse width and cycle frequency
- Flushing function
- Modular design and modular system
- Start/Stop signal (e.g. via light barrier)

What is pulse width modulation?


Pulse width modulation refers to the variation of the ON time t_{on} / OFF time t_{off} of a square-wave signal when the frequency f remains constant. Here, the frequency f corresponds to the reciprocal value of the period duration T .

The ratio of the ON time t_{on} to the period duration T is referred to as the pulse width ratio (DC = duty cycle). The pulse width ratio determines the flow rate. The valve is open during the ON time t_{on} . The shorter the DC, the less the flow rate. Depending on the frequency selected, the pulsation is barely perceptible to the naked eye.


Further information and ordering data on request.

Characteristics	The benefits to you
Minimum flow rates - Liquid saving - Inexpensive simple single fluid nozzle system	→ Cost reduction → Increased efficiency
Frequency up to 100 Hz - Flexible belt speeds	→ Increased productivity → Production time reduction
Control ratio up to 11 : 1 - Large flow rates covered with one nozzle	→ No nozzle change
Variable flow rate - Flexible adjustment of the volume applied for different products	→ Product change time reduction
Different flow rates have no influence on spraying parameters - Constant spray angle - Constant droplet size	→ Constant process parameters
Flow rate is not regulated via the pressure - No high pressure required - Simple configuration	→ Short installation time → Low maintenance costs → Low operating costs
Low-wear valve - Only one movable object	→ Low maintenance
No atomization air - No aerosol formation - Less liquid loss	→ Less risk to health → Does not pollute the environment → Cost reduction
Not susceptible to blockages - Larger cross sections compared to normal nozzles	→ Increased operating safety

Example for flow control

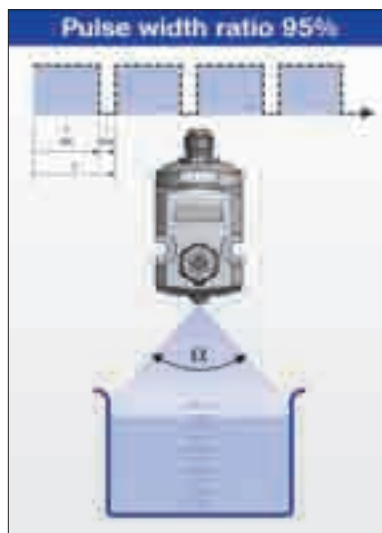

α = constant at DC 10–100%

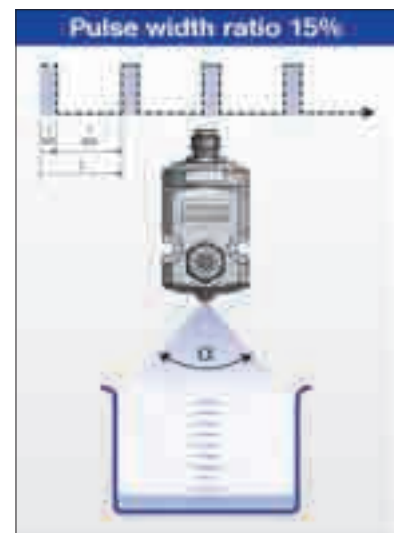

α = constant at DC 10–100%

YOU WILL FIND OTHER NOZZLES FOR USE IN SURFACE TECHNOLOGY IN OUR STANDARD CATALOGUE ...


Over the years, our catalogue for precision nozzles and accessories has become an in-demand nozzle technology


handbook. It contains valuable tools and comprehensive technical information on Lechler products.

For a long time, many Lechler products have been used to satisfy a very wide range of surface treatment applications.



Pneumatic atomizing nozzles	Series	Spray-pattern supply	Mode of liquid	Mixing of Fluids		$\dot{V}$ Water [l/h]	Application/Construction	Catalogue Page
	166	Full cone or Flat fan	Pressure principle	inside or outside	20° 45° 60° 80°	0.10 – 132.90	Humidification of air, cooling, disinfection (e.g. bottles), coating, dosing, release agent applications.	1.5

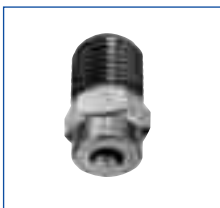Full cone nozzles	Series		$\dot{V}$ [l/min] at p = 2 bar	Connection	Application/Construction	Catalogue Page
	460 461	45° 60° 90° 120°	0.40 – 71.00	1/8 BSPT 1/4 BSPT 3/8 BSPT 1/2 BSPT 3/4 BSPP 1 BSPP	Cleaning and washing processes, surface spraying, bottle cleaning, keg cleaning, sausage showers, foam control, degassing. Large free cross-sections, due to optimized x-style swirl insert.	3.5

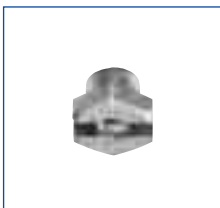Flat fan nozzles	Series		$\dot{V}$ [l/min] at p = 2 bar	Connection	Application/Construction	Catalogue Page
	610	20° 30° 45° 60° 75° 90° 120°	0.05 – 4.00	1/8 BSPP	Cleaning (e.g. surfaces, filters, belts), crate washers, lubricating, coating. Compact design, suited for narrow installation conditions.	4.11

	612	20° 30° 45° 60° 75° 90° 120°	0.05 – 16.00	1/4 BSPP	Cleaning (e.g. surfaces, filters, belts), crate washers, lubricating, coating. Compact design, suited for narrow installation conditions.	4.13
---	-----	--	--------------	----------	---	------

Solid stream nozzle	Series	$\dot{V}$ [l/min]	Connection	Application/ Construction	Catalogue Page
	544	0.04 – 10.00	1/8 BSPT 1/4 BSPT	Cleaning installations. Optimized flow technology. Highest jet power. Solid stream jet.	5.4

... AND IN OUR SPECIAL BROCHURES

We have a collection of information, included in individual subject brochures, covering special nozzles that are also of particular interest to food and beverage.

All documents can be downloaded from our website at **www.lechler.com**.

We would also be happy to send you the brochures.




Lechler Tank Cleaning Nozzles



Lechler nozzles
for compressed
air



Lechler VarioSpray II
Nozzle valve System

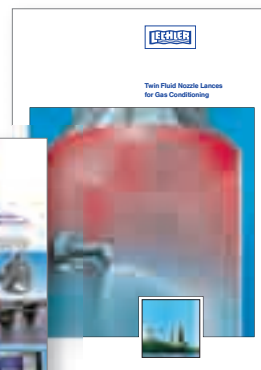

Lechler Twinfluid
Nozzle Lances

ONLINE-SERVICES

ON THE INTERNET YOU CAN FIND EVEN MORE INFORMATION AND SUPPORT FOR YOUR WORK AT: www.lechler.com


On the internet you can also find additional information about our entire range of services, work aids, our global presence and much more besides – we look forward to your visit.



AND AT <http://lechler.partcommunity.com> THERE'S 3D DESIGN DATA

3D data on Lechler nozzles and accessories is available to you free of charge for your development and design work. Profit from these advantages:

- Time-saving, direct download of design drawings and technical data.
- Simple product selection similar to the Lechler printed catalogue.
- Preview function with product photo and 3D graphic.
- Available in all common 3D file formats.
- Free use after once-only registration.

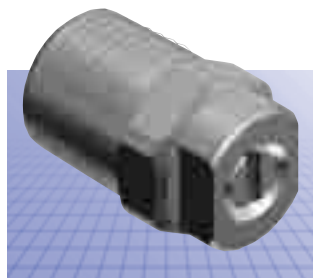

With this service, Lechler once again proves its competence and its high standards as a technology leader.

Take advantage of this offer to simplify your work. We would be happy to support you.



Lechler GmbH
Precision Nozzles · Nozzle Systems
P.O. Box 13 23
72544 Metzingen / Germany
Phone +49 (0 71 23) 962-0
Fax +49 (0 71 23) 962-333

E-mail: info@lechler.de
Internet: www.lechler.com



Belgium: Lechler S.A./N.V. · Avenue Mercatorlaan, 6 · 1300 Wavre · Phone: (10) 225022 · Fax: (10) 243901 · info@lechler.be
China: Lechler Intl. Trad. Co. Ltd. · Beijing · Rm. 418 Landmark Tower · No. 8 Dong San Huan Bei Lu · Phone: (86) 1084537968, Fax: (86) 1084537458 · info@lechler.com.cn
Finland: Lechler Oy · Jäspilänkatu 18 · 04360 Kerava · Phone: (358) 207856880 · Fax: (358) 207856881 · info@lechler.fi
France: Lechler France, S.A. · Bât. CAP2 · 66-72, Rue Marceau · 93558 Montreuil cedex · Phone: (1) 49882600 · Fax: (1) 49882609 · info@lechler.fr
Great Britain: Lechler Ltd. · 1 Fell Street, Newhall · Sheffield, S9 2TP · Phone: (0114) 2492020 · Fax: (0114) 2493600 · info@lechler.com
India: Lechler (India) Pvt. Ltd. · Plot B-2 · Main Road · Wagle Industrial Estate · Thane (W) · 400604 · Phone: (22) 40634444 · Fax: (22) 40634497 · lechler@lechlerindia.com
Sweden: Lechler AB · Spärrgatan 8 · SE-653 41 Karlstad · Phone: (46) 54137030 · Fax: (46) 54137031 · info@lechler.se
Spain: Lechler S.A. · Avda. Pirineos 7 · Oficina B7, Edificio Inbisa I · 28700 San Sebastián de los Reyes, Madrid · Phone: (34) 916586346 · Fax: (34) 916586347 · info@lechler.es
USA: Lechler Inc. · 445 Kautz Road · St. Charles, IL 60174 · Phone: (630) 3776611 · Fax: (630) 3776657 · info@lechlerUSA.com